



**Notes**

1

Flow Switch lead can be supplied with BNC connection, or as 2 wires which are hard wired into controller. For wiring instructions refer to your controllers instruction manual

2

Can be used on manifolds with vertical or horizontal orientation, however PVC block must be installed vertically, as flow switch relies on gravity to work

3

Internal float can be inverted to change from N/O or N/C (volt-free)



Refers to direction of water flow



**Convergent  
Water  
Controls**

THIS DRAWING IS COPYRIGHT AND THE PROPERTY OF CONVERGENT WATER CONTROLS PTY LTD ABN 58 082 819 734. IT IS SUBJECT TO THEIR RECALL AND MAY NOT BE REPRODUCED OR ITS CONTENTS DIVULGED WITHOUT WRITTEN AUTHORITY.

Ver

Date

08/10/09

ORIGINAL

Notes

By

Check

Filename  
\\FILENAME

Drawn By  
LF

Date

08/10/09

Checked By  
LN

Date

08/10/09

Scale  
N/A

DIMENSIONS ARE IN MM  
DO NOT SCALE

Title

Installation Diagram

Project / Part Number

AF04-3/4-NX, AF04-3/4-NX-BNC, AF04-M, AF04-M-BNC

Client

CONVERGENT WATER CONTROLS

Drawing No

DRAWING NO

Ver

1.0