


ARGAL

USE MANUAL

TMP

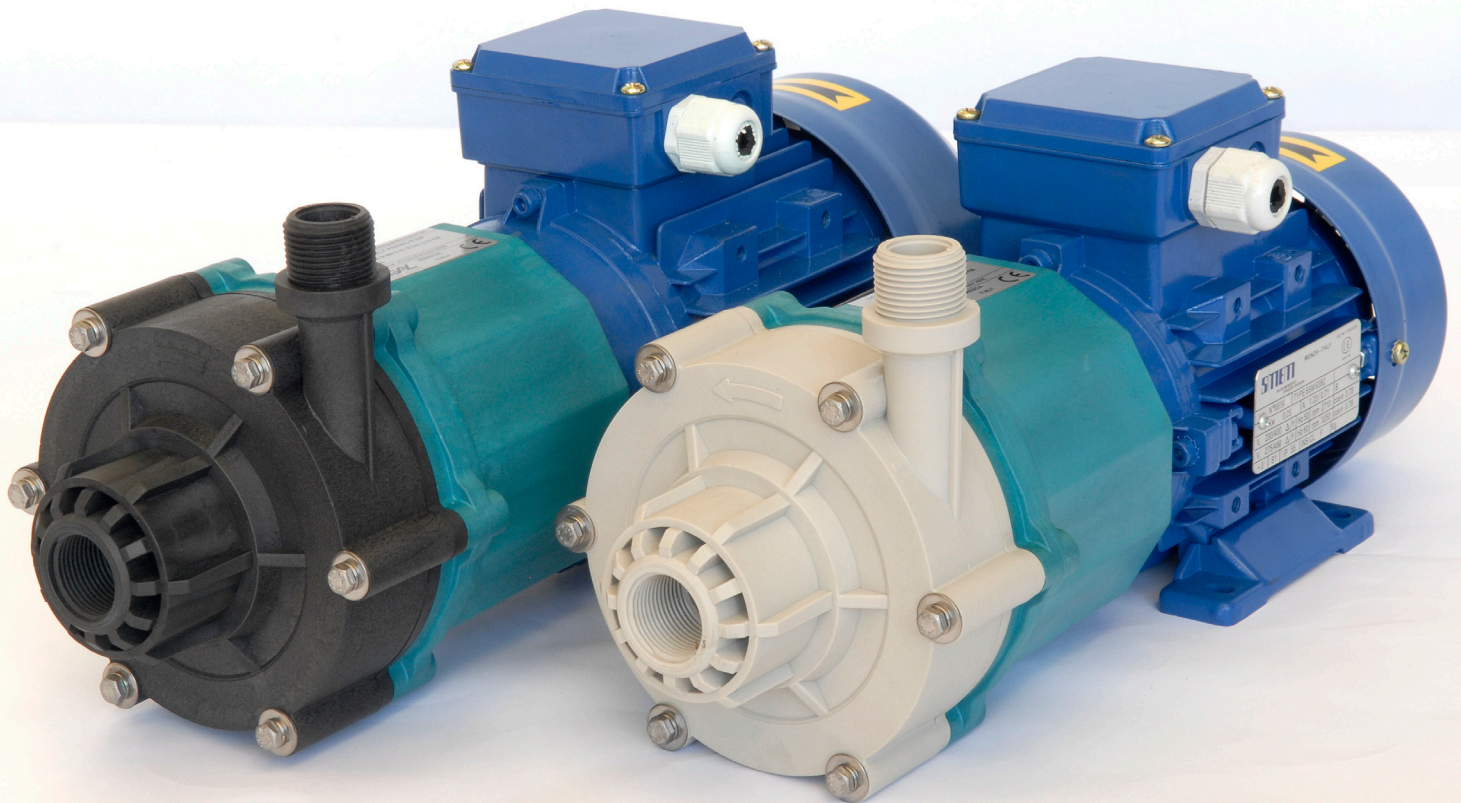

Part number _____







DEALER

for Maintenance
date of commissioning:

position / system reference:

service:

IDENTIFICATION CODE

Pump data						Motor data		
range	model	Execution (materials)		O-ring	guide	rpm	power	phase
TMP	<input type="checkbox"/> 04.04	<input type="checkbox"/> WR (polypropylene PP)		<input type="checkbox"/> V (FPM)	<input type="checkbox"/> R1 (C/Al ₂ O ₃)	<input type="checkbox"/> 1450	<input type="checkbox"/> 0.18 kW	<input type="checkbox"/> 1 (1 phase)
	<input type="checkbox"/> 04.08	<input type="checkbox"/> GF (ethylene-chloro trifluoro ethylene E-CTFE)		<input type="checkbox"/> E (EPDM)	<input type="checkbox"/> N1 (GFR-PTFE)	<input type="checkbox"/> 2900	<input type="checkbox"/> 0.25 kW	<input type="checkbox"/> 3 (3 phase)
	<input type="checkbox"/> 06.08	<input type="checkbox"/> GX (ethylene-chloro trifluoro ethylene E-CTFE) 		<input type="checkbox"/> K (FFKM)	<input type="checkbox"/> X1 (SiC/Al ₂ O ₃)	<input type="checkbox"/> 1740	<input type="checkbox"/> 0.37 kW	
	<input type="checkbox"/> 06.10	version	connections		<input type="checkbox"/> R2 (C/SiC) 	<input type="checkbox"/> 3480	<input type="checkbox"/> 0.55 kW	voltage/EEEx
	<input type="checkbox"/> 05.05	<input type="checkbox"/> N standard	<input type="checkbox"/> B (BSP threaded)		<input type="checkbox"/> N2 (GFR-PTFE/Al ₂ O ₃) 		<input type="checkbox"/> 0.75 kW	<input type="checkbox"/> 0 (without motor)
	<input type="checkbox"/> 05.11	<input type="checkbox"/> P powered	<input type="checkbox"/> N (NPT threaded)		<input type="checkbox"/> X2 (SiC/SiC)	standard	<input type="checkbox"/> 1.1 kW	<input type="checkbox"/> N (STD voltage)
	<input type="checkbox"/> 07.09	<input type="checkbox"/> S strong-pow.	<input type="checkbox"/> Z (ISO ANSI JIS flanged)			<input type="checkbox"/> E (IEC)		<input type="checkbox"/> S (special voltage)
	<input type="checkbox"/> 07.11		<input type="checkbox"/> P (hose connection)			<input type="checkbox"/> N (NEMA)		<input type="checkbox"/> E (EEX) 

 : ATEX choose

Year of manufacture _____	Part number _____
---------------------------	-------------------

Each pump is supplied with the serial and model abbreviation and the serial number on the rating plate, which is riveted onto the support side. Check these data upon receiving the goods. Any discrepancy between the order and the delivery must be communicated immediately.

In order to be able to trace data and information, the abbreviation, model and serial number of the pump must be quoted in all correspondence.

PART NUMBER

RANGE

MODEL

clockwise rotation looking at the motor-fan




CENTRIFUGAL PUMP No. _____ Ord. No. _____

TMP 04.04P GX V R2 I E E 3 kW 0.25


PERFORMANCE RPM _____ CAPACITY _____ m³/h

HEAD _____ m

year of manufacture XXXX Via Labirinto 159 BRESCIA ITALY

N01 Rev.1 05/2005
II 2 G T4

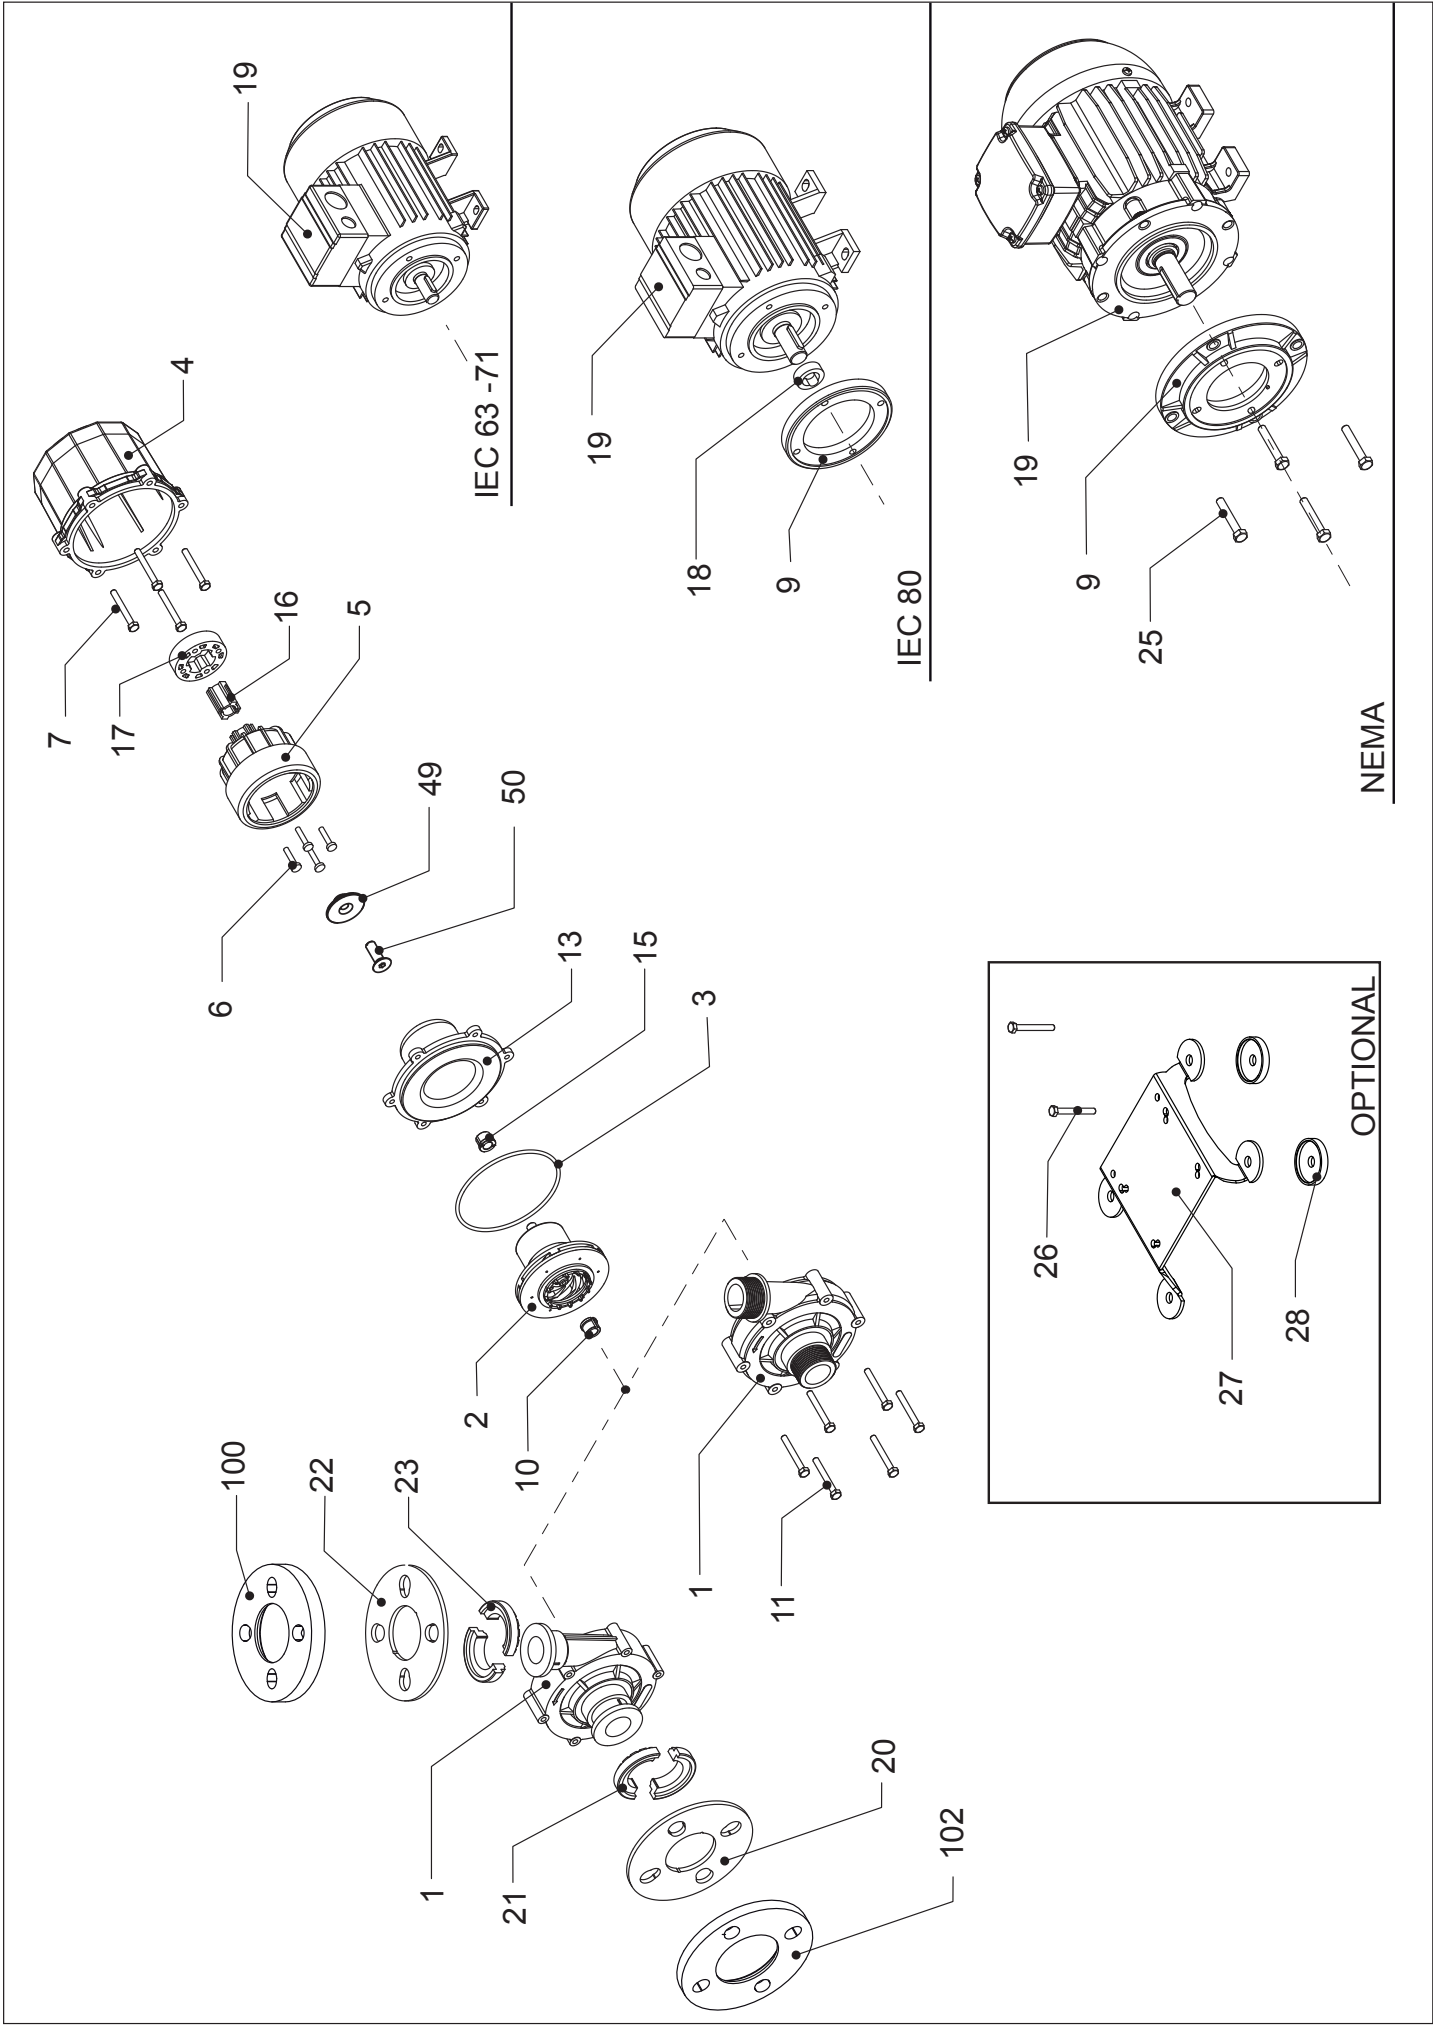

LEGEND

note	ref	pos.	Part name	Q.ty	Disassembling steps sequence										Spare stock for working years	
					1	2	3	4	5	6	7	8	9	10	2	5
	102	1	Volute casing	1		•										1
	233	2	Impeller	1				•							1	1
	412	3	O ring (or 4437)	1		•									1	2
	331	4	Strainer	1								•				
	858	5	Drive magnet assembly	1						•						
	910.3	6	Screws (magnet-assembling locking)	4					•							
	910.2	7	Connection strainer / electric motor	1										•		
	722	9	Motor lock flange	1										(•)		
	545.1	10	Front guide bushing	1			•								1	2
	910.1	11	Connection volute casing/strainer	1	•											
	162	13	Rear casing	1				•								1
	545.2	15	Back guide bushing	1				•							1	2
	523	16	Socket	2						•						
	518	17	Collar (drive magnet assembly)	1						•						
	504	18	Space ring	1										(•)		
	800	19	Electric motor	1										•		
	722.1	20	Inlet flange	1	•											
	727.1	21	Inlet flange-adaptor	2	•											
	722.2	22	Outlet flange	1	•											
	727.2	23	Outlet flange-adaptor	2	•											
	910.4	25	Connection motor lock flange / electric motor	1							•					
	910.5	26	Connection electric motor / base	1	•											
	890	27	Base	1		•										
	185	28	Socket plate	4	•											
	934	49	Safety washer	1			•									
	910.6	50	Connection safety washer / electric motor	1		•										
	722.3	100	Outlet flange FF	1	•											
	722.4	102	Inlet flange FF	1	•											

NOTES:

During the dismantling or assembling steps take the pump in vertical position (inlet side up).

(•) These parts are referred to an IEC 80 size motor pump.

GENERAL NOTES

"TMP" pumps are designed and built for the transfer of liquid chemical products having a specific weight, viscosity, temperature and stability of state appropriate for use with centrifugal pumps in a fixed installation, from a tank at a lower level to a tank or a pipe to a higher level. The characteristics of the liquid (pressure, temperature, chemical reactivity, specific weight, viscosity, vapour tension) and the ambient atmosphere must be compatible with the characteristics of the pump and are defined upon ordering.

The pump's performance (capacity, head, rpm) is defined upon ordering and specified on the identification plate.

"TMP" and pumps are centrifugal, horizontal, single stage, coupled to a non-synchronous electric motor via a magnetic coupling, with axial inlet and radial outlet for connection to the hydraulic system. They are foot-mounted for floor fixing.

"TMP" pumps are not self priming.

R execution "TMP" pumps can occasionally run dry.

The liquid to be pumped must be clean for the R execution, the X execution may contain solid (% , dimension and solid part hardness must be agreed during the offer).

Clockwise rotation seen from the motor side.

Make sure that the chemical and physical characteristics of the liquid have been carefully evaluated for pump suitability.

The specific weight that can be pumped at a temperature of 25°C (both of the ambient and of the liquid) depends upon the impeller diameter (shown on the identification plate) and of the type of construction.

standard construction N (stamped on the rating plate)	1,05	kg/dm ³
powered construction P (stamped on the rating plate)	1,35	kg/dm ³
strong-powered construction S (stamped on the rating plate)	1,80	kg/dm ³

The specific weight that can be pumped at 70°C is 10% less than that at 25°C.

The level of kinematic viscosity must not exceed 40 cSt so as not to significantly modify the pump's performance. Higher values up to a maximum of 100 cSt are possible provided that the pump is equipped with suitable impeller to be defined upon ordering.

The maximum continuous working temperature referred to water depends on the choice of materials (specified on the identification plate):

70 °C	execution WR
110 °C	execution GF

The ambient temperature interval is related to the choice of materials (specified on the identification plate):

0 - +40°C	execution WR
-20 - +40°C	execution GF

The maximum pressure the pump may be subjected to is 1.5 times the head value developed with the outlet closed.


The vapour pressure value of the liquid to be pumped must exceed (by at least 1m w.c) to the difference between the absolute total head (suction side pressure added to the positive suction head, or subtracted by the suction lift) and the pressure drops in the suction side piping (including the inlet NPSHr drops shown on the specific tables).

The pump does not include any non return valve nor any liquid flow control or motor stop device.

OPERATING PRINCIPLE

HYDRAULICALLY alike to all centrifugal pumps, it is equipped with a blade-type impeller rotating within a fixed housing. It has a tangential outlet (or radial with an internal deflector) and, by creating a depression in the center, it allows the liquid to flow from the central suction side. Then, flowing through the impeller's blades, the fluid acquires energy and is conveyed towards the outlet.

MECHANICALLY different from the traditional centrifugal pumps in the impeller motion drive thanks to the magnetic field created between the primary outer magnet and the inner magnet (not visible because housed inside the impeller hub). The magnetic field crosses the plastic parts and the liquid, and firmly couples the two magnet assemblies. When the motor causes the outer magnet to rotate together with its housing, the inner magnet assembly is dragged at the same speed. As a result the impeller, which is integral to it, is maintained in rotation.

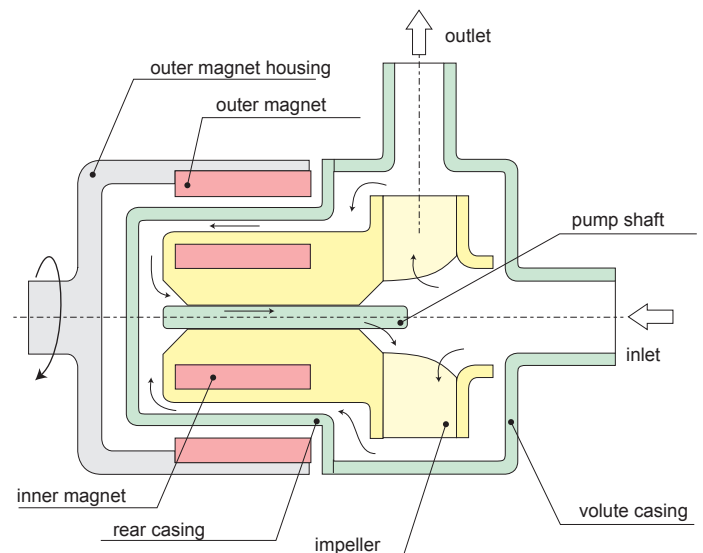

The SHAFT, totally within the housing, is not involved in the transmission of rotary motion; its only function is to act as a centering guide and support for the impeller. To this end the components are designed so that a spontaneous cooling circuit (due to a simple effect of pressure) is established to cool the surfaces subject to friction. Periodic inspections prevent the build-up of sediments between the shafts and the guide bushes significantly lengthening their working life.

MOTOR

Electrical connections

The electrical connection to the motor terminal determines the direction of rotation of the motor and can be verified by looking at the cooling fan at the rear of the motor (for the Argal pump this has to rotate clockwise looking at the front end).

With single phase motors the direction of rotation may be reversed by changing the position of the connection plates(fig.1)

With three-phase motors the direction of rotation may be changed by swapping any two of the three conductors independently of the type of connection to the windings(fig.2)

The windings of three-phase motors (e.g. with (a) 230-400 V; (b) 400-600 V) require a delta-connection for lower voltage (230 volts for a ; 400 volts for b)(fig.3)

They require a star-connection for higher voltage (400 volts for a; 690 volts for b)(fig.4)

Star/Delta starting is used when the motor power is above 7.5 kW (10 HP) only in case of frequent starts and short running times, but always when the motor power is above 15kW (20 HP). All this is also to safeguard the structure of the pump.

Protection level


The initials IP are followed by two numbers :

The first number indicates the level of protection against penetration of solid objects and in particular :

- 4 for solids whose dimension is greater than 1mm
- 5 for dust (eventual internal deposits will not harm operation)
- 6 for dust (no penetration)

The second number indicates the protection against the penetration of liquids. In particular:

- 4 for water sprays from all directions
- 5 for jets of water from all directions
- 6 for tidal and sea waves.

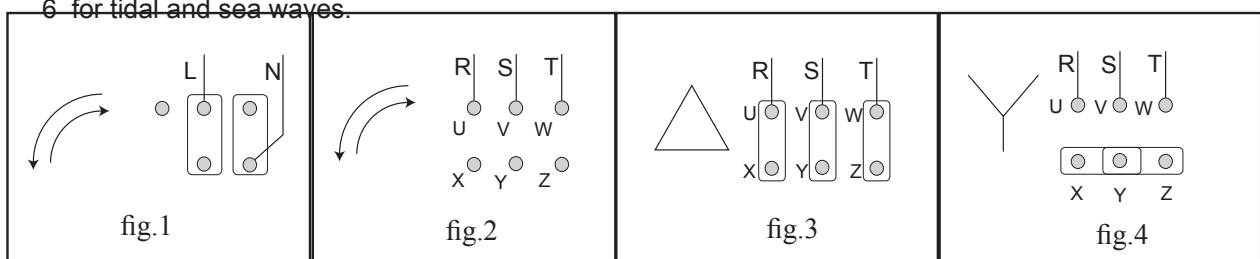

PRESSURE SWITCH TO PREVENT DRY RUNNING

The principal cause of pump malfunctions is dry-running (being it caused by improper use or cavitation). It is therefore advisable to install a simple device that will stop the pump motor when the pressure falls below a preset level. This is justified by the fact that such a condition is normally caused to an inadequate flooding of the impeller due to various causes: absence of liquid, suction valves closed at start-up, cavitation, clogged channels, dirty filters, etc.....

The pressure switch (pressure gauge with electrical contacts) must be fitted on the discharge side of the pump at approximately 20cm from the outlet. This device needs furthermore:

- 1)) A fluid separator to transmit pressure to the instrument via a secondary fluid separated from the main one by a chemically resistant diaphragm.
- 2) Remote-control switch to energize the motor (controlled by a pushbutton or auxiliary relay) having the normally closed contact of the pressure switch in series with the latch circuit of said remote-control switch.

In order to obviate any pulsations of the pressure switch, it is necessary to set its setpoint to a pressure value equal to 65% of the working pressure. It is obvious that this device cannot be used to control working pressure.

On start-up the pressure switch contact must be by-passed for a sufficient time to allow pressure to build up in the system. In case of automatic start-up it is necessary to short circuit the latch with a timer for the pressure build-up time. The system is not suitable for full capacity applications in which case it is advisable to install some control devices for the motor power absorption.

All of the above must be adapted to the local safety rules and in particular when the classification of the environment requires explosion-proof equipment.

INSTRUCTIONS ON INSTALLATION AND USE

TRANSPORT

- cover the hydraulic connections
- when lifting the unit do not exert force on the plastic fittings
- lay the pump on its base or fixing plate during transport
- if the road is particularly rough, protect the pump by means of adequate shock absorbing supports
- bumps and shocks may damage important working parts vital for safety and functionality of the machine


STORAGE INSTRUCTIONS

- When is necessari to store the pump bfore installation don't remove it from the original packaged. The packaged pump must be stored lifted from ground level, the ambient must be close, clean and dry.
- If at the receipt of the pump package seems damaged is necessary to free the pump in order to check its integrity and to store a new package
- The place where the pump is stored must be closed with an ambient temperature not lower than -5°C and not higher than 40°C , the air humidity rate not higher than 80%, the package pump mustn't received shock, vibrations and loads rising above.
- If the storing period is higher than 6 months, bfore installation check the condition of the grease in the support, eventually provide to restore it.

INSTALLATION

- clean the plant before connecting the pump
- make sure that no foreign bodies are left in the pump. Remove safety caps on the hydraulic connections.
- follow the instructions indicated in the following diagram:
 - 1) Suction head varies according to flow in order to prevent windage (min. 0.5 m, max. 15% of pump head)
 - 2) YES: expansion joint (indispensable with long pipes or hot liquids) and/or anti-vibration facility during discharge and suction; anchored near to pump
 - 3) YES: attachment for gauge or safety pressure switch
 - 4) YES: check value (especially for long vertical or horizontal pipes; compulsory with parallel pumps).
 - 5) YES: adjusting gate valve on outlet
 - 6) speed of delivered fluid: 3.,5 m/s max. .
 - 7) NO: elbow joints (and other parts) on the pump (discharge and suction lines)
 - 8) YES: drainage channel around base
 - 9) Fix the pump by the fixing holes provided: the supports must be level
 - 10) YES: pipe discharge (completely sealed), discharge value shut during normal operations
 - 11) YES: pipe fixing parts
 - 12) YES: discharge collection well (does not leak)

- 13) Fluid speed suction: 2.5 m/s
- 14) NO: air pockets: the circuit must be short and straight
- 15) With positive head: tilt of piping towards pump
- 16) With negative suction lift: tilt of piping towards suction tank
- 17) YES: check valve (with negative suction lift)
- 18) YES: gate valve (may also be near pump in the case of long piping)
- 19) YES: strainer (3-5 mm mesh)
- 20) YES: strainer (3-5 mm mesh)
- 21) Suction head, 3 m max.
- 22) Immersion depth: 0.3 m min.
- 23) YES: overcoming obstacles at lower depths.

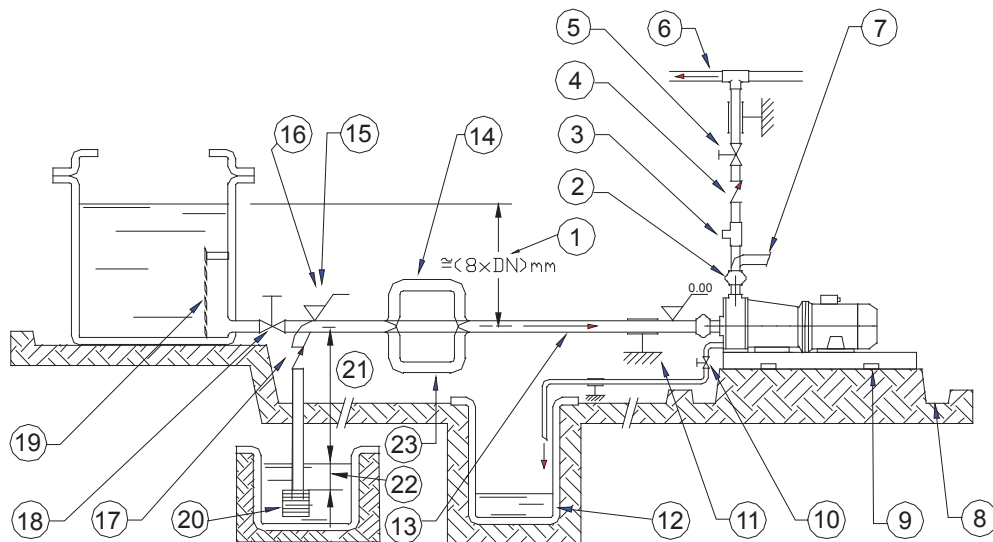

- anchor the pump to an adequate base plate having a mass at least 5 times that of the pump
- do not use anti-vibration mounts to fix the pump
- anti-vibration joints are recommended on the pipe connections
- manually verify that all rotating parts are free to turn without abnormal friction by turning the motor cooling fan
- make sure that the power supply is compatible with the data shown on the pump motor identification plate
- connect the motor to the power supply via a magnetic/thermal control switch
- ensure that star-delta starting is implemented for motors whose power is more than 15kW
- install emergency stop devices to switch off the pump in case of low liquid level (floating, magnetic, electronic, pressure-sensitive)
- ambient temperature as a function of the physical-chemical characteristics of the liquid to be pumped and in any case not greater or lower than the interval indicated in the GENERAL HINTS
- other environmental conditions in accordance with the IP protection of the motor
- install a drainage pit to collect any liquid overflow from the base drainage channel due to normal maintenance work
- leave enough free space around the pump for a person to move
- leave free space above the pump for lifting operations
- highlight the presence of aggressive liquids with coloured tags following the local safety regulations
- do not install the pump (made in thermoplastic material) in close proximity to heating apparatus
- do not install the pump in areas subject to solid or liquid matter falling
- do not install the pump in an explosive atmosphere unless the motor and its coupling have been adequately pre-arranged
- do not install the pump in close proximity to workplaces or crowded areas
- install extra protection guards for the pump or persons as the need arises
- install a spare equivalent pump in parallel

START-UP

- verify that the instructions outlined in the INSTALLATION have been followed
- verify the correct direction of rotation (clockwise from the motor side) supplying the motor with short impulses
- ensure that the NPSH available is greater than that required by the pump (in particular for hot liquids, liquids with high vapour pressure, very long suction pipes or negative suction lift)
- close the discharge valve; completely cover the suction pipe and the pump.
- close the outlet valve. Start up the motor two or three times with short supplies of current in order to expel the air from the pump and the lubrication circuit between the guide shaft and bush.
- start the pump with the suction valve completely open and the outlet valve semi-closed.
- slowly adjust the flow by adjusting the outlet valve (never adjust the suction valve) and making sure that the motor absorption does not exceed the nominal power rating shown on the plate
- do not operate at the extremes of the operating curve: maximum head (discharge valve shut too tight) or maximum flow (total absence of loss and lift in discharge circuit).
- set the operating point for which the pump has been requested
- check that there are no unusual vibrations or noises due to inadequate fixing or cavitation
- avoid excessively short and/or frequent start-ups by adjusting the consent appliances

Motor power;	kW	0,75÷5,5	7,5÷30	37÷110	132÷200	250÷315
Max. no. starts/hour;	2-4 poles	20 - 40	10 - 20	6 - 12	2 - 4	1 - 2

- check that temperature, pressure and characteristics of liquid match order specifications
- Warning!!! At the start-up be sure that all the internal hydraulic parts are not in CCW rotation (the cooling fan of the motor must stand or CW rotate), to prevent decoupling among magnetic driven parts of the pump; if the CCW rotation is due to the feed-back of the liquid in the discharge side, add a no-return valve in the plant.

USE

- switch automatic control on
- do not activate valves whilst the pump is in operation
- risks of dangerous water hammer effects in case of sudden or improper valve actuation (only trained personnel should operate valves)
- completely empty and wash the pump before using a different liquid
- isolate or empty the pump if the crystallization temperature of the liquid is the same or lower than the ambient temperature
- stop the pump if the liquid temperature exceeds the maximum allowed temperature indicated in the general notes; if the increase is of approximately 20%, check internal parts
- close the valves in case of leaks
- wash with water only if compatible from the chemical point of view. As alternative use an appropriate solvent that will not generate dangerous exothermal reactions
- contact the liquid supplier for information on the appropriate fire precautions
- empty the pump in case of long periods of inactivity (in particular with liquids which would easily crystallize)

SHUTDOWN

-
- disconnect the motor
- before starting maintenance, turn off the suction and discharge valves

MAINTENANCE

- all these maintenance operations must be performed under the supervision of qualified personnel
- make periodic inspections (2 to 6 months depending on the type of liquid and the operating conditions) on the rotating parts of the pump; clean or replace as necessary
- make periodic inspections (3 to 5 months depending on the type of liquid and the operating conditions) on the functionality of the motor control system; efficiency must be guaranteed
- make periodic inspections (2 to 30 days depending on the type of liquid and the operating conditions) of the in-line and foot filters as well as of the bottom valve
- the presence of liquid below the pump could be a clue to pump problems
- excessive current consumption could be an indication of impeller problems
- unusual vibrations could be due to unbalanced impeller (due to damage or presence of foreign material obstructing its blades)
- reduced pump performance could be due to an obstruction of the impeller or damages to the motor
- motor damages could be due to abnormal friction within the pump
- damaged parts must be replaced with new original parts


- the replacement of damaged parts must be carried out in a clean dry area

SMONTAGGIO

Tools required: size 8 socket spanner, cross cogging screw driver, punch $f < 4\text{mm}$.

Bolts have right-hand thread

- all these maintenance operations must be performed under supervision of qualified personnel
- cut off the power supply from the motor and disconnect the electrical wiring; pull the wires out from the terminal box and isolate their extremities accordingly
- close the suction and discharge valves and open the drain valve
- use gloves, safety glasses and acid-proof overalls when disconnecting and washing the pump
- disconnect the piping and leave enough time for the residual liquid to exit the pump body and atmospheric air to fill the empty volume
- wash the pump before carrying out any maintenance work
- do not scatter the liquid in the environment
- before attempting to dismantle the pump ensure that its motor is disconnected and that it may not be started accidentally
- before the inspection, check that you have spare O-rings ready to hand for re-installing at the end of operations
- warning: operations near the magnet attract the tools. Proceed with caution to avoid damage.
- during the dismantling take the pump in vertical position (inlet side up).
- -now open the pump following the sequence indicated in the respective table of the LEGEND
- the separation between the volute casing – impeller – rear casing is carried out by simply unscrewing the six M5 screws, take care during the operation to not damage the Al_2O_3 or SiC components.
- after removing the rear casing we reach the drive magnet assembly where we can see 4 cross cogging screws, after unscrewing the 4 screws (pos. E in pic.) we have to insert the punch in the hole (pos. D in pic.) to extract the collar (pos. C in pic.) from the drive magnet assembly tang.
- After removing the collar we can unthread drive magnet assembly, sockets and collar (pos. A, pos.B, pos. C in pic.) from the motor shaft.

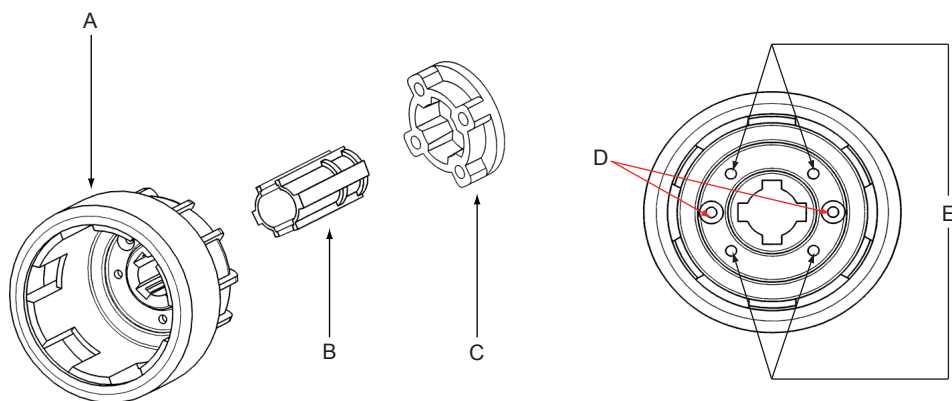

INSPECTION

Check:

- the pump shaft for cracks and excessive wear
- guide bushing for excessive wear (@ 5 %)
- counterthrust bushing for cracks or excessive wear
- pump shaft clutch
- that the guide bushing cooling circuit is not blocked
- the impeller, volute and rear chamber for abrasion and corrosion
- that the pressure balancing holes on the impeller blades are not blocked
- for lumps and clusters created by the pumped liquid (especially at the bottom the rear chamber)
- for infiltration of liquid into the chamber containing the inner magnets
- abrasions on the outside surface of the reinforcement chamber due to scratching of the outer magnets
- Replace broken, cracked or deformed parts.
- Reopen all the blocked pipes and eliminate any chemical agglomeration.
- Clean all the surfaces before re-assembly, especially the O-ring seats (risk of drip leaks).

ASSEMBLY


Tools required: size 8 socket spanner, cross cogging screw driver.

Bolts have right-hand thread.

Bolt torque setting (the following values are for bolts to screw with two spanners only):

M6
Nm 4

- all these maintenance operations must be performed under supervision of qualified personnel
- before the inspection, check that you have spare o-rings ready to hand for re-installing at the end of operations
- now open the pump following the sequence indicated in the respective table of the legend
- insert possible sockets (pos.g in pic.) into the drive magnet assembly tang (pos.f in pic.)
- the relative position between the drive magnet assembly and the sockets is shown by the a e b plans in the picture.
- insert the collar (pos. h in pic.) on the drive magnet assembly tang, the collar side where are visible brass inserts have to be located to the pump side and as far as possible from the e plan insert the assembly group (drive magnet assembly, sockets, collar) on the motor shaft (during the group insertion verify that the relative position between the sockets and the drive magnet assembly remain the same, the sockets (pos.g) and drive magnet assembly (pos.f) must be located as shown in the picture
- screw the 4 cross cogging screws sharing the operation in more than one phase, repeat the sequence E1, E3, E2, E4 (torque max at 2 Nm)
- don't insert the impeller freely into the drive magnet assembly
- during the impeller insertion take care not to damage the Al₂O₃- SiC-C HD components

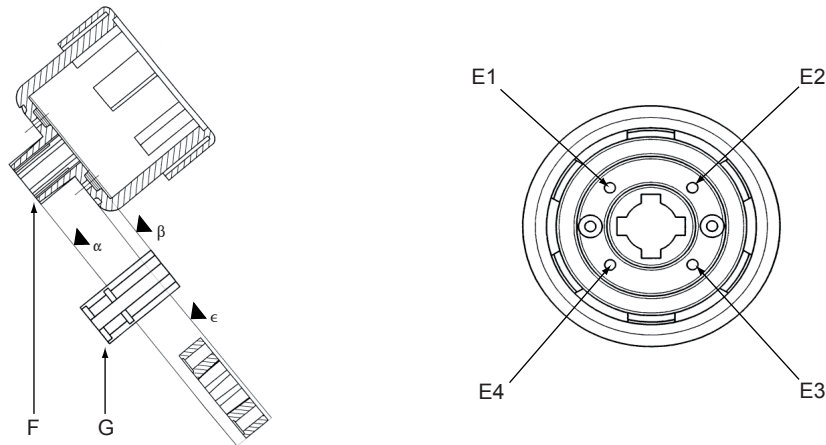

SAFETY RISKS



WARNING! MAGNETIC FIELDS. Magnetic pumps contain some of the most powerful magnets in existence. The magnets are positioned on the back of the impeller and the outer magnet housing. The magnetic fields may adversely affect persons fitted with electronic devices (e.g. pacemakers and defibrillators): such persons must not be allowed to handle magnetic pumps and magnetic pump components.



WARNING! MAGNETIC FORCE. Exercise extreme caution and follow instructions carefully during pump assembly/dismantling. Magnetic force attract (cause insertion of) internal and magnetic units, and are therefore a potential source of injury to fingers and hands.



WARNING! CHEMICAL HAZARD. The pumps are designed to pump different types of liquid and chemical. Follow the specific instructions to decontaminate during inspection or maintenance. §



WARNING! Safety risks for personnel mainly arise from improper use or accidental damages. These risks may be of an electrical nature as far as the non-synchronous motor is concerned and may cause injury to hands if working on an open pump. Risks may also arise due to the nature of the liquids pumped. It is therefore of utmost importance to closely follow all the instructions contained in this manual so as to eliminate the causes that may lead to pump failure and the consequent leakage of liquid dangerous for both personnel and the environment.

Risks may also arise from improper maintenance or dismantling practices.

In any case five general rules are important:

- A - all services must be carried out by specialised personnel or supervised by qualified personnel depending on the type of maintenance required
- B - install protection guards against eventual liquid sprays (when the pump is not installed in remote areas) due to an accidental pipe rupture. Arrange for safety basins to collect possible leakage
- C - when working on the pump always wear acid-proof protective clothing
- D - arrange for proper conditions for suction and discharge valve closing during disassembly
- E - make sure that the motor is completely disconnected during disassembly.

Proper design and building of the plants, with well positioned and well marked piping fitted with shut-off valves, adequate passages and work areas for maintenance and inspections are extremely important (since the pressure developed by the pump could give some kind of damage to the plant in case this one should be faulty made or wear and tear-damaged).

It must be stressed that the major cause of pump failures leading to a consequent need to intervene is due to the pump running dry in manually operated plants. This is generally due to:

- the suction valve being open at start-up or
- the suction tank being emptied without stopping

INSTALLATION AND START-UP PERSONNEL

Interventions allowed only to specialised personnel who may eventually delegate to others some operations depending on specific evaluations (technical capability required: specialisation in industrial plumbing or electric systems as needed).

MAINTENANCE AND OPERATIONAL PERSONNEL

Interventions allowed to general operators (after training on the correct use of the plant):

- pump starting and stopping
- opening and closing of valves with the pump at rest
- emptying and washing of the pump body via special valves and piping
- cleaning of filtering elements

Interventions allowed to qualified personnel (technical capacities required: general knowledge of the mechanical, electrical and chemical features of the plant being fed by the pump and of the pump itself):

- verification of environmental conditions
- verification of the condition of the liquid being pumped
- inspections of the control/stop devices of the pump
- inspections of the rotating parts of the pump
- trouble shooting

PERSONNEL RESPONSIBLE FOR REPAIRS

Interventions allowed to general operators under the supervision of qualified personnel:

- stopping of the pump
- closing of the valve
- emptying of pump body
- disconnection of piping from fittings
- removal of anchoring bolts
- washing with water or suitable solvent as needed
- transport (after removal of electrical connections by qualified personnel)

Interventions by qualified personnel (technical capacities required: general knowledge of machining operations, awareness of possible damage to parts due to abrasion or shocks during handling, know-how of required bolt and screw tightening required on different materials such as plastics and metals, use of precision measuring instruments):

- opening and closing of the pump body
- removal and replacement of rotating parts

WASTE DISPOSAL

- Materials: separate plastic from metal parts. Dispose of by authorized companies.

IMPROPER USE

The pump must not be used for purposes other than the transfer of liquids.

The pump cannot be used to generate isostatic or counter pressures.

The pump cannot be used to mix liquids generating an exothermal reaction

The pump must be installed horizontally on a firm base.

The pump must be installed on a suitable hydraulic plant with inlet and outlet connections to proper suction and discharge pipes.

The plant must be able to shut off the liquid flow independently from the pump.

Handling of aggressive liquids requires specific technical knowledge

OPERATING FAULTS AND POSSIBLE CAUSES

Pump does not deliver:

- 1.rotates in wrong direction
- 2.suction pipe is excessively long and tortuous
- 3.insufficient geodetic pump head or excessive suction geodetic lift
- 4.air infiltration into the suction pipe or branches
- 5.pump or suction pipe not completely covered by liquid
- 6.impeller channels blocked by impurities
- 7.check valve on discharge pipe jammed
- 8.geodetic system height is greater than maximum potential pump head
- 9.impeller jammed by considerable layer of crystals or by melting of materials for dry rotation.
- 10.bottom valve blocked by mud or other debris
- 11.bottom valve insufficiently immersed
- 12.bottom valve faulty, thereby causing suction valve to empty when pump stops
- 13.magnets release a much greater specific weight and flow rate of liquid than planned
- 14.the magnets release due start-up made while impeller is CCW moving (feed-back of the liquid in the discharge side)

Pump discharge rate or pressure insufficient:

see. 01, 02, 03, 04, 05, 06, 10, 11, 12, 13

- 15.system's resisting head is greater than expected
- 16.suction pipe, closing valve and other items have an insufficient nominal diameter
- 17.small geometric pump suction head
- 18.damaged or worn impeller
- 19.liquid viscosity greater than expected
- 20.excessive quantities of air or gas in liquid
- 21.elbow joints, check valves or other items on the outlet port
- 22.liquid (especially if hot) with tendency to change into gaseous state

Pump absorbs too much power :

see. 19

- 23.pump operates at greater capacity than expected
- 24.specific weight of liquid is greater than expected
- 25.impurities inside pump create abnormal wear
- 26.electric motor supply voltage is not rated voltage

Pump vibrates and is noisy

see 25


- 27.operates at full capacity (no head)
- 28.pump or pipes inadequately fixed
- 29.eccentric impeller operation because of worn bushes

Pump's internal parts wear out too quickly :

see. 25

- 30.liquid excessively abrasive
- 31.recurring cavitation problems (see. 02, 15, 19, 17)
- 32.high tendency of liquid to crystallise or polymerise when pump is not operating.
- 33.pump made of materials that are unsuitable for pumped liquid
- 34.operation with capacity too reduced

DIMENSION

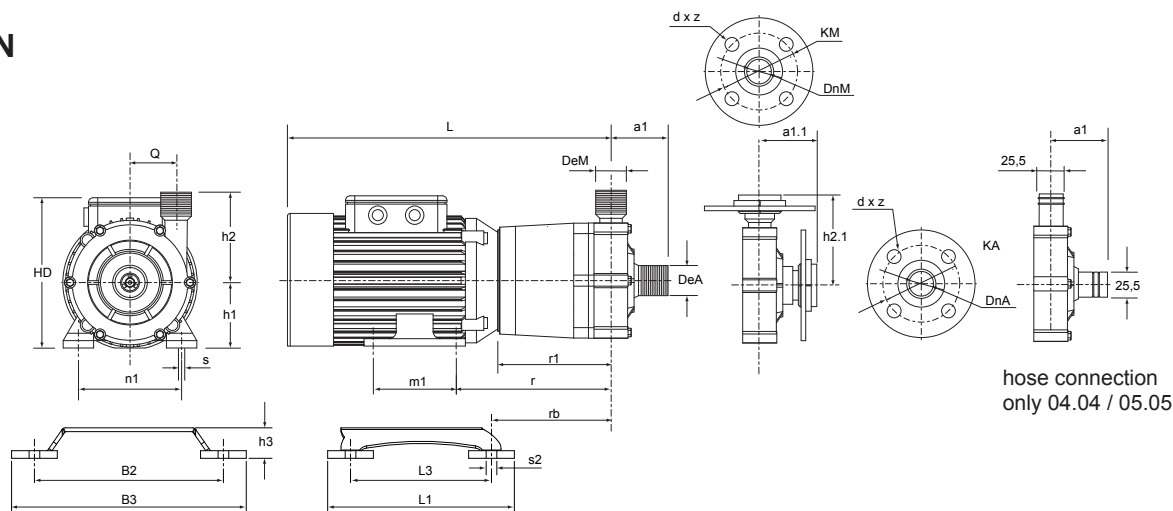

TMP	Model	04.04			04.08			06.08			06.10			05.05			05.11			07.09			07.11		
		50 Hz												60 Hz											
DeM	BSP-NPT	3/4" m			1" m			1 1/4" m			1 1/4" m			3/4" m			1" m			1 1/4" m			1 1/4" m		
DeA	BSP-NPT	3/4" f			1" m			1 1/4" m			1 1/4" m			3/4" f			1" m			1 1/4" m			1 1/4" m		
DnM		20			25			32			32			20			25			32			32		
DnA		20			25			32			32			20			25			32			32		
KM	ISO - ANSI	/			85 - 79			100 - 89			100 - 89			/			85 - 79			100 - 89			100 - 89		
KA	ISO - ANSI	/			85 - 79			100 - 89			100 - 89			/			85 - 79			100 - 89			100 - 89		
d x z	ISO - ANSI	/			14 x 4 - 16 x 4			14 x 4 - 16 x 4			14 x 4 - 16 x 4			/			14 x 4 - 16 x 4			14 x 4 - 16 x 4			14 x 4 - 16 x 4		
a1	mm	62			62			62			62			62			62			62			62		
a1.1	mm	70			70			70			70			70			70			70			70		
Q	mm	47			49			53			53			47			49			53			53		
h2	mm	100			100			100			100			100			100			100			100		
h2.1	mm	108			108			108			108			108			108			108			108		
r1	mm	123			123			123			123			123			123			123			123		
	Version	N	P	S	N	P	S	N	P	S	N	P	S	N	P	S	N	P	S	N	P	S	N	P	S
Power	kW	0.18	0.25	0.37	0.25	0.37	0.55	0.37	0.55	0.75	0.55	0.75	1.1	0.25	0.37	0.55	0.37	0.55	0.75	0.55	0.75	1.1	0.75	1.1	/
	Hp	0.25	0.34	0.5	0.34	0.5	0.75	0.5	0.75	1	0.75	1	1.5	0.34	0.5	0.75	0.5	0.75	1	0.75	1	1.5	1	1.5	/
Frame	IEC	63A	63B	71A	63B	71A	71B	71A	71B	80A	71B	80A	80B	63B	71A	71B	71A	71B	80A	71B	80A	80B	80A	80B	/
	NEMA	/	/	/	/	/	/	/	/	/	/	/	/	A56	A56	B56	A56	B56	B56	B56	D56	B56	D56	D56	/
Voltage standard	V (IEC)	400 ± 5% 50 Hz												460 ± 5% 60 Hz											
	V (NEMA)	/												460 ± 5% 60 Hz											
Phase	n°	3 phase / 1 phase												3 phase / 1 phase											
Protection	IP	55												55											
IEC	L(*)	mm	330	330	348	330	348	348	348	388	348	388	388	330	348	348	348	348	388	348	388	388	388	388	/
	h1	mm	63	63	71	63	71	71	71	80	71	80	80	63	71	71	71	71	80	71	80	80	80	80	/
	HD(*)	mm	160	160	177	160	177	177	177	190	177	190	190	160	177	177	177	177	190	177	190	190	190	190	/
	m1	mm	80	80	90	80	90	90	90	100	90	100	100	80	90	90	90	90	100	90	100	100	100	100	/
	n1	mm	100	100	112	100	112	112	112	125	112	125	125	100	112	112	112	112	125	112	125	125	125	125	/
	r1	mm	123	123	123	123	123	123	123	133	123	133	133	123	123	123	123	123	133	123	133	133	133	133	/
	r	mm	163	163	168	163	168	168	168	183	168	183	183	163	168	168	168	168	183	168	183	183	183	183	/
	rb	mm	135	135	135	135	135	135	135	145	135	145	145	135	135	135	135	135	145	135	145	145	145	145	/
	s	mm	7	7	7	7	7	7	7	10	7	10	10	7	7	7	7	7	10	7	10	10	10	10	/
NEMA	L(*)	inch	/	/	/	/	/	/	/	/	/	/	/	13.938	13.938	14.725	13.938	14.725	14.725	14.725	15.906	14.725	15.906	15.906	/
	h1	inch	/	/	/	/	/	/	/	/	/	/	/	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	/	
	HD(*)	inch	/	/	/	/	/	/	/	/	/	/	/	/	/	/	/	/	/	/	/	/	/	/	
	m1	inch	/	/	/	/	/	/	/	/	/	/	/	3	3	3	3	3	3	3	3	3	3	/	
	n1	inch	/	/	/	/	/	/	/	/	/	/	/	4.875	4.875	4.875	4.875	4.875	4.875	4.875	4.875	4.875	4.875	/	
	r1	inch	/	/	/	/	/	/	/	/	/	/	/	5.685	5.685	5.685	5.685	5.685	5.685	5.685	5.685	5.685	5.685	/	
	r	inch	/	/	/	/	/	/	/	/	/	/	/	8.246	8.246	8.246	8.246	8.246	8.246	8.246	8.246	8.246	8.246	/	
	rb	inch	/	/	/	/	/	/	/	/	/	/	/	6.18	6.18	6.18	6.18	6.18	6.18	6.18	6.18	6.18	6.18	/	
	s	inch	/	/	/	/	/	/	/	/	/	/	/	0.342	0.342	0.342	0.342	0.342	0.342	0.342	0.342	0.342	0.342	/	
B2	mm	/	/	248	/	248	248	248	248	248	248	248	/	248	248	248	248	248	248	248	248	248	248	/	
B3	mm	/	/	308	/	308	308	308	308	308	308	308	/	308	308	308	308	308	308	308	308	308	308	/	
L1	mm	/	/	245	/	245	245	245	245	245	245	245	/	245	245	245	245	245	245	245	245	245	245	/	
L3	mm	/	/	185	/	185	185	185	185	185	185	185	/	185	185	185	185	185	185	185	185	185	185	/	
h3	mm	/	/	40	/	40	40	40	40	40	40	40	/	40	40	40	40	40	40	40	40	40	40	/	

(*) can change for motors of different brands

		Model	04.04			04.08			06.08			06.10			05.05			05.11			07.09			07.11		
			50 Hz												60 Hz											
		Version	N	P	S	N	P	S	N	P	S	N	P	S	N	P	S	N	P	S	N	P	S	N	P	S
pump weight	no motor	Kg	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	2	1.9	2	2	1.9	1.9	1.9	1.9	1.9	2	1.9	2	2	2	2	/
	+ motor IEC 3 phase (*)	Kg	5.6	6.2	7.3	6.2	7.3	8.2	7.3	8.2	9.8	8.2	9.8	11.4	6.2	7.3	8.2	7.3	8.2	9.8	8.2	9.7	11.4	9.8	11.4	/
	+ motor IEC 1 phase (*)	Kg	5.6	6.3	7.3	6.3	7.3	8.2	7.3	8.2	11	8.2	11	12	6.3	7.3	8.2	7.3	8.2	11	8.2	11	12	11	12	/
	+ motor NEMA (*)	Kg	/	/	/	/	/	/	/	/	/	/	/	/	11.5	12	12.5	12	12.5	13.5	12.5	13.5	15	13.5	15	/
noise		dB	58			62			65			65			58			62			65			65		
Loads (ports section)		Kg	Max. single strength value F(x;y;z) = 2												Max. single strength value F(x;y;z) = 2											
max head		m	8.5			10.5			10.8			11.2			12			15			15.5			16		
max capacity		m³/h	6			8			11			13			6			9			12			14		
max NPSH req.		m	3.2			3.3			3.2			5			4.4			4.5			4.4			6		

(*) can change for motor of different brand

MANUFACTURER DATA



Production head and legal office:
Via Labirinto, 159 I - 25125 BRESCIA
Tel: 030 3507011 Fax: 030 3507077

Administration: Tel: 030 3507019
Export manager: Tel: 030 3507022
Customer service: Tel: 030 3507025
Web: www.argal.it
E-mail: sales@argal.it

REV. 4 - 05/16

CONTRACTUAL DATA	
medium	

conc.	temperature
% -----	°C -----
capacity	head
m³/h -----	m -----

W.O.	

<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>

The INSTRUCTION MANUAL must be delivered to the pump-user, who takes diligent note of it, fills in data for Maintenance Department (page 1), keeps the file for subsequent reference. Possible modifications do not imply updating of the existing manuals

© Copyright 2008 - ARGAL srl
Draw and text total or partial duplication is prohibited