

FEATURES

- Level Lance.
- Max 3 level probes (specify distance between lancer when order).
- Contact N.O. / N.C.
- Adjustable height
- Threaded fitting (G1 1/2 ") for screwing on CNT PD container or fitting (G1 1/4") with counter-fixing ring nut.
- PVC body.
- Working Temperature 0 to 40°C.

REED CONTACT FEATURES

- Maximum Power 10W
- Ru contact made
- Contact Answer 1.0ms
- Release contact time 0.3ms
- Total Length 20mm



SPECS

L	0	4	0	0	1	0	B	0	0	0	N	0	0	0	N	R	O	0	0																														
														<table border="1"> <thead> <tr><th colspan="2">CABLE m</th></tr> </thead> <tbody> <tr><td>00</td><td>3,5 m</td></tr> <tr><td>01</td><td>5 m</td></tr> <tr><td>02</td><td>10 m</td></tr> </tbody> </table>						CABLE m		00	3,5 m	01	5 m	02	10 m																						
CABLE m																																																	
00	3,5 m																																																
01	5 m																																																
02	10 m																																																
<table border="1"> <thead> <tr><th colspan="2">LENGTH cm</th></tr> </thead> <tbody> <tr><td>040</td><td>40</td></tr> <tr><td>063</td><td>63</td></tr> <tr><td>075</td><td>75</td></tr> <tr><td>108</td><td>108</td></tr> <tr><td>122</td><td>122</td></tr> </tbody> </table>							LENGTH cm		040	40	063	63	075	75	108	108	122	122								<table border="1"> <thead> <tr><th colspan="2">FLOATER</th></tr> </thead> <tbody> <tr><td>O</td><td>N.O.</td></tr> <tr><td>C</td><td>N.C.</td></tr> <tr><td>C</td><td>misto</td></tr> </tbody> </table>						FLOATER		O	N.O.	C	N.C.	C	misto										
LENGTH cm																																																	
040	40																																																
063	63																																																
075	75																																																
108	108																																																
122	122																																																
FLOATER																																																	
O	N.O.																																																
C	N.C.																																																
C	misto																																																
<table border="1"> <thead> <tr><th colspan="2">1° Level cm</th></tr> </thead> <tbody> <tr><td>000</td><td>0 cm</td></tr> </tbody> </table>							1° Level cm		000	0 cm	<table border="1"> <thead> <tr><th colspan="2">2° Level cm</th></tr> </thead> <tbody> <tr><td>000</td><td>NO LEVEL</td></tr> </tbody> </table>							2° Level cm		000	NO LEVEL	<table border="1"> <thead> <tr><th colspan="2">3° Level cm</th></tr> </thead> <tbody> <tr><td>000</td><td>NO LEVEL</td></tr> </tbody> </table>						3° Level cm		000	NO LEVEL	<table border="1"> <thead> <tr><th colspan="2">TYPE</th></tr> </thead> <tbody> <tr><td>S</td><td>Dosing Station</td></tr> <tr><td>R</td><td>Spare Part</td></tr> <tr><td>F</td><td>No Standard</td></tr> </tbody> </table>						TYPE		S	Dosing Station	R	Spare Part	F	No Standard				
1° Level cm																																																	
000	0 cm																																																
2° Level cm																																																	
000	NO LEVEL																																																
3° Level cm																																																	
000	NO LEVEL																																																
TYPE																																																	
S	Dosing Station																																																
R	Spare Part																																																
F	No Standard																																																
<table border="1"> <thead> <tr><th colspan="2">CONNECTOR 1° LIV.</th></tr> </thead> <tbody> <tr><td>B</td><td>BNC</td></tr> <tr><td>F</td><td>2 WIRES</td></tr> <tr><td>N</td><td>NO</td></tr> <tr><td>P</td><td>FOR PRIUS PUMP</td></tr> </tbody> </table>							CONNECTOR 1° LIV.		B	BNC	F	2 WIRES	N	NO	P	FOR PRIUS PUMP	<table border="1"> <thead> <tr><th colspan="2">CONNECTOR 2° LIV.</th></tr> </thead> <tbody> <tr><td>B</td><td>BNC</td></tr> <tr><td>F</td><td>2 WIRES</td></tr> <tr><td>N</td><td>NO</td></tr> <tr><td>P</td><td>FOR PRIUS PUMP</td></tr> </tbody> </table>							CONNECTOR 2° LIV.		B	BNC	F	2 WIRES	N	NO	P	FOR PRIUS PUMP	<table border="1"> <thead> <tr><th colspan="2">CONNECTOR 3° LIV.</th></tr> </thead> <tbody> <tr><td>B</td><td>BNC</td></tr> <tr><td>F</td><td>2 WIRES</td></tr> <tr><td>N</td><td>NO</td></tr> <tr><td>P</td><td>PFOR PRIUS PUMP</td></tr> </tbody> </table>						CONNECTOR 3° LIV.		B	BNC	F	2 WIRES	N	NO	P	PFOR PRIUS PUMP
CONNECTOR 1° LIV.																																																	
B	BNC																																																
F	2 WIRES																																																
N	NO																																																
P	FOR PRIUS PUMP																																																
CONNECTOR 2° LIV.																																																	
B	BNC																																																
F	2 WIRES																																																
N	NO																																																
P	FOR PRIUS PUMP																																																
CONNECTOR 3° LIV.																																																	
B	BNC																																																
F	2 WIRES																																																
N	NO																																																
P	PFOR PRIUS PUMP																																																

DIMENSIONS

A (cm)	TANK SIZE
40 cm	50 lt (mod. CNT PD 50)
63 cm	120 lt (mod. CNT PD 120)
75 cm	250 lt (mod. CNT PD 250)
108 cm	500 lt (mod. CNT PD 500)
122 cm	1000 lt (mod. CNT PD 1000)

LEVELS

N.	LEVELS
1	First Level (standard)
2	Second Level (option)*
3	Third Level (option)*

* Specify floater distance

