

SPARE PARTS LIST




**Convergent
Water
Controls**

EMEC FCO 05 05 EP
EMEC FCO 10 2.2 EP
EMEC FPVM 10 2.2 EP
EMEC FPVM 10 2.2 FP

EMEC FCO 05 05 FP
EMEC FCO 10 2.2 FP

EMEC FCO 07 05 FP
EMEC FCO 12 1.5 FP

v1.0

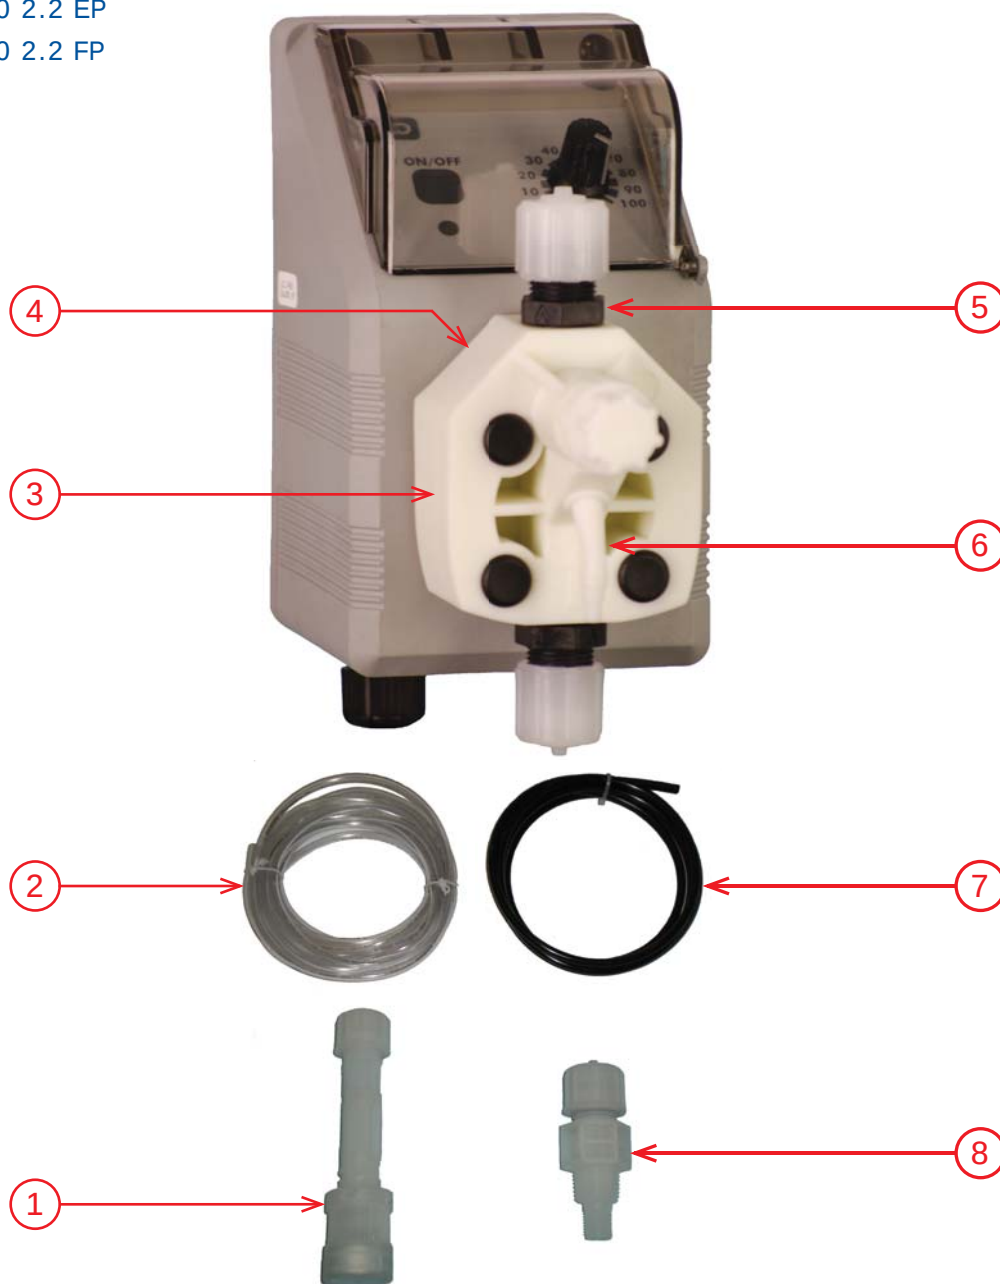

Item No	Part No - EP Pump	Part No - FP Pump	Description
1	EMEC 074.0186.1	EMEC 074.0166.1	Foot Valve
2	EMEC 059.0003.0	EMEC 059.0003.0	Suction Tubing per Metre
3	EMEC 020.0496.1	EMEC 020.0482.1	Pump head - includes Suction, Discharge, Bleed valves and O-Rings
4	EMEC 026.0007.0	EMEC 026.0009.0	Head O-Ring
4	EMEC 018.0001.0	EMEC 018.0001.0	Diaphragm
5	EMEC 025.0436.1	EMEC 025.0459.1	Suction / Discharge Valve
6	EMEC 025.0454.1	EMEC 025.0601.1	Manual Bleed Valve
7	SP-TB-0604-XXX	SP-TB-0604-XXX	Discharge Tubing per Metre
8	EMEC 073.0254.1	EMEC 073.0237.1	Injection Valve
	EMEC 110.0532.1	EMEC 110.0514.1	Maintenance kit - Includes Suction/Discharge valves, valve for foot filter, Injection valve, O-ring for pump head and all replacement bolts and washers