

SPARE PARTS LIST



**Convergent
Water
Controls**

v1.0

EMEC KCO 05 10 EP + FP
EMEC KCO 10 05 EP + FP
EMEC KCO 18 02 EP + FP
EMEC KPVM 05 10 EP + FP
EMEC KPVM 10 05 EP + FP

EMEC KMF 05 10 EP + FP
EMEC KMF 10 05 EP + FP
EMEC KMF 18 02 EP + FP
EMEC KPVM 18 02 EP + FP



Item No	Part No - EP Pump	Part No - FP Pump	Description
1	EMEC 074.0571.1	EMEC 074.0570.1	Foot Valve without float of low level switch
2	EMEC 059.0003.0	EMEC 059.0003.0	Suction Tubing per Metre
3	EMEC 025.0906.1	EMEC 025.0811.1	Internal components for Suction Valve
4	EMEC 020.1125.1	EMEC 020.1126.1	Pump head - includes Suction, Discharge, Bleed valves and O-Rings
5	EMEC 025.0895.1	EMEC 020.0894.1	Internal components for Manual Bleed Valve
6	EMEC 025.0907.1	EMEC 025.0812.1	Internal components for Discharge Valve
7	EMEC 026.0007.0	EMEC 026.0009.0	Head O-Ring
7	EMEC 018.0033.0	EMEC 018.0033.0	Diaphragm
8	SP-TB-0604B-XXX	SP-TB-0604B-XXX	Discharge Tubing per Metre
9	EMEC 073.1065.1	EMEC 073.1062.1	Injection Valve
	EMEC 110.0661.1	EMEC 110.0660.1	Maintenance kit - Includes complete pump head, valve for foot filter, Injection valve, O-ring for pump head and all replacement bolts and washers