



This manual contains safety information that if ignored can endanger life or result in serious injury. They are indicated by this icon.



Keep the instrument protected from sun and water. Avoid water splashes.



## OPERATING INSTRUCTIONS FOR "LDRHCL" INSTRUMENT SERIES

with data logger software quick guide



DOWNLOAD ERMES COMMUNICATION SOFTWARE  
[www.ermes-server.com](http://www.ermes-server.com)

Read Carefully !



ENGLISH Version

R2-06-16



NORME CE  
EC RULES(STANDARD EC)  
NORMAS DE LA CE

Direttiva Bassa Tensione  
Low Voltage Directive  
Directiva de baja tensión

} 2014/35/UE

Direttiva EMC Compatibilità Elettromagnetica  
EMC electromagnetic compatibility directive  
EMC directiva de compatibilidad electromagnética

} 2014/30/UE



## GENERAL SAFETY GUIDELINES

### Danger!

In emergencies the instrument should be switched off immediately! Disconnect the power cable from the power supply!

When installing always observe local regulations!

Manufacturer is not liable for any unauthorized use or misuse of this product that may cause injury, damage to persons and / or materials.

### Caution!

Instrument must be accessible at all times for both operating and servicing. Access must not be obstructed in any way!

Feeder should be interlocked with a no-flow protection device to automatically shut-off the pumps when there is no flow!

Pumps and accessories must be serviced and repaired by qualified and authorized personnel only!

Always discharge the liquid end before servicing the instrument!

Empty and rinse the liquid end before work on a pump which has been used with hazardous or unknown chemicals!

Always read chemical safety datasheet!

Always wear protective clothing when handling hazardous or unknown chemicals!

Instrument must be operated / serviced by trained technicians only!

All connection operations must be performed while the instrument is not connected to main supply!

Missed activation for Min/Max alarm and Maximum Dosing Alarm may cause hazardous overdosing!

# 1. Introduction

LDRHCL is a microprocessor based digital regulator for ORP and Chlorine with temperature reading. On/Off, impulsive proportional, proportional PWM or fixed PWM are main working modes. Pulses per minute can be set for outputs. Working ranges are: ORP : from 0 to 14ORP - Chlorine: from 0 to 10 mg/l. All information are provided through a large LCD display. Using a revolutionary wheel control the instrument can be easily programmed. LDRHCL is housed in a IP65 plastic box.

## INPUTS:

- Stand-by
- Flow
- ORP (+) level
- ORP (-) level
- Chlorine level
- ORP probe
- Chlorine probe
- Temperature probe



## OUTPUTS:

- 2 pulses proportional output (REDOX)
- 1 pulse proportional output (Cl)
- 1 on/off proportional output (REDOX)
- 1 on/off proportional (Cl)
- 1 main alarm output


# 2. The wheel

Located in the upper right side of LDRHCL there is a wheel that must be used to control the instrument. Wheel can be rotated in both directions to scroll over the menus and / or pressed to confirm highlighted selection / value.

NOTE: Once changes are made press "OK" to save and exit from submenu. Press "ESC" to exit without saving.

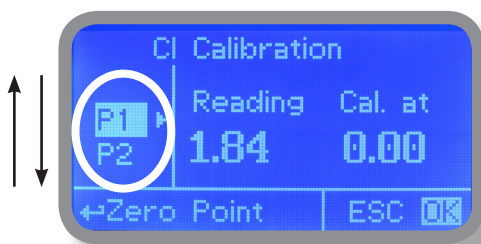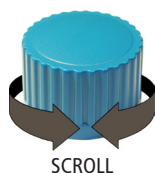


Rotate wheel to scroll through menus or options

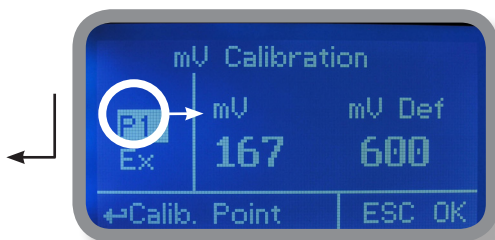

Press wheel to select highlighted option

### 3. Mainboard Connections

Unplug instrument from main power supply then perform connections by following the above picture.

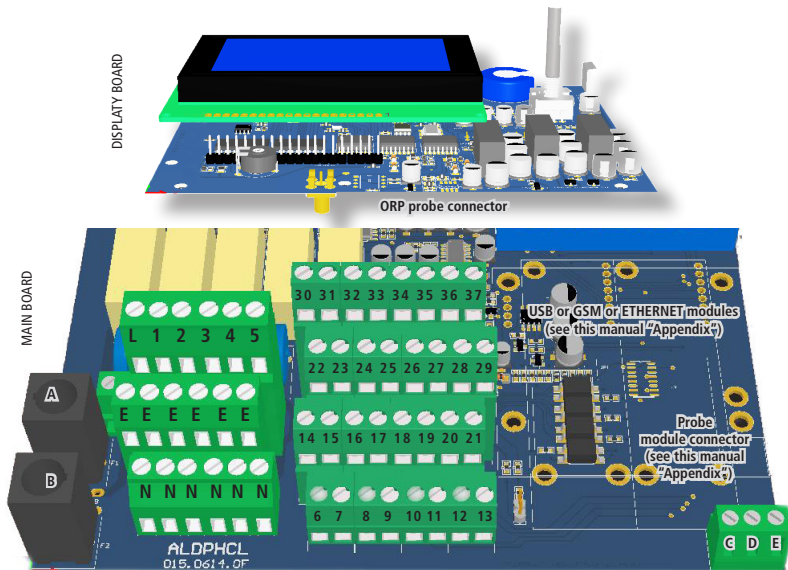

A: Main Fuse (6A T)

B: instrument Fuse (3.15A T)

L(Live) - E (Earth) - N (Neutral): 85÷264VAC - 50/60 Hz

1(Live) - E(Earth) - N(Neutral): 85÷264VAC - 5A 50/60 Hz Relay 1 Output "CH1 ORP RELAY". To use with ON/OFF or PWM device

2(Live) - E(Earth) - N(Neutral): 85÷264VAC - 5A 50/60 Hz Relay 2 Output "CH2 CL2 RELAY". To use with ON/OFF or PWM device

3(Live) - E(Earth) - N(Neutral) : 85÷264VAC Alarm output

31(-) - 30(+): Current output mA1 for ORP

31(-) - 32(+): Current output mA2 for Cl

34(-) - 33(+): Current output mA3

34(-) - 35(+): Current output mA4 for temperature

Max resistive load: 500 Ohm

22(-) - 23(+): Output "CH1 ORP PULSE 2" (with photocoupler). For dosing pumps "IS" or "MF" series

24(-) - 25(+): Output "CH2 CL2 PULSE" (with photocoupler). For dosing pumps "IS" or "MF" series

26(-) - 27(+): Output "CH1 ORP PULSE 1" (with photocoupler). For dosing pumps "IS" or "MF" series

21(GND) - 28(+RS485) - 29(-RS485): RS485

14(+ Brown) - 15(Black) - 16/17(- Blue ; GND): Proximity sensor mod. "SEPR"

11(-) - 10(+): Standby contact

11(-) - 12(+): Chlorine Level contact

19(-) - 18(+): ORP Level 1 contact

19(-) - 20(+): ORP Level 2 contact

6(Green) - 7(Brown) - 8(White) - 9(Yellow): PT100 temperature probe (remove jumper / resistor prior to install probe)

Warning: Connections must be performed by qualified and trained personnel only.

# 4. Main Screen

When into normal operating mode, LDRHCL shows the following main screen:



## Main screen zones:

- (1) UNITS

“ORP” is the measuring unit for ORP probe.  
“mg/l” is the measuring unit for Chlorine probe.
- (2) VALUES

These numbers are values read by the probes.
- (3) OUTPUTS STATUS

These fields are related to current outputs status and instrument activity.  
For more information rotate the wheel when into main screen. (see next page)
- WARNING MESSAGE  
NOTIFICATION AREA


During critical situations a warning / alarm message may appear. To in-depth explanation **completely rotate clockwise** the wheel to review main instrument parameters and current outputs status.

WHEN AN ALARM OCCURS (flow, level, dosage, faulty probe, setpoint) and “ALARM” appears on main screen all outputs are disabled.


**Note:** the word “PUMP” as shown into this manual refers to a “dosing device” connected to the instrument!

## 5. Quick status check


From main screen **completely rotate clockwise** the wheel to review main instrument parameters and current outputs status.

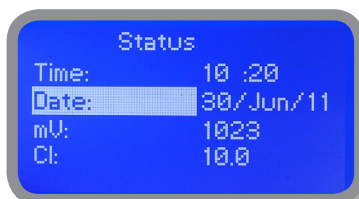


Local Time  
Local Date  
ORP probe reading  
Chlorine probe reading

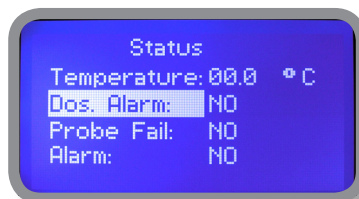


Temperature probe reading  
Dosing alarm condition  
Probe failure status  
Alarm contact status

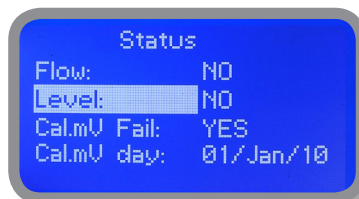

Flow contact status (SEPR)  
Tank Level 1 status  
Last ORP calibration result  
Last ORP calibration date

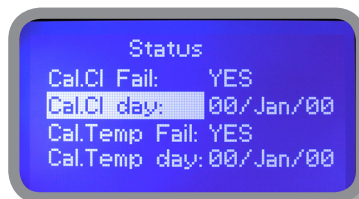

Last Chlorine calibration result  
Last Chlorine calibration date  
Last Temp. calibration result  
Last Temp. calibration date

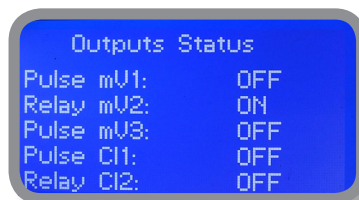




Outputs Status  
See mainboard (page 4) for related connections.

## 6. Password



To grant access into “Main Menu” press the wheel from main screen and enter the passcode.

If this is the first time here then the passcode is 0000 (factory preset). Press wheel 5 times to enter into “Main Menu”.

Otherwise press the wheel 1 time and enter the passcode. Numbers can be selected rotating the wheel.

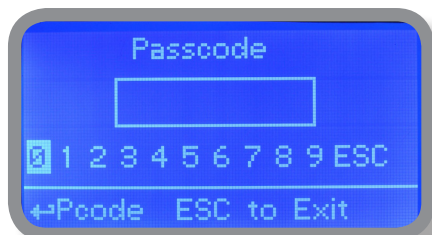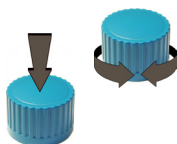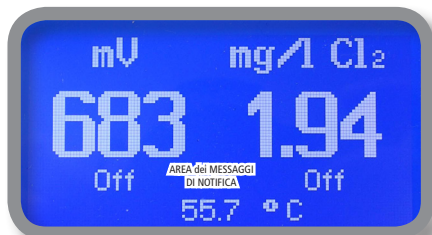

To set a new passcode choose “PARAMETERS” from “Main Menu”, move on “New Pcode”, click on wheel and enter a four numbers code. Click on “EXIT” and choose “YES” to save request. The new passcode is now ready.

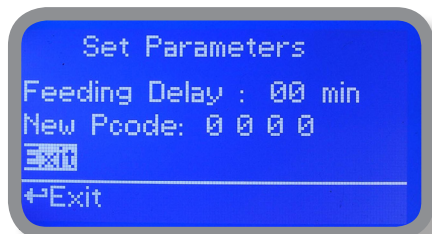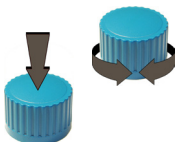

### Lost passcode ?

Please don't forget the passcode (if changed). In the unfortunate event, please call your local distributor for unlocking procedure. There is no way for you to recover lost passcode.

# 7. "Main Menu" list

To grant access into "Main Menu" enter the passcode (as described in previous chapter). Once into "Main Menu" rotate the wheel to scroll through all the options available.

	<div><div>Main Menu</div><div>Set-Point</div><div>Calibration</div><div>Parameters</div><div>↔Set Calibration</div></div>	<div>Setpoint (see page 9)</div> <div>Calibration (see page 18)</div> <div>Parameters (see page 22)</div>
	<div><div>Main Menu</div><div>Output Manager</div><div>Instrument Reset</div><div>Dosing Alarm</div><div>↔Instrument Reset</div></div>	<div>Output manager (see page 23)</div> <div>Instrument reset (see page 24)</div> <div>Dosing alarm (see page 25)</div>
	<div><div>Main Menu</div><div>International</div><div>Probe Failure</div><div>Flow</div><div>↔Set Probe Failure</div></div>	<div>International (see page 26)</div> <div>Probe Failure (see page 27)</div> <div>Flow (see page 28)</div>
	<div><div>Main Menu</div><div>Service</div><div>Log Setup</div><div>RS485 Setup</div><div>↔Set Log Setup</div></div>	<div>Service (see page 28)</div> <div>Log Setup (see page 28)</div> <div>RS485 Setup (see page 28)</div>
	<div><div>Main Menu</div><div>Out Of Range Alarm</div><div>Sms Menu</div><div>mA Outputs</div><div>↔Set Sms Menu</div></div>	<div>Out of Range Alarm (see page 29)</div> <div>SMS menu (see page 35)</div> <div>mA Outputs*** (see page 29)</div>
	<div><div>Main Menu</div><div>Top Ip</div><div>Gprs</div><div>E-Mail</div><div>↔Set Gprs</div></div>	<div>TCP IP (see page 38)</div> <div>GPRS (see page 39)</div> <div>Email (see page 39)</div>
	<div><div>Main Menu</div><div>Log View</div><div>Exit</div><div>↔Exit</div></div>	<div>Log View (see page 40)</div> <div>Exit (to main screen)</div>

\*This menu is available on ECL1 and ECL6 probe modules only


\*\*\*This menu is available on current outputs instrument version only



## 8. "Set-Point", ORP working modes

For "CH1 ORP PULSE 1" and "CH1 ORP PULSE 2" outputs, setpoint can be set between **On/Off mode**, **Proportional (%) mode** or **disabled (OFF)**.



For "CH1 ORP RELAY" output, setpoint can be set using **On/Off mode**, **Proportional PWM mode**, **Fixed PWM mode** or **disabled (OFF)**.

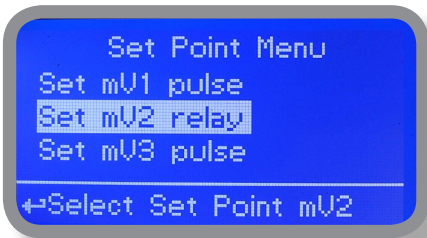

### 8.1 "Set-Point", ORP (on/off)

All ORP outputs can be set to operate into this mode.

This mode enables ORP pump to operate between two On/Off values. Move wheel over "Working Mode" to select it.

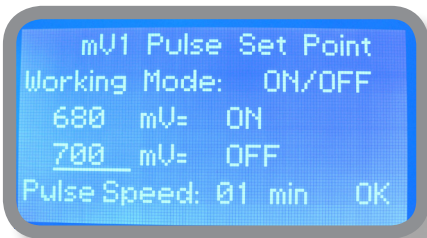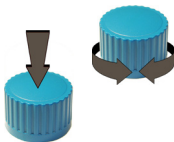


#### ON/OFF mode

Set ORP value at 680mV ON and 700mV OFF. The difference between the two ORP values is called HYSTERESIS.

Instrument will enable the ORP pump when reading value will decrease at 680mV


At 680mV the ORP pump will be enabled until reading value will increase at 700mV.

Pulse Speed: pulses per minute setting.

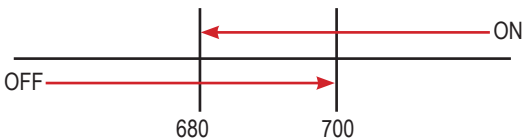


## 8.2 "Set-Point", ORP (proportional)

"MV1" and "MV3" outputs can be set into this mode.

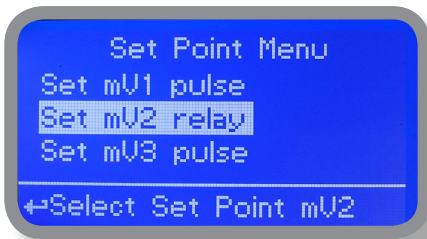


Proportional mode set the instrument to operate using a calculated percentage between two set values that enable or disable the ORP pump. To use this mode move cursor on "Working Mode". Press the wheel and select it.

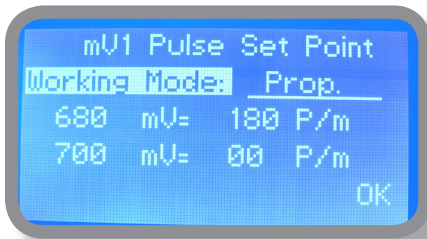

**PROPORTIONAL MODE between 700(0 P/m) and 680 (180 P/m). [P/m: pulses per minute]**

This mode operates ORP pump for a value lower than 680mV with maximum dosing capacity (180strokes) and it will stop ORP pump for a reading value higher than 700 mV.

A 690 mV reading value will operate ORP pump with a 90 strokes capacity calculated on strokes settings (see page 22). Pump will operate with 90 strokes dosing capacity. To end procedure move cursor on "OK" and press wheel. Choose "SAVE" to save setup or "NO" to discard changes.

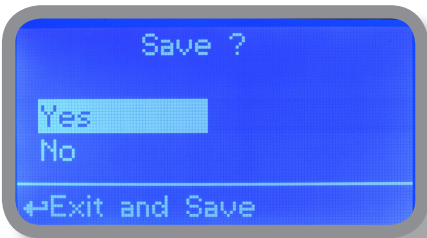

## 8.3 "PWM" Proportional, ORP

**"MV2" output can be set into this mode.**

Pulse-width modulation (PWM) of a signal or power source involves the modulation of its duty cycle, to either convey information over a communications channel or control the amount of power sent to a load.

This mode works over a settable (0 to 100 seconds) time to switch on or off selected output.

Time resolution is 5 seconds, 5 steps. During this time if reading value will move towards a set value (on or off) the PWM will operate the output on timed basis. Reaching the set value the PWM will permanently leave on or off the output.

Parameters to set are:

**Unit Value + %:** (time activity towards set value. 0% means 0 seconds. 100% means 100 seconds.)


**mV range:** two pH value between PWM operates.

E.g: set first value at 700 = 00% and second value at 680=60%.

For reading values  $\geq 700$  output will always be OFF.

For reading values  $\leq 680$  output will be ON for 60 seconds and OFF for 40 seconds.

If reading value is 690 mV the output will be ON with a 30% of total set time. (ON for 30 seconds, OFF for 70 seconds).

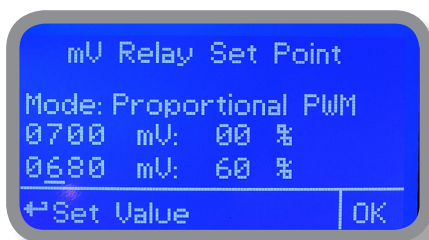

# 8.4 "PWM" (proportional), ORP

"MV2 RELAY" output can be set into this mode.

Pulse-width modulation (PWM) of a signal or power source involves the modulation of its duty cycle, to either convey information over a communications channel or control the amount of power sent to a load.



This mode works over a settable (0 to 100 seconds) time to switch on or off selected output.  
Time resolution is 5 seconds, 5 steps. During this time if reading value will move towards a set value (on or off) the PWM will operate the output on timed basis. Reaching the set value the PWM will permanently leave on or off the output.

Parameters to set are:

**Unit Value + %:** (time activity towards set value. 0% means 0 seconds. 100% means 100 seconds.)

**mV range:** two pH value between PWM operates.

E.g: set first value at 700 = 00% and second value at 680=60%.  
For reading values  $\geq 700$  output will always be OFF.  
For reading values  $\leq 680$  output will be ON for 60 seconds and OFF for 40 seconds.  
If reading value is 690 mV the output will be ON with a 30% of total set time. (ON for 30 seconds, OFF for 70 seconds).

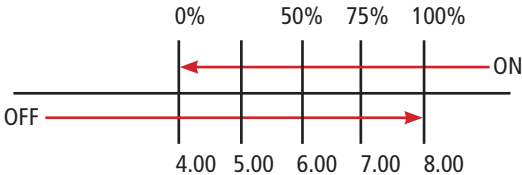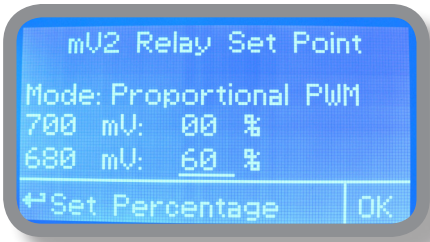

# 8.5 "PWM" (fixed), ORP

**"MV2 RELAY" output can be set into this mode.**

Pulse-width modulation (PWM) of a signal or power source involves the modulation of its duty cycle, to either convey information over a communications channel or control the amount of power sent to a load.

This mode works over a settable (0 to 100 seconds) time to switch on or off selected output.  
Time resolution is 5 seconds, 5 steps. During this time if reading value will move towards a set value (on or off) the PWM will operate the output on timered basis. Reaching the set value the PWM will permanently leave on or off the output.

Parameters to set are:

**mV range:** two pH value between PWM operates.

**Ton:** "ON" time if output is active.

**Toff:** "OFF" time if output is active.


E.g.: set first mV value: (OFF) at 700 and second mV value: (ON) at 680.

Set "WORK-PAUSE" activity with Toff 0 seconds and Ton 80 seconds.

For reading values  $\geq 700$  output output will always be OFF.

For reading values  $\leq 680$  output will be ON within "WORK-PAUSE" mode based on Ton and Toff settings.

**Within 700mV and 680mV values output activity will operate on HYSTERESIS basis. Once 700mV reading value will be reached the output will always be OFF up to 680mV reading value.**

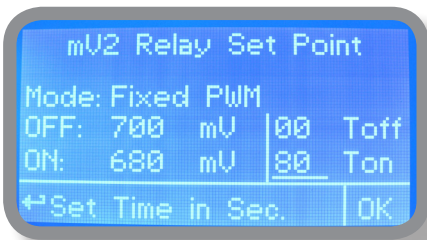


## 8.6 "Set-Point", CI working modes

For "CH2 CL2 PULSE", output, setpoint can be set using **On/Off mode**, **Proportional (%) mode** or **disabled (OFF)**.  
For "CH2 CL2 RELAY" output, setpoint can be set using **On/Off mode**, **Proportional PWM mode**, **Fixed PWM mode** or **disabled (OFF)**.



## 8.7 "Set-Point", CI (on/off)


This mode is valid for all CI related outputs.  
**On/Off mode** set the instrument to operate using two set values that enable or disable the Chlorine pump. To use this mode move cursor on "Working Mode". Press the wheel and select it.

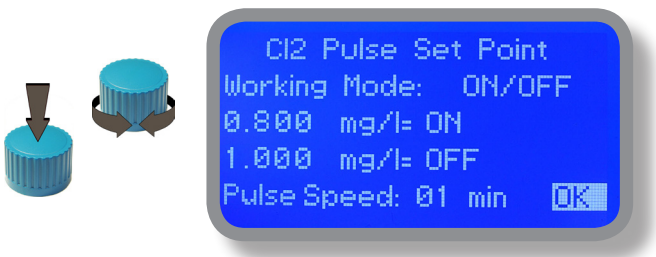

### ON/OFF mode


Set CI value at 0.80 mg/l ON and 1.00 mg/l OFF. The difference between the two CI values is called **HYSTERESIS**. Instrument will enable the Chlorine pump when reading value will decrease at 0.80mg/l. At 0.80mg/l the Chlorine pump will be enabled until reading value will increase at 1.00mg/l.

Pulse speed: to let pump operate at pulses per minutes add one or more minute (1pulse every xx minutes).

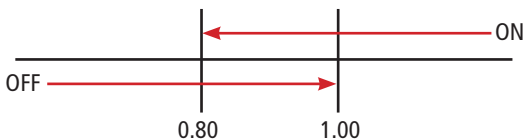


## 8.8 "Set-Point", CI (proportional)

This mode is valid for "CH2 CL2 PULSE". output only.

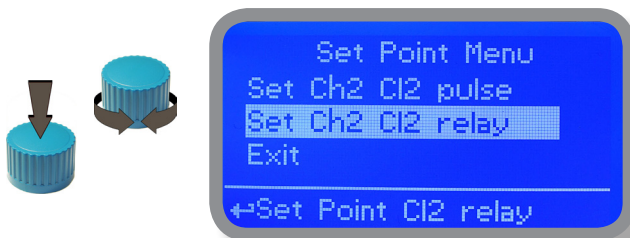


Proportional mode set the instrument to operate using a calculated percentage between two set values that enable or disable the Chlorine pump. To use this mode move cursor on "Working Mode". Press the wheel and select it.

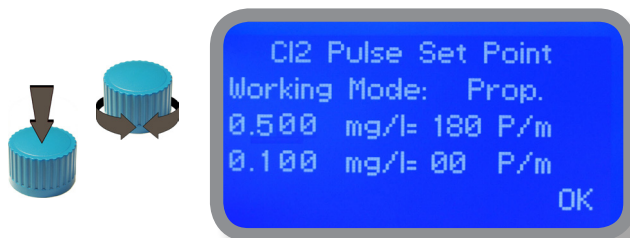

**PROPORTIONAL mode between 1.00Cl (0 p/m) and 0.50Cl(180 p/m).** p/m is : pulses per minute

In this mode the Cl pump will be "ON" for values lower than 0.50mg/l with set pulses/minute capacity (e.g.: 180) and it'll be "OFF" for values greater than 1mg/l. For values of 0.75mg/l pump will be "ON" with 90 p/m capacity. The calculation is based on 180 pulse / minute. To end procedure move cursor on "OK" and press wheel to proceed to "Save" request screen. Move wheel on "YES" to save or "NO" to discard changes.

To end procedure move cursor on "OK" and press wheel to proceed to "Save" request screen. Move wheel on "YES" to save or "NO" to discard changes.

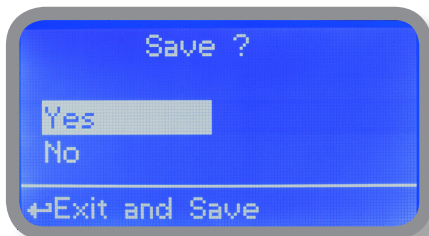

## 8.9 "PWM" (proportional), CI

**This mode is valid for "CH2 CL2 RELAY" output only.** Pulse-width modulation (PWM) of a signal or power source involves the modulation of its duty cycle, to either convey information over a communications channel or control the amount of power sent to a load.

This mode works over a settable (0 to 100 seconds) time to switch on or off selected output.

During this time if reading value will move towards a set value (on or off) the PWM will operate the output on timed basis. Reaching the set value the PWM will permanently leave on or off the output.

Parameters to set for this mode are:

Unit Value + %: (time activity towards set value. 0% means 0 seconds. 100% means 100 seconds.)


CI range: two CI values within PWM operates.

For example: set first CI value at 1.40 = 00% and second CI value at 0.80 = 60%.

For reading values  $\geq$  to 1.40 the output will be permanently OFF.

For reading values  $\leq$  0.80 the output will be ON for 60 seconds and OFF for 40 seconds.

If reading value is 1.1 mg/l then the output will be active at 30% (ON for 30 seconds, OFF for 70 seconds).

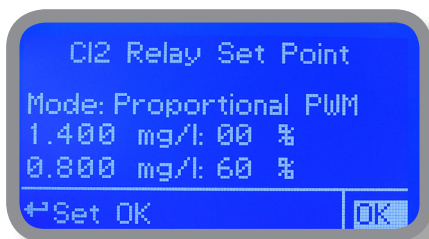



# 8.10 "PWM" (fixed), CI

**This mode is valid for "CH2 CL2 RELAY" output only.** Pulse-width modulation (PWM) of a signal or power source involves the modulation of its duty cycle, to either convey information over a communications channel or control the amount of power sent to a load. Using fixed mode is possible to set operating time to switch on or off selected output.

During this time if reading value will move towards a set value (on or off) the PWM will operate the output on timed basis. Reaching the set value the PWM will permanently leave on (for selected amount of time) or off the output.

Parameters to set for this mode are:

CI range: two CI values within PWM operates.

Ton: ON period, during output activity.

Toff: OFF period, during output activity.

For example: set first CI value (OFF) at 1.40. Set second CI value (ON) at 0.80.

Set "working-pause" output activity with Toff 0 seconds and Ton 80 seconds.

For reading values  $\geq$  to 1.40 the output will be permanently OFF.


For reading values  $\leq$  0.80 the output will be ON with activity based on Ton and Toff.

For reading values within working range operating mode is on HYSTERESIS base. Once reading value is 1.40 mg/l will be permanently off until it will reaches 0.80 mg/l.



# 9. "Probe Calibration", ORP

ORP calibration procedure involves probe's selection with one point (P1) calibration. From "Menu Calibration" choose "mV probe".

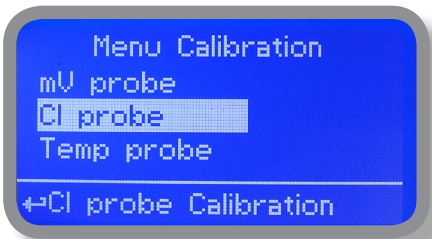


**Note:** This procedure assumes that instrument is correctly configured and a working ORP probe connected and installed on system. Measurement must be performed using plant water. Otherwise unattended results may occur.

Calibration can be performed in two ways: the first by alignment with a buffer solution, the second by reading the residual ORP level of the pool with the DPD1, comparison with the attached graph followed by alignment of the pumps group. The choice of method is exclusively at the user's discretion. In both cases, to establish the set-point value, a check using the DPD1 or other analysis system is necessary. The enclosed graphs provide a reference between the mV value read by the pumps group and the quantity of residual ORP expressed in mg/litre, and are linked to the pH value.



- 1) Measure buffer solution temperature and verify that it is the same printed on solution's label.
- 2) Remove protective cap from probe and wash probe's tip into water. Then dry it by shaking the probe in air.
- 3) On instrument set "Cal. at" value to match buffer solution value then put probe's tip into buffer solution and wait until instrument shows a stable reading value (mV field).
- 4) Move cursor on "OK" and press wheel to confirm the new calibration value. If calibration process fails the instrument will show "CALIBRATION FAILED". Repeat procedure otherwise move on "ESC" and press wheel.

REDOX - mg FREE CHLORINE - pH GRAPHIC TABLE

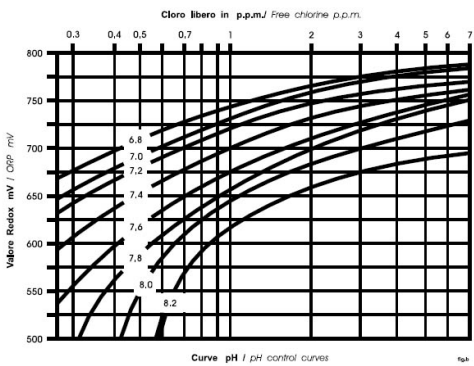

## 9.1 "Probe Calibration", Cl

Cl calibration procedure involves probe's selection, Zero (P1) and 2nd Point (P2) calibration. From "Menu Calibration" choose "Cl probe". Prior to calibrate chlorine probe please choose if enable or disable ORP compensation within related menu. **The zero calibration is available with 2 mg/l scale only.**

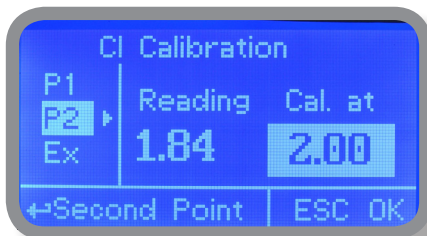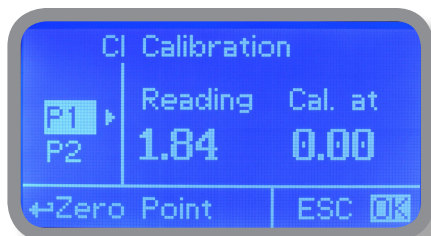

**Note:** This procedure assumes that instrument is correctly configured and a working Chlorine probe connected and installed on system. Measurement must be performed using plant water. Otherwise unattended results may occur.

Calib Zero (P1).

Once into "Cl calibration" menu move on "P1" then press wheel to enter into calibration mode. For a correct system calibration proceed as follows.

- install an "activated carbon filter" prior to probe's holder.
- let system water flow into probe holder for about 30 minutes.
- press wheel (cursor must be on "Cal.at"). Remove filter.



Carbon Filter System


Calib 2nd point (P2).

Now move on "P2" then press wheel to enter into calibration mode. For a correct system calibration use a ORPometer or a DPD device to read chlorine on system. Enter value using the wheel then move cursor on "OK". Now press the wheel.

To end procedure move cursor on "OK" and press wheel to proceed to "Save" request screen. Move wheel on "YES" to save or "NO" to discard changes. If an error occurred during calibration procedure then the instrument will show an error message and will ask to proceed to a new calibration, cancel current operation or restore default settings.




Photometer

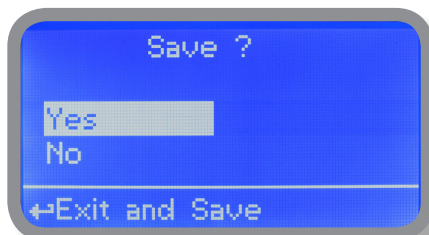


## 9.2 "Probe Calibration", °C - Temperature

A professional thermometer is required to obtain a reliable calibration. From "Menu Calibration" choose "Temp probe".

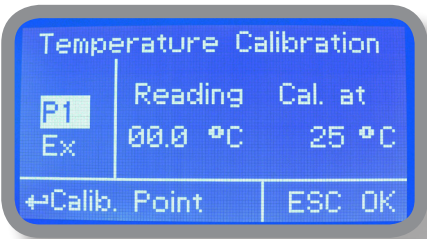

**Note:** This procedure assumes that instrument is correctly installed and configured, connected to a working PT100.. Calibrate using plant's temperature otherwise unattended results may occur.

Using an external thermometer read actual temperature and edit related field "Cal. at". Confirm by pressing wheel.

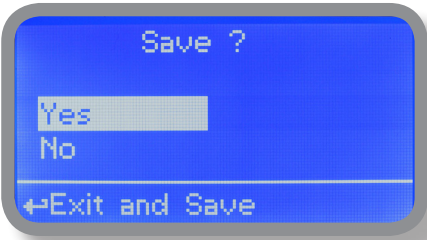

To end procedure move cursor on "OK" and press wheel to proceed to "Save" request screen. Move wheel on "YES" to save or "NO" to discard changes. If an error occurred during calibration procedure then the instrument will show an error message and will ask to proceed to a new calibration, cancel current operation or restore default settings.


# 10. "Parameters"

From "Menu Calibration" choose "Parameters". This menu allows to set a delay (max 60 minutes) before pumps begin to feed. Furthermore use this menu to set ORP pump startup priority and to change default passcode.



**Feeding Delay.**  
Move on "Feeding Delay" then press wheel. Choose a value between 0 (disabled) and 60 minutes (maximum delay time). This feature can be used to accord a startup delay for the pumps. Delay occurs when instrument is powered.


**New Pcode.**  
See page 10.

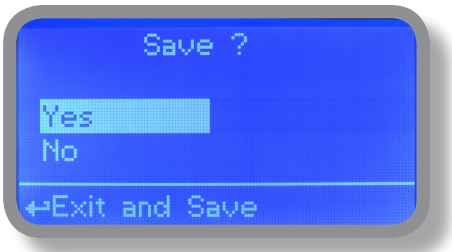


To end procedure move cursor on "OK" and press wheel to proceed to "Save" request screen. Move wheel on "YES" to save or "NO" to discard changes.

## 11. "Output Manager"

From "Menu Calibration" choose "Output Manager". This menu allows to manually operate all outputs for a settable time. Set to "AUTO" for normal operating mode. Set to "OFF" to permanently disable outputs.

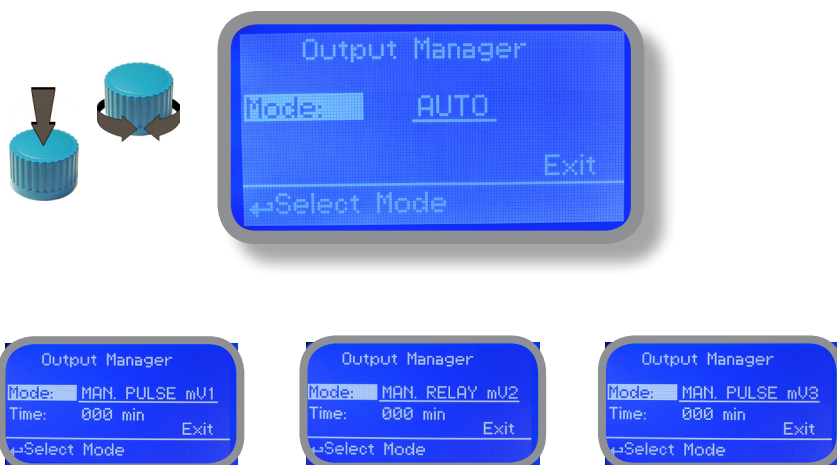

Press wheel to move cursor on "TIME" field. Once here, choose a working time between 0 (disabled) or 199 minutes. Move on "EXIT", then press wheel.

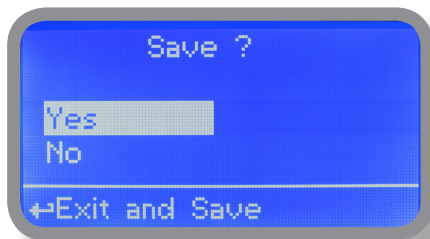

Choose "YES" to save changes. Exit from main menu. Main display will show a countdown for selected output. To stop this countdown go back to "Output Manager" menu and choose "AUTO" as working mode or wait until countdown ends. **This function can be used for priming purposes.**


# 12. "Instrument Reset"

To restore instrument to its default values (including password) once into "Instrument Reset" menu, choose parameter to restore and press wheel then change value to "ON", press wheel again, move on "OK" then finally press wheel. The instrument display will show "CHECKSUM ERROR". Press wheel to return into "Main Menu". Move on "EXIT", then press wheel. The instrument is now restored to factory default. Please repeat all calibration procedures and programming parameters.




## 13. "Dosing Alarm"

Use this menu to assign a maximum time to the pumps for reaching the setpoint. If set time ends and the pumps are still dosing, within this menu is possible to STOP them or just to show an alarm message. Function can be disabled selecting "OFF" instead of a number (minutes). Dosing alarm can be set for both or just one pump.

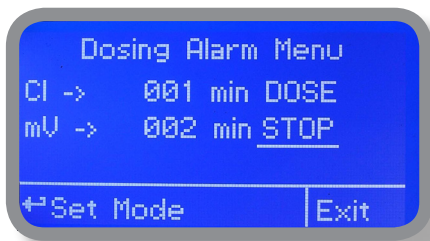

E.g. To set Cl pump to stop after time ends and setpoint isn't still reached press wheel, choose maximum time, press wheel move on next field and choose "STOP". Time can be set between 0 and 100 minutes. When satisfied with settings move on exit and press wheel.


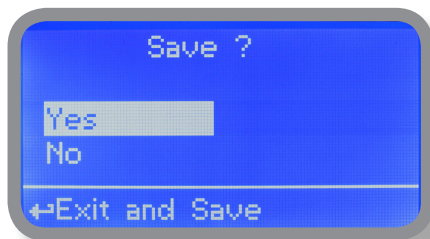


To end procedure move cursor on "OK" and press wheel to proceed to "Save" request screen. Move wheel on "YES" to save or "NO" to discard changes.



# 14. "International"

Use this menu to set international parameters as UNIT FORMAT (Europe IS or USA), Local Time and Date.

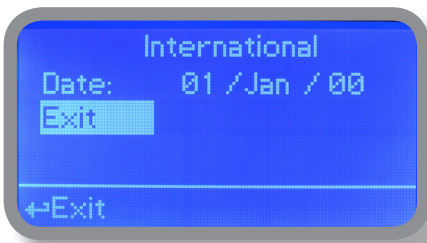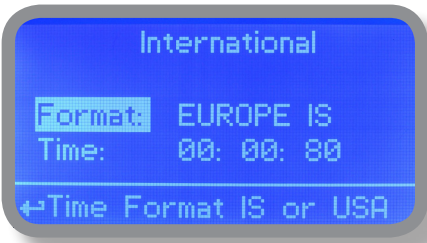

**Format.**

Use this option to use European or USA units format. See table for differences.

EUROPE IS (International Standard)	USA
Date (DD/MMM/YY)	Date (MMM/DD/YY)
Time 24h	Time AM / PM
°C	°F


**Time.**

Use this option to set local time.

**Date.**

Use this option to set date.


Move on exit to end changes.

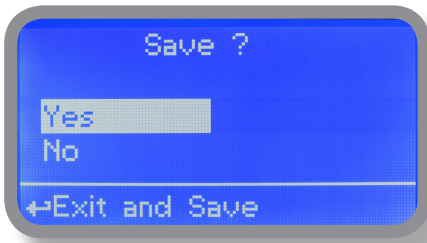


To end procedure move cursor on "OK" and press wheel to proceed to "Save" request screen. Move wheel on "YES" to save or "NO" to discard changes.

## 15. "Probe Failure"

Use this menu to assign a maximum time for connected probes to stay in "stuck" condition. A stuck probe (it remains on same reading value for some time) means that probably probe itself is damaged. Within this menu is possible to STOP pumps or just to show an alarm message (probe failure) . Function can be disabled selecting "OFF" instead of a number (minutes). This function can be set for both or just one probe.

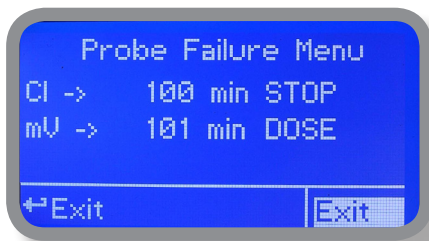

E.g. To set CI pump to stop after time ends and probe doesn't change reading values press wheel, choose maximum time, press wheel move on next field and choose "STOP". Time can be set between 100 and 254 minutes. When satisfied with settings move on exit and press wheel.

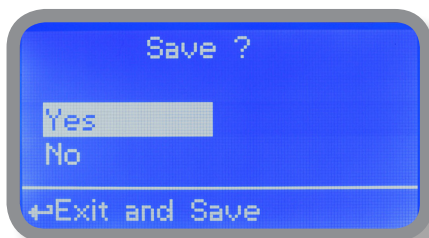


To end procedure move cursor on "OK" and press wheel to proceed to "Save" request screen. Move wheel on "YES" to save or "NO" to discard changes.

# 16. "Flow Contact"

Flow contact (see "SEPR" blocks on page 4) can be enabled to stop a dosing procedure using a N.O. contact mode (normally open) or N.C. contact mode (normally closed) when status on blocks changes. Rotate wheel to choose between: "DISABLE", "REVERSE" (N.O. contact) or "DIRECT" (N.C. contact).


Furthermore "Flow contact" can starts after a specified time when contact status changes. To set it move wheel on "Time:00 min", click it and rotate to choose time (from 0 to 99 minutes). Confirm selection by clicking wheel.

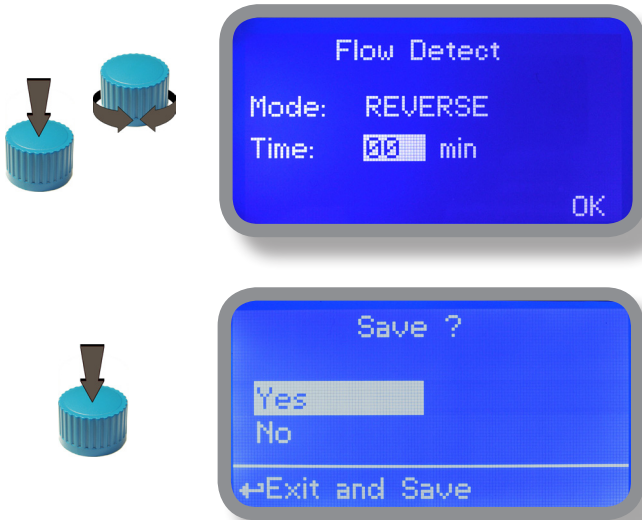

To end procedure move cursor on "OK" and press wheel to proceed to "Save" request screen. Move wheel on "YES" to save or "NO" to discard changes.

# 17. "Service"

This "view only" menu shows probes reading live and instrument ID for USB LOG connection (if device's connected). Press "ESC" to exit.

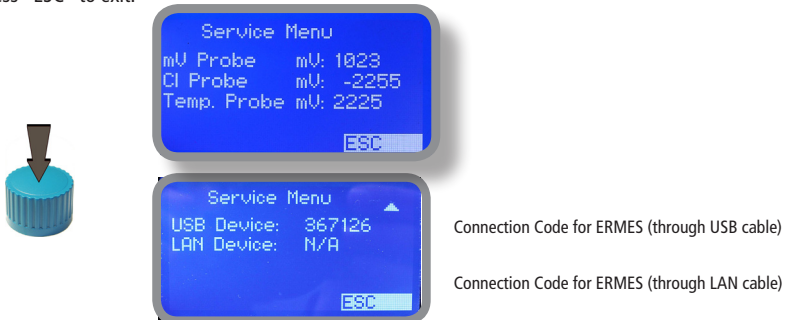

## 18. "Log Setup"

Log setup stores instrument activities when an alarm (flow, level, out of range reading, etc.) occurs.




Log activity recording can be started by moving wheel on "Mode: Disable" and changing it to "Mode: Enable". Log activity starting time can be set to begin at specified time by entering "Time". Activities data are collected every specified hour or minutes. Edit this parameter by moving wheel on "Every: 00:00" and changing it to desired time.

ID and Station Name as appears on a received SMS from instrument



## 19. "RS485 Setup"

Prior to use advanced communication functions (e.g.: SMS alarm service or remote communication) the instrument must have a unique ID NUMBER (move wheel on "OK" to check it) and ID NAME (station name). Rotate wheel and edit fields. If ID number has already assigned an error message will follow. In this occurs try using another number.

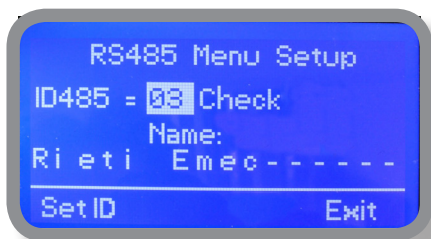


## 20. "mA Outputs"

This menu allows to configure mA current outputs for ORP, Chlorine and Temperature channels. Options to set are:

**MODE** (selectable between 0-20 or 4-20 mA current output)

**Max mA**: maximum probe's reading value at 20 mA current

**Min mA**: minimum probe's reading value at 0 or 4 mA current

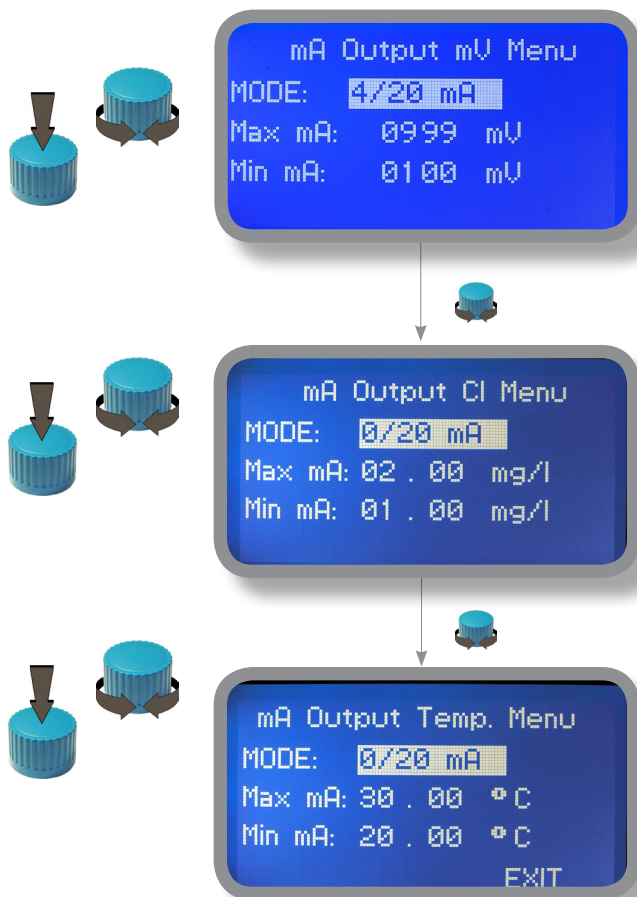

Rotate wheel to move within all 3 channels. Click wheel to select parameter and rotate wheel to change it. Click wheel again and rotate wheel to move cursor on next parameter. To end procedure move cursor on "EXIT" and press wheel to proceed to "Save" request screen. Move wheel on "YES" to save or "NO" to discard changes.

This menu is available only for "LDORPxx" instrument series with current outputs option enabled.

## 21. "Out of range alarm"

"Out of range alarm" menu defines the minimum and maximum ORP and Chlorine probe read value before to stop dosing activity and to show an alarm message.




Move wheel on "Min/Max ORP Range" to set "out of range" condition for ORP probe then click on wheel to enter into "Min/Max Range menu".



Move wheel on "ORP Hi: Dis." and change status from "Dis." (option disabled) to "En." (option enabled) by clicking on wheel and rotating it. Press wheel again and move on next field. Press wheel and enter a value for HIGH alarm.

Repeat procedure for "ORP Lo: Dis." and enter a value for LOW alarm.

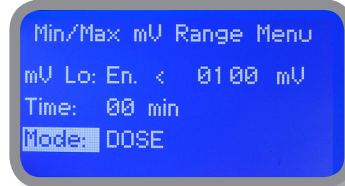


As last option enter "Time" (max 99 minutes) after which if lower or higher read value condition stays then the alarm occurs (to set into mode field).

To change alarm mode move wheel on "Mode", press it and choose between "DOSE" (connected pumps will not stop dosing activity when read value is out of range) or "STOP" (connected pumps will stop dosing activity when read value is out of range and an alarm message is displayed).




Move wheel on "Min/Max Cl Range" to set "out of range" condition for Chlorine probe then click on wheel to enter into "Min/Max Range menu".

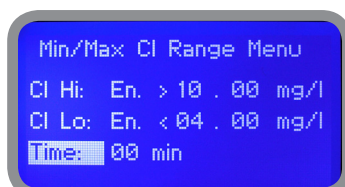

Move wheel on "Cl Hi: Dis." and change status from "Dis." (option disabled) to "En." (option enabled) by clicking on wheel and rotating it. Press wheel again and move on next field. Press wheel and enter a value for HIGH alarm.

Repeat procedure for "Cl Lo: Dis." and enter a value for LOW alarm.


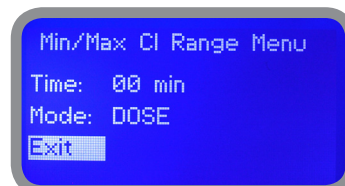


As last option enter "Time" (max 99 minutes) after which if lower or higher read value condition stays then the alarm occurs (to set into mode field).

To change alarm mode move wheel on "Mode", press it and choose between "DOSE" (connected pumps will not stop dosing activity when read value is out of range) or "STOP" (connected pumps will stop dosing activity when read value is out of range and an alarm message is displayed).

# Appendix A - MDCLx 6 MDSCL SCLxx modules


Located under mainboard cover there are two connectors that can be used to install probe modules. Modules come pre-installed upon request and may appear different as shown (different configurations). Identify installed modules to correctly connect probes.

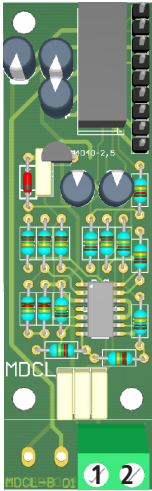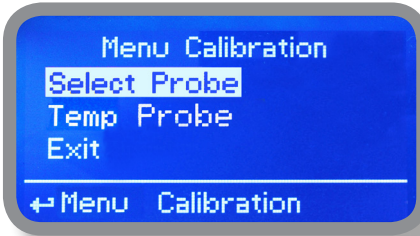

Module suitable for:

- ECL4
- ECL5
- ECL6
- ECL7
- ECL12


Block. n.1 : black wire (-)  
Block n.2 : red wire (+)

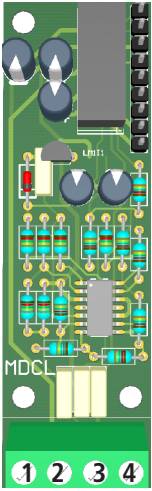

Module suitable for:

- ECL1
- ECL2
- ECL3
- ECL8
- ECL9
- ECL10
- ECL11
- ECL17
- ECL18
- EBR1/20

Block n.1: brown wire (+)  
Block n.2: white wire (-)  
Block n.3: green wire (IN)  
Block n.4: yellow wire (GND)

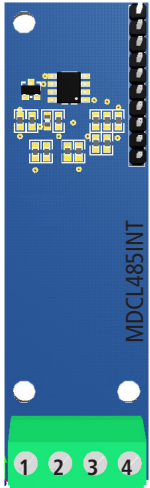

Module suitable for:

SCLxx

- 1 (-485) green wire
- 2 (+485) white wire
- 3 (GND) black wire
- 4 (+5VDC) red wire

## 22. Technical information.

Power supply: 85±264 VAC  
ORP range: 0 ÷ 1000mV ; Cl range: 0÷10 mg/l

Environment Temperature: -10 ÷ 45°C (14 ÷ 113°F)

Chemical Temperature: 0 ÷ 50°C (32 ÷ 122°F)

Installation Class: II

Pollution Level: 2

Packaging and Transporting Temperature: -10 ÷ 50°C (14 ÷ 122°F)

Protection degree: IP 65

Product	Formula	Ceram.	PVDF	PP	PVC	SS 316	PMMA	Hastel.	PTFE	FPM	EPDM	NBR	PE
Acetic Acid, Max 75%	CH3COOH	2	1	1	1	1	3	1	1	3	1	3	1
Hydrochloric Acid, Concentrate	HCl	1	1	1	1	3	1	1	1	1	3	3	1
Hydrofluoric Acid 40%	H2F2	3	1	3	2	3	3	2	1	1	3	3	1
ORPosORPoric Acid, 50%	H3PO4	1	1	1	1	2	1	1	1	1	1	3	1
Nitric Acid, 65%	HNO3	1	1	2	3	2	3	1	1	1	3	3	2
SulORPuric Acid, 85%	H2SO4	1	1	1	1	2	3	1	1	1	3	3	1
SulORPuric Acid, 98.5%	H2SO4	1	1	3	3	3	3	1	1	1	3	3	3
Amines	R-NH2	1	2	1	3	1	-	1	1	3	2	3	1
Sodium BisulORPite	NaHSO3	1	1	1	1	2	1	1	1	1	1	1	1
Sodium Carbonate (Soda)	Na2CO3	2	1	1	1	1	1	1	1	2	1	1	1
Ferric Chloride	FeCl3	1	1	1	1	3	1	1	1	1	1	1	1
Calcium Hydroxide (Slaked Lime)	Ca(OH)2	1	1	1	1	1	1	1	1	1	1	1	1
Sodium Hydroxide (Caustic Soda)	NaOH	2	1	1	1	1	1	1	1	2	1	2	1
Calcium Hypochlor.(Chlor.ted Lime)	Ca(OCl)2	1	1	1	1	3	1	1	1	1	1	3	1
Sodium Hypochlorite, 12.5%	NaOCl + NaCl	1	1	2	1	3	1	1	1	1	1	2	2
Potassium Permanganate, 10%	KMnO4	1	1	1	1	1	1	1	1	1	1	3	1
Hydrogen Peroxide, 30% (Perydrol)	H2O2	1	1	1	1	1	3	1	1	1	2	3	1
Aluminium SulORPate	Al2(SO4)3	1	1	1	1	1	1	1	1	1	1	1	1
Copper-II-SulORPate (Roman Vitriol)	CuSO4	1	1	1	1	1	1	1	1	1	1	1	1

**Resistance rating:** (1: Resistant) ; (2: Fairly resistant) ; (3: Not resistant)

**Polyvinylidene fluoride (PVDF)** Pump Heads, valves, fitting, tubing

**Polypropylene (PP)** Pump Heads, valves, fitting, level floater

**PVC** Pump Heads

**Stainless steel (SS 316)** Pump Heads, valves

**Polymethyl Metacrilate (Acrylic)** PMMA Pump Heads

**Hastelloy C-276** Injection valve spring

**Polytetrafluoroethylene (PTFE)** DiaORPragm

**Fluorocarbon (Viton® B)** Sealings

**Ethylene propylene (EPDM)** Sealings


**Nitrile (NBR)** Sealings

**Polyethylene (PE)** Tubing




# 23. SEPR configuration

## SEPR "Flow Sensor" configuration for two instruments

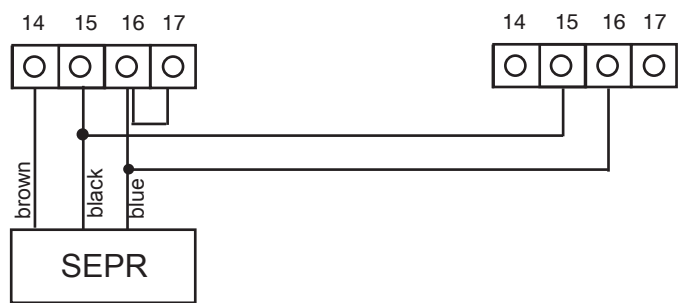


## Configuration of a Flow Switch with a voltage free contact and two instruments

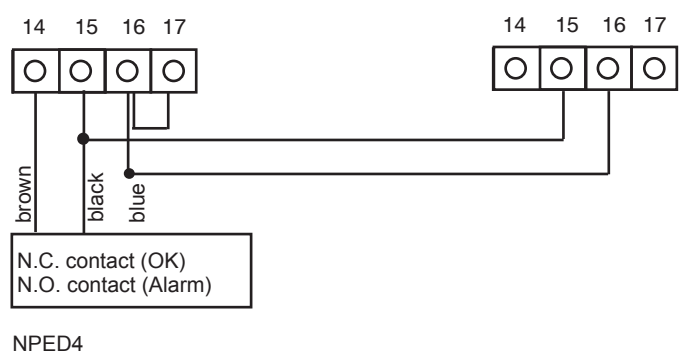

## Appendix Communication HARDWARE - "SMS/GSM" Module

Located under mainboard cover there is a four pins connector that can be used to install USB, ETHERNET or MODEM modules. Modules come pre-installed upon request and may appear different as shown (different configurations).  
**"SMS/GMS module" can be configured to send SMS messages containing critical instrument information.**

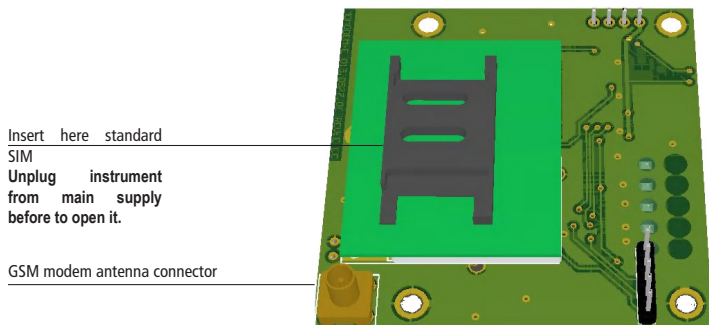

**To obtain reliable results with this feature please check the following list:**


- Make certain the antenna location is not shielded by metal objects or near sources of electrical 'noise'.
- Do not route the cable where it could be pinched in doors, windows etc.
- Secure the antenna cable
- Ensure that SIM into "SMS/GSM module" is properly inserted, activated and within operator range.
- Set instrument ID / NAME from "RS485 Setup" menu and configure "Out of Range Alarm" menu.

Within "Main menu" select "SMS MENU" to enable SMS service and enter SMS receiver ORPone numbers.



Up to three numbers for sending SMS can be stored into LDRHCL memory. SMS recipient will receive an SMS containing instrument ID, NAME and status. Number formats can be stored using international prefix "+", international prefix "00" or local.

WARNING: THIS FUNCTION COULD NOT BE  
FREE OF CHARGE. DEPENDING ON YOUR OPERATOR CONTRACT IT  
COULD GENERATE PAYING SMS TRAFFIC !

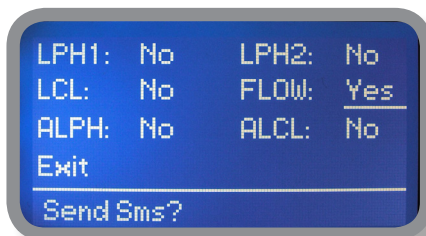

To enable warning message for related alarm condition choose "YES", to disable choose "NO". Then move wheel on Exit and SAVE configuration.  
**SMS will be sent when one or more ("YES") fields will change.**


LORP1 or 2 : level alarm for ORP1 or ORP2 levels  
LCL: level alarm for Chlorine  
FLOW: flow alarm  
ALORP: out of reading range for ORP probe  
ALCL: out of reading range for Chlorine probe

WARNING: TO AVOID UNDESIED MESSAGES USE CAREFULLY THIS  
SETUP!

## Appendix Communication HARDWARE - "LOG USB" Module

Located under mainboard cover there is a four pins connector that can be used to install "USB data log module" or "SMS module". Modules come pre-installed upon request and may appear different as shown (different configurations).



"USB data log module" records instrument activities. These information can be permanently stored into a standard USB pendrive. Pendrive can be connected to a PC using "LDORPxx DATA LOGGER" software to review and print instrument's activities. **To obtain reliable results with this feature please set instrument ID and NAME from "RS485 Setup" menu and activate log recording from "LOG SETUP" menu.**

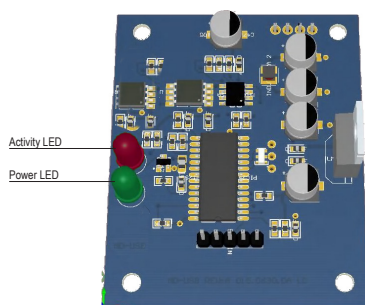

Insert USB pendrive here  
(right side of instrument)  
After usage put back USB cap

### HOW TO RECORD INSTRUMENT'S ACTIVITIES INTO USB PENDRIVE ?

Insert USB pendrive into USB connector (located on the right side of instrument). Instrument will save data log on USB pendrive. After succeeded in saving data it will ask if delete instrument's log or not (anyway USB pendrive will not be formatted). Move wheel on "YES" to delete log info from instrument and return to main screen or "NO" to leave log info on instrument and return to main screen. **Wait about 30 seconds to safely remove the USB pendrive.**

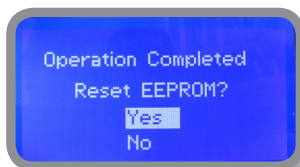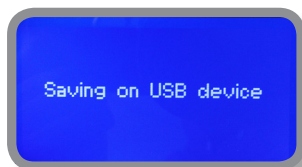

### HOW TO REVIEW INSTRUMENT'S ACTIVITIES RECORDED INTO USB PENDRIVE ?

It's necessary to install the "ERMES COMMUNICATION SOFTWARE" to review USB pendrive info on a PC. Follow installation instructions during software setup to correctly complete this procedure. Once the software has been installed and launched insert your USB pendrive into any available USB connector of PC. Instrument's log will be automatically uploaded into PC memory. See "ERMES COMMUNICATION SOFTWARE"5 quick guide for more info.

## Appendix Communication - Software

### “RS485” menu.

Prior to install the instrument into an RS485 local system a unique ID NUMBER (from 1 to 30) and ID NAME (station name) must be set. Rotate wheel and edit fields. If ID number has already assigned an error message will follow after ID Check (move cursor on CHECK and press wheel). In this event try using another number.



### “SMS” menu.

Instrument may remotely send SMS alarm messages using its own modem (sold as option). It can be configured as follows:

#### SMS1 / SMS2 / SMS3.

Using the wheel enter a mobile ORPone that will receive alert SMS messages if something wrong occurs. SMS number must be set using local number format. For example : 3391349134 will send an SMS message to mobile ORPone. Log level (and SMS frequency alert) may be set using options in “ACTIVE MSG” within “GSM menu”.



- TO AVOID UNDESIRED MESSAGES USE CAREFULLY LOG SETUP -

- WARNING: THIS FUNCTION COULD NOT BE FREE OF CHARGE. DEPENDING ON YOUR OPERATOR CONTRACT IT COULD GENERATE PAYING SMS TRAFFIC !

## Appendix Communication - Software

### “TCP/IP” menu.

The instrument may be remotely operated using a standard ethernet connection (sold as option). A static or dynamic IP address and a CAT5 ethernet cable is required. According to your network capacity connection speed is 10/100Mbps. To obtain a valid IP address and subnet mask contact your net administrator. Enter parameters and move cursor on “SAVE” to store parameters then move on “OK” and press wheel to save and activate configuration.

Based on your network configuration choose to obtain network parameters automatically (DYNAMIC) or manually (STATIC).



See “ERMES Communication Software” manual for proper PC software configuration.

---

#### What is a static IP address/dynamic IP address?

A static IP address is a number (in the form of a dotted quad) that is assigned to a computer by an Internet service provider (ISP) to be its permanent address on the Internet. Computers use IP addresses to locate and talk to each other on the Internet, much the same way people use ORPone numbers to locate and talk to one another on the teleORPone. When you want to visit whatis.com, your computer asks a domain name system (DNS) server (think teleORPone information operator) for the correct dotted quad number (think ORPone number) for whatis.com and your computer uses the answer it receives to connect to the whatis.com server.

It would be simple if every computer that connects to the Internet could have its own static IP number, but when the Internet was first conceived, the architects didn't foresee the need for an unlimited number of IP addresses. Consequently, there are not enough IP numbers to go around. To get around that problem, many Internet service providers limit the number of static IP addresses they allocate, and economize on the remaining number of IP addresses they possess by temporarily assigning an IP address to a requesting Dynamic Host Configuration Protocol (DHCP) computer from a pool of IP addresses. The temporary IP address is called a dynamic IP address. Requesting DHCP computers receive a dynamic IP address (think temporary ORPone number) for the duration of that Internet session or for some other specified amount of time. Once the user disconnects from the Internet, their dynamic IP address goes back into the IP address pool so it can be assigned to another user. Even if the user reconnects immediately, odds are they will not be assigned the same IP address from the pool. To keep our teleORPone teleORPone analogy going, using a dynamic IP address is similar to using a pay ORPone. Unless there is a reason to receive a call, the user does not care what number he or she is calling from.

There are times, however, when users who connect to the Internet using dynamic IP wish to allow other computers to locate them. Perhaps they want to use CU-SeeMe or use a VoIP application to make long distance ORPone calls using their IP connection. In that case, they would need a static IP address. The user has two choices; they can contact their ISP and request a static IP address, or they can use a dynamic DNS service. Either choice will probably involve an additional monthly fee.



Using a dynamic DNS service works as if there was an old-fashioned teleORPone message service at your computer's disposal. When a user registers with a DNS service and connects to the Internet with a dynamic IP address, the user's computer contacts the DNS service and lets them know what IP address it has been assigned from the pool; the service works with the DNS server to forward the correct address to the requesting DHCP computer. (Think of calling the message service and saying "Hi. I can be reached at 435.44.32.111 right now. Please tell anyone who tries to reach me to call that number.") Using a dynamic DNS service to arrange for computers to find you even though you are using a dynamic IP address is the next-best thing to having a static IP.

## Appendix Communication - Software

### “GPRS” menu.

Instrument may be remotely operated using an embedded standard GPRS modem (sold as option). In order to activate this service please ensure that the following steps are correctly completed:

- Make certain the antenna location is not shielded by metal objects or near sources of electrical 'noise'.
- Make certain the distance from the antenna to the “Instrument” unit is within cable length.
- Do not route the cable where it could be pinched in doors, windows etc.
- Ensure that SIM into “Instrument” modem is correctly inserted, activated and within operator range.

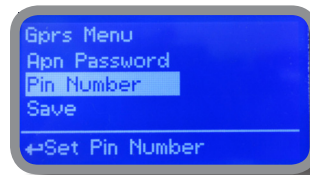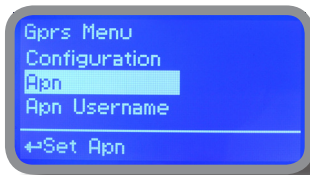


Instrument can be set for ERMES services enabled (Configuration option set to “ERMES YES”) or messages only (Configuration option set to “ERMES NO”) based on your SIM data access parameters. For manual configuration option enter APN (access point name) and SIM phone number. Move wheel on “OK” to save and move on “ESC” to go back to main menu.

**Don't forget to enter SIM CODE into PIN NUMBER menu to unlock SIM.**

**WARNING: THIS FUNCTION COULD NOT BE FREE OF CHARGE. DEPENDING ON YOUR OPERATOR CONTRACT IT COULD GENERATE PAYING DATA TRAFFIC !**

### “Email” menu.

If Ethernet module or GPRS module is installed (sold as option) the instrument can be configured to send email alarm messages up to two recipients. Click on “Email 1” or “Email 2” and enter email address.

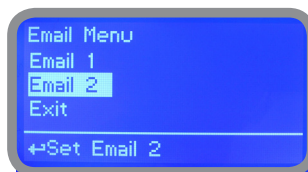

---

Access point name (APN) identifies an IP packet data network (PDN), that a mobile data user wants to communicate with. In addition to identifying a PDN, an APN may also be used to define the type of service, (eg connection to wireless application protocol (WAP) server, multimedia messaging service (MMS)), that is provided by the PDN. APN is used in 3GPP data access networks, eg general packet radio service (GPRS), evolved packet core (EPC).

## Appendix Communication - Software

### “LOG” menu.

This function records instrument activity (date, hour, temperature, uS, totalizer I/O, alarms, outputs). It starts for selected frequency period (every) at requested time (time). SET DATE & TIME BEFORE TO ENABLE LOG. IF NOT POWERED FOR ABOUT 30 DAYS THE INSTRUMENT WILL LOOSE DATE/TIME



Set ACTIVE to “enabled” to activate log recording.

TIME: recording start time (time format 23h e 59min)

EVERY: recording frequency (time format 23h e 59min)

Note: advanced log control (graORP, printing, comparison tables, event filtering, etc) is available through “ERMES Communication Software” for PC.


**See “ERMES Communication Software” manual for proper PC software configuration.**

### “LOG VIEW” menu.

To see alarm log entries as set on log menu choose “log view” on main menu.



Appendix E - Dimensions

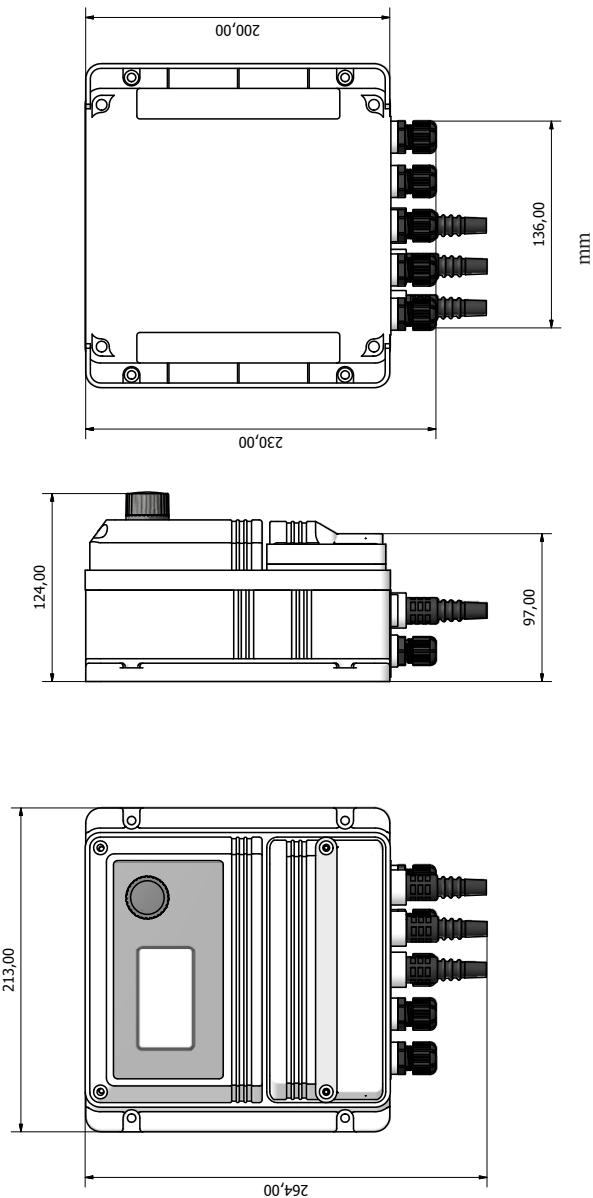



# Index

1. Introduction .....	3
2. The wheel.....	3
3. Mainboard Connections.....	4
4. Main Screen .....	5
5. Quick status check.....	6
6. Password .....	7
7. "Main Menu" list .....	8
8. "Set-Point", ORP working modes.....	9
8.6 "Set-Point", Cl working modes.....	14
9. "Probe Calibration", ORP .....	18
9.1 "Probe Calibration", Cl.....	19
9.2 "Probe Calibration", °C - Temperature.....	20
10. "Parameters" .....	21
11. "Output Manager" .....	22
12. "Instrument Reset" .....	23
13. "Dosing Alarm" .....	24
14. "International" .....	25
15. "Probe Failure" .....	26
16. "Flow Contact" .....	27
17. "Service" .....	27
18. "Log Setup" .....	28
19. "RS485 Setup" .....	28
20. "mA Outputs" .....	29
21. "Out of range alarm" .....	30
22. Technical information.....	32
23. SEPR configuration .....	33
Appendix A - Probe series modules .....	31
Appendix Communication HARDWARE - "SMS/GSM" Module .....	34
Appendix Communication HARDWARE - "LOG USB" Module.....	35
Appendix Communication - Software.....	38



When dismantling this instrument please separate material types and send them according to local recycling disposal requirements.  
We appreciate your efforts in supporting your local Recycle Environmental Program.  
Working together we'll form an active union to assure the world's invaluable resources are conserved.