
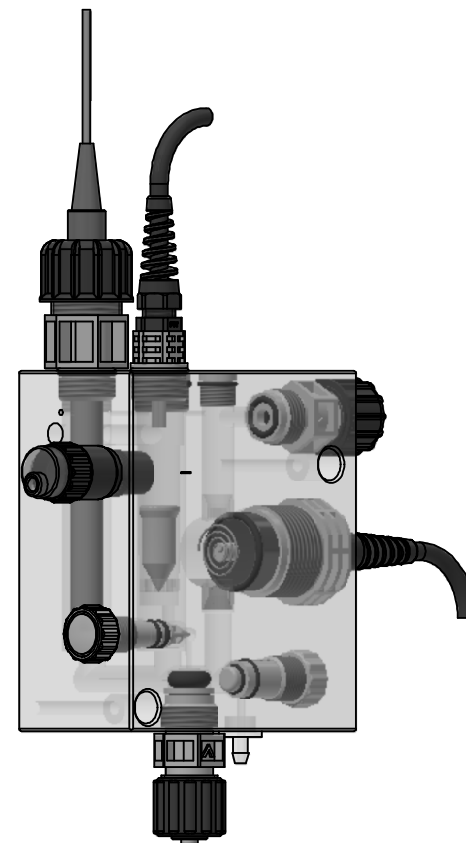
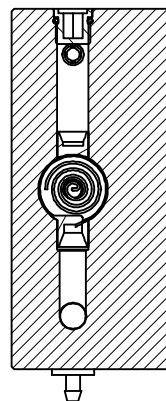
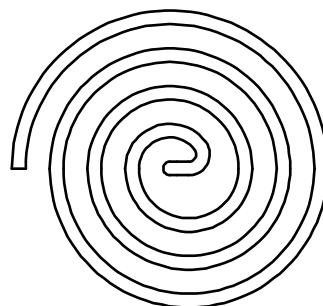


ELEPR

OK

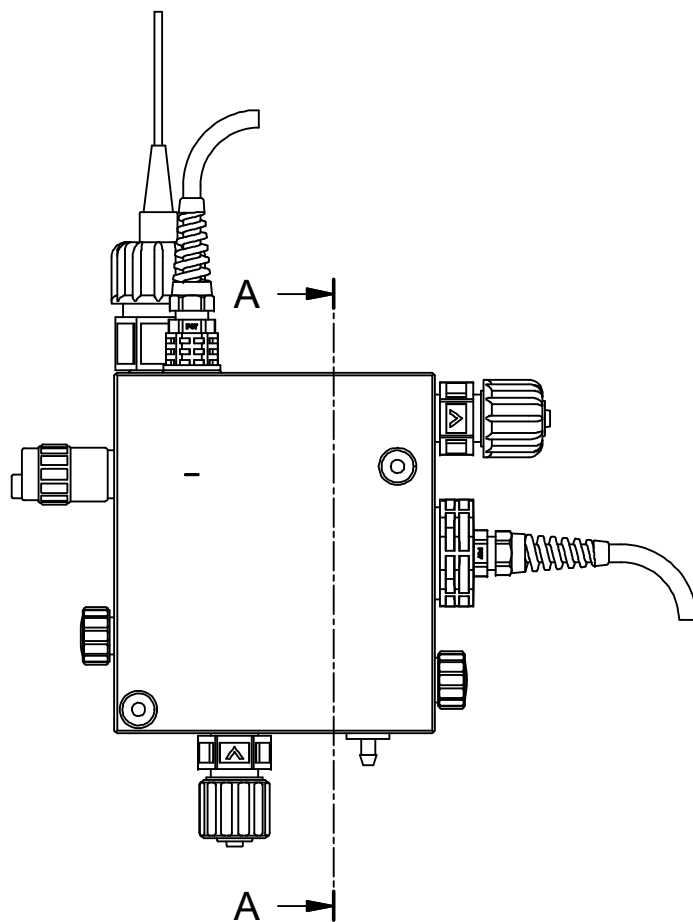

During installation, orient the ELEPR spiral as shown in the figure.

Durante l'istallazione orientare la spirale dell'ELEPR come in figura.

Lors de l'installation, orientez la spirale ELEPR comme indiqué sur la figure.

Richten Sie die ELEPR-Spirale während der Installation wie in der Abbildung gezeigt aus.

Durante a instalação, oriente a espiral ELEPR conforme mostrado na figura.

