



This manual contains safety information that if ignored can endanger life or result in serious injury. They are indicated by this icon.



Keep the CONTROLLER protected from sun and water. Avoid water splashes.



Depending on chosen configuration, controller's main screen may appear different and some functions couldn't be present.



## “CENTURIO Tower” Controller Operating Manual



REMOTE CONTROL AND SETUP  
[www.ermes-server.com](http://www.ermes-server.com)



Read Carefully !



ENGLISH Version

R28-10-20

NORME CE  
EC RULES (STANDARD EC)  
NORMAS DE LA CE



Direttiva Bassa Tensione }  
Low Voltage Directive } 2014/35/UE  
Directiva de baja tensión }

Direttiva EMC Compatibilità Elettromagnetica }  
EMC electromagnetic compatibility directive } 2014/30/UE  
EMC directiva de compatibilidad electromagnética }

## GENERAL SAFETY GUIDELINES



**Danger!** In emergencies the CONTROLLER should be switched off immediately! Disconnect the power cable from the power supply!

When installing always observe local regulations!

Manufacturer is not liable for any unauthorized use or misuse of this product that may cause injury, damage to persons and / or materials.

**Caution!** CONTROLLER must be accessible at all times for both operating and servicing. Access must not be obstructed in any way!

Feeder should be interlocked with a no-flow protection device to automatically shut-off connected pumps when there is no flow!

Pumps and connected accessories must be serviced and repaired by qualified and authorized personnel only!

Always discharge the liquid end before servicing pumps connected to the CONTROLLER!

Empty and rinse the liquid end before work on a connected pump which has been used with hazardous or unknown chemicals!

Always read chemical safety datasheet!

Always wear protective clothing when handling hazardous or unknown chemicals!

CONTROLLER must be operated / serviced by trained technicians only!

All connection operations must be performed while the CONTROLLER is not connected to main supply!

Missed activation for Min/Max alarm and Maximum Dosing Alarm may cause hazardous overdosing!

# Introduction

The "CENTURIO Tower" is a fully featured cooling towers controller with two-way biocide options and inhibitor / bleed control with 5 channels. Cooling towers are heat removal devices used to transfer process waste heat to the atmosphere. Cooling towers may either use the evaporation of water to remove process heat and cool the working fluid to near the wet-bulb air temperature or rely solely on air to cool the working fluid to near the dry-bulb air temperature. Common applications include cooling the circulating water used in oil refineries, chemical plants, power plants and building cooling. All information is provided through a large COLOUR LCD display (480x272). "CENTURIO Tower" is housed in an IP65 plastic box. Main features are:

## BLEED

### INHIBITOR with 5 working modes

(Feed&Bleed, % Feed&Bleed , % Time, Water Meter, Water Meter PPM)

### BIOCIDE with weekly program

**Conductivity and optional modules:** pH, Tracer, Chlorine Meter with Proportional and Digital outputs, Generic mA channel

# The wheel and the touch screen

The controller can be operated using both the wheel and the touch screen controls. The wheel is located below the screen and can be both rotated and pressed to confirm operations.



Swipe or Tap



Rotate and Press



Tap to confirm changes (right corner screen)



Tap to discard changes and return to previous menu (left corner screen)



Tap to return to main screen

**A RED COLOR BAR WITHIN A CHANNEL REQUIRES USER ATTENTION - TAP ON IT FOR FURTHER INFORMATION**


The capacitive touch screen could not work while wearing gloves.

If you need to wear them for safety reason please use a capacitive stylus to operate controller's screen.

Some functions can be performed using the touch screen only.

# Mainboard connections

Unplug CONTROLLER from main power supply then perform connections by following the picture below.  
 For easy understanding the board has been divided into two parts: **I/O connections** and **Power - Relays connections**.  
**For mA outputs and optional connections (i.e. MODBUS) refer to page 40.**

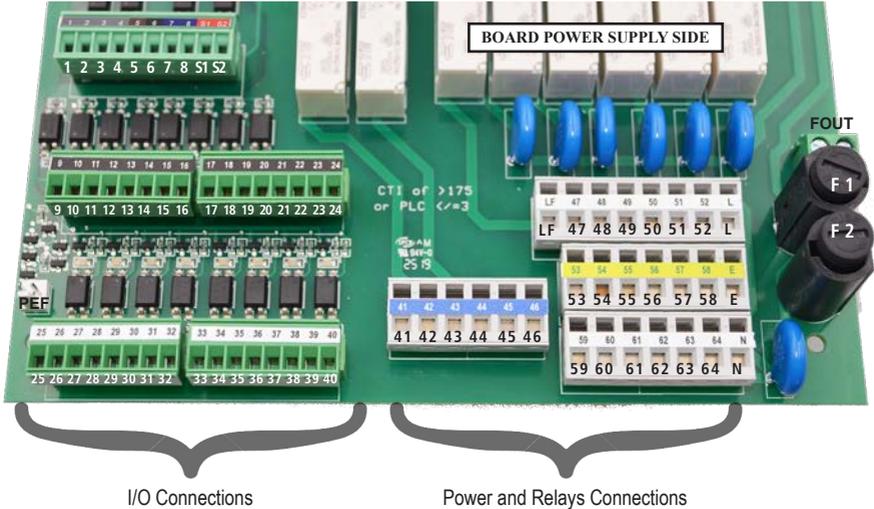

## Fuses:

F1: **Main Power Fuse** (6.3A T)  
 F2: **CONTROLLER Fuse** (3.15A T)

**S1(+)** - **S2(GND)**: Standby  
**PEF**: Connector for PEF LIGHT ALARM  
**FOUT**: Remove jumper to disable L(LIVE) from RELAYS OUTPUTS

## Power and Relays Connections:

L(Live) - E(Earth) - N(Neutral): **Main power supply** 230VAC (85-264VAC, 50/60Hz) or 24VAC\* 50/60 Hz  
 LF (LIVE FUSE PROTECTED): Live input for motorized EV

\*see controller's label

- 41(N.C. contact) - 42(Common) - 43(N.O. contact): **Free of voltage contact** (max insulation 250V) **RELAY n.1**
- 44(N.C. contact) - 45(Common) - 46(N.O. contact): **Free of voltage contact** (max insulation 250V) **RELAY n.2**
- 47(L) - 53(E) - 59(N): **Setpoint RELAY n.3**
- 48(L) - 54(E) - 60(N): **Setpoint RELAY n.4**
- 49(L) - 55(E) - 61(N): **Setpoint RELAY n.5**
- 50(L) - 56(E) - 62(N): **Setpoint RELAY n.6**
- 51(L) - 57(E) - 63(N): **Setpoint RELAY n.7**
- 52(L) - 58(E) - 64(N): **Setpoint RELAY n.8**

Completely Configurable Connections  
 (i.e.: motorized valve for bleed or ALARM)



Warning: Connections must be performed by qualified and trained personnel only

## I/O Connections:

1(+); 2(-): **Pulse Sender Water Meter** input n.1 (WM1) max 300Hz

3(+); 4(-): **Pulse Sender Water Meter** input n.2 (WM2) max 300Hz

5(+ Brown) - 6(Black) - 7/8(- Blue ; GND): **Flow sensor** mod. "SEPR" (don't remove jumper between blocks 7 and 8)\*

\*to use it as free of voltage contact leave jumper on blocks 7 and 8 and use blocks 5 and 6 as contact

9(+); 10(-): **Level** input n.1

11(+); 12(-): **Level** input n.2

13(+); 14(-): **Level** input n.3

15(+); 16(-): **Level** input n.4

17(+); 18(-): **Level** input n.5

19(+); 20(-): **Level** input n.6

21(+); 22(-): **Level** input n.7

23(+); 24(-): **Level** input n.8

25(-); 26(+): **Proportional pump (driven by pulses, optocoupled signal) output** n.1 NPN max 50mA / 24VDC

27(-); 28(+): **Proportional pump (driven by pulses, optocoupled signal) output** n.2 NPN max 50mA / 24VDC

29(-); 30(+): **Proportional pump (driven by pulses, optocoupled signal) output** n.3 NPN max 50mA / 24VDC

31(-); 32(+): **Proportional pump (driven by pulses, optocoupled signal) output** n.4 NPN max 50mA / 24VDC

33(-); 34(+): **Proportional pump (driven by pulses, optocoupled signal) output** n.5 NPN max 50mA / 24VDC

35(-); 36(+): **Proportional pump (driven by pulses, optocoupled signal) output** n.6 NPN max 50mA / 24VDC

37(-); 38(+): **Proportional pump (driven by pulses, optocoupled signal) output** n.7 NPN max 50mA / 24VDC

39(-); 40(+): **Proportional pump (driven by pulses, optocoupled signal) output** n.8 NPN max 50mA / 24VDC



Power and Relays Connections must be opened inserting a screwdriver's tip in the upper part of module and inserting the wire in the lower part as shown in left picture!

Wires in the "I / O Connections" terminals can be inserted by first removing the block from the board to facilitate the installation operation.



Warning: Connections must be performed by qualified and trained personnel only

# Cooling towers basic knowledge.

## What is a (wet, atmospheric) cooling tower?

A cooling tower is a heat rejection device, which extracts waste heat to the atmosphere through the cooling of a water stream to a lower temperature. The type of heat rejection in a cooling tower is termed "evaporative" in that it allows a small portion of the water being cooled to evaporate into a moving air stream to provide significant cooling to the rest of that water stream. The heat from the water stream transferred to the air stream raises the air's temperature and its relative humidity to 100%, and this air is discharged to the atmosphere. Evaporative heat rejection devices such as cooling towers are commonly used to provide significantly lower water temperatures than achievable with "air cooled" or "dry" heat rejection devices, like the radiator in a car, thereby achieving more cost-effective and energy efficient operation of systems in need of cooling. Think of the times you've seen something hot be rapidly cooled by putting water on it, which evaporates, cooling rapidly, such as an overheated car radiator. The cooling potential of a wet surface is much better than a dry one.

Common applications for cooling towers are providing cooled water for air-conditioning, manufacturing and electric power generation. The smallest cooling towers are designed to handle water streams of only a few gallons of water per minute supplied in small pipes like those might see in a residence, while the largest cool hundreds of thousands of gallons per minute supplied in pipes as much as 15 feet (about 5 meters) in diameter on a large power plant.

The generic term "cooling tower" is used to describe both direct (open circuit) and indirect (closed circuit) heat rejection equipment. While most think of a "cooling tower" as an open direct contact heat rejection device, the indirect cooling tower, sometimes referred to as a "closed circuit cooling tower" is nonetheless also a cooling tower.

A direct, or open circuit cooling tower is an enclosed structure with internal means to distribute the warm water fed to it over a labyrinth-like packing or "fill." The fill provides a vastly expanded air-water interface for heating of the air and evaporation to take place. The water is cooled as it descends through the fill by gravity while in direct contact with air that passes over it. The cooled water is then collected in a cold water basin below the fill from which it is pumped back through the process to absorb more heat. The heated and moisture laden air leaving the fill is discharged to the atmosphere at a point remote enough from the air inlets to prevent its being drawn back into the cooling tower.

The fill may consist of multiple, mainly vertical, wetted surfaces upon which a thin film of water spreads (film fill), or several levels of horizontal splash elements which create a cascade of many small droplets that have a large combined surface area (splash fill).

An indirect, or closed circuit cooling tower involves no direct contact of the air and the fluid, usually water or a glycol mixture, being cooled. Unlike the open cooling tower, the indirect cooling tower has two separate fluid circuits. One is an external circuit in which water is recirculated on the outside of the second circuit, which is tube bundles (closed coils) which are connected to the process for the hot fluid being cooled and returned in a closed circuit. Air is drawn through the recirculating water cascading over the outside of the hot tubes, providing evaporative cooling similar to an open cooling tower. In operation the heat flows from the internal fluid circuit, through the tube walls of the coils, to the external circuit and then by heating of the air and evaporation of some of the water, to the atmosphere. Operation of the indirect cooling towers is therefore very similar to the open cooling tower with one exception. The process fluid being cooled is contained in a "closed" circuit and is not directly exposed to the atmosphere or the recirculated external water.

In a counter-flow cooling tower air travels upward through the fill or tube bundles, opposite to the downward motion of the water. In a cross-flow cooling tower air moves horizontally through the fill as the water moves downward.

Cooling towers are also characterized by the means by which air is moved. Mechanical-draft cooling towers rely on power-driven fans to draw or force the air through the tower. Natural-draft cooling towers use the buoyancy of the exhaust air rising in a tall chimney to provide the draft. A fan-assisted natural-draft cooling tower employs mechanical draft to augment the buoyancy effect. Many early cooling towers relied only on prevailing wind to generate the draft of air.

## Cooling towers basic knowledge. (continue)

If cooled water is returned from the cooling tower to be reused, some water must be added to replace, or make-up, the portion of the flow that evaporates. Because evaporation consists of pure water, the concentration of dissolved minerals and other solids in circulating water will tend to increase unless some means of dissolved-solids control, such as blow-down, is provided. Some water is also lost by droplets being carried out with the exhaust air (drift), but this is typically reduced to a very small amount by installing baffle-like devices, called drift eliminators, to collect the droplets. The make-up amount must equal the total of the evaporation, blow-down, drift, and other water losses such as wind blowout and leakage, to maintain a steady water level.

### **Some useful terms, commonly used in the cooling tower industry:**

**Drift** - Water droplets that are carried out of the cooling tower with the exhaust air. Drift droplets have the same concentration of impurities as the water entering the tower. The drift rate is typically reduced by employing baffle-like devices, called drift eliminators, through which the air must travel after leaving the fill and spray zones of the tower.

**Blow-out** - Water droplets blown out of the cooling tower by wind, generally at the air inlet openings. Water may also be lost, in the absence of wind, through splashing or misting. Devices such as wind screens, louvers, splash deflectors and water diverters are used to limit these losses.

**Plume** - The stream of saturated exhaust air leaving the cooling tower. The plume is visible when water vapor it contains condenses in contact with cooler ambient air, like the saturated air in one's breath fogs on a cold day. Under certain conditions, a cooling tower plume may present fogging or icing hazards to its surroundings. Note that the water evaporated in the cooling process is "pure" water, in contrast to the very small percentage of drift droplets or water blown out of the air inlets.

**Blow-down** - The portion of the circulating water flow that is removed in order to maintain the amount of dissolved solids and other impurities at an acceptable level.

**Leaching** - The loss of wood preservative chemicals by the washing action of the water flowing through a wood structure cooling tower.

**Noise** - Sound energy emitted by a cooling tower and heard (recorded) at a given distance and direction. The sound is generated by the impact of falling water, by the movement of air by fans, the fan blades moving in the structure, and the motors, gearboxes or drive belts.

# “Centurio Tower” basic treatment.

“CENTURIO Tower” basically operates three main treatments to grant cooling efficiency: inhibitor, bleed and biocide.

## What is the purpose of inhibitor ?

Inhibitor is a chemical compound that, when added to water, decreases the corrosion rate of a metal or an alloy. It prevents cooling tower plant to maintain hoses efficiency in water circulating system.

To set:

- Bleed*
- %Bleed*
- %Time*
- Water Meter
- Water Meter PPM




## What does it mean bleed ?

Cooling tower bleed-off/blowdown is the flushing of a portion of high mineral concentration cooling tower system water down the drain, while simultaneously replacing it with fresh water. This process dilutes the system water mineral concentrations that steadily increase due to water evaporation. Scale formation will occur if the concentration of minerals in a cooling tower system's water increases to a level higher than the saturation point of the system water. The mineral content above the saturation point will fall out of the solution of the water and form hard mineral scale throughout the system.

To set:

- Setpoint & Dead Band*
- Bleed Timeout*
- Bleed Manual*

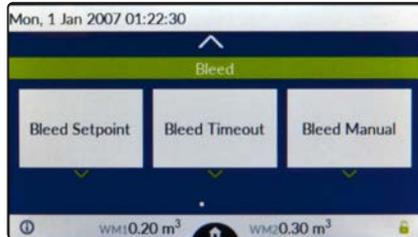


## What is a biocide ?

A biocide is a chemical substance capable of killing living organisms, usually in a selective way. They prevent the fouling of cooling tower water. Cooling tower users frequently apply biocides to the circulating cooling water to control growth of microorganisms, algae, and macroorganisms. Another very important reason for using biocides in cooling towers is to prevent the growth of Legionella, including species that cause legionellosis or Legionnaires' disease, most notably *L. pneumophila*. “CENTURIO Tower” can be set to perform also a pre-biocide (biocide activator or pre biocide treatment) activity.

To set:

- Pre-bleed*
- Pre-biocide*
- Biocide*
- Lockout*
- Week*

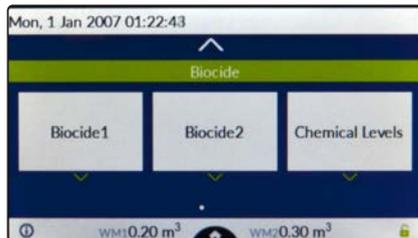

# “Centurio Tower” main screen.

Local Date / Time	Mon, 1 Jan 2017 01:03:38					Network Connection
Channels / Units	Conductivity μS	pH pH	Chlorine mg/l	Tracer ppm	Generic mA	
Channels readings	94.7	7.47	4.66	67.2	7.749	0.0°C
Channels status		pH High		Tracer High		
	WM1 0.20 m <sup>3</sup>		Tap on gear icon for settings menu	WM2 0.30 m <sup>3</sup>		

Pulse sender water meters for input / bleed (see settings to configure)

**Please note: main screen aspect may change due to installed modules / channels available (1 conductivity channel for basic tower functions plus up to 4 more channels)**



These dots represent how many screens are available for actual viewing. Swipe on screen to scroll between them.



For more info about channel status (alarms, readings, etc..) tap on it for a “in-depth” explanation popup.



For more info about serial number / ERMES code tap on it to see an explanation popup. Red icon requires user attention. Please tap on it for further information.



For more info about ETHERNET / USB / ERMES network connection and settings tap on it.



Tap on “X” icon to discard changes / Tap on “tick” icon to save changes.



Actual screen can be scrolled up or down for more options.



# “Centurio Tower” basic settings.

**Basic settings are:** PASSWORDs, Time & Date, Language and International Units.

**Standard settings are:** Probes calibration and working modes (bleed - inhibitor - biocide).

**Advanced settings are:** Flow meter, Alarm and Communication (WiFi, Mobile, ERMES) menu.


All these three settings must be set in order to properly operate the CONTROLLER.

## PASSWORD for main menu (settings) access.

To grant access into main menu tap on  from main screen and enter the PASSWORD using the keypad on the right side of the screen. Default PASSWORD is 0000 (factory preset).



To set a new PASSWORD choose “PASSWORD” from “Settings” menu and enter a four numbers code. Confirm changes to activate the new PASSWORD.

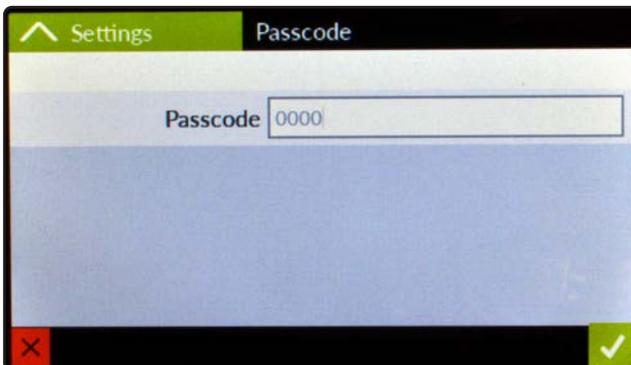


---

### Lost PASSWORD ?

Please don't forget the PASSWORD (if changed). In the unfortunate event, please call your local distributor for unlocking procedure. There is no way for you to recover a lost PASSWORD.


## International.

Before to program the controller please setup Language, Location and local Time & Date (Settings / International). Since the controller activities are based on time is essential to setup time and date prior to anything. Within International menu please choose language and location for proper units format.

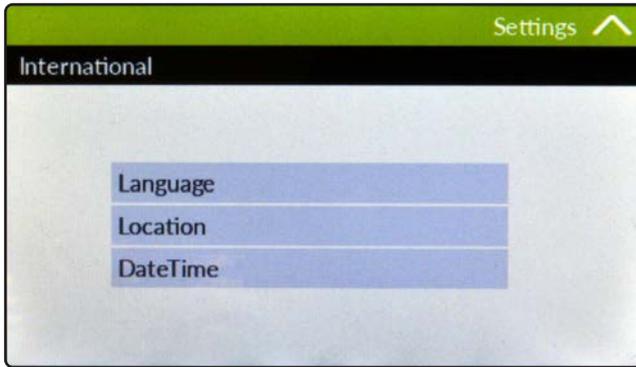


Based on location units change according to local rules. To end procedure tap on tick icon for each change.

EUROPE IS (International Standard)	USA
Date (DD/MM/YY)	Date (MM/DD/YY)
Time 24h	Time AM / PM
°C Celsius	°F Fahrenheit
Liters	Gallons

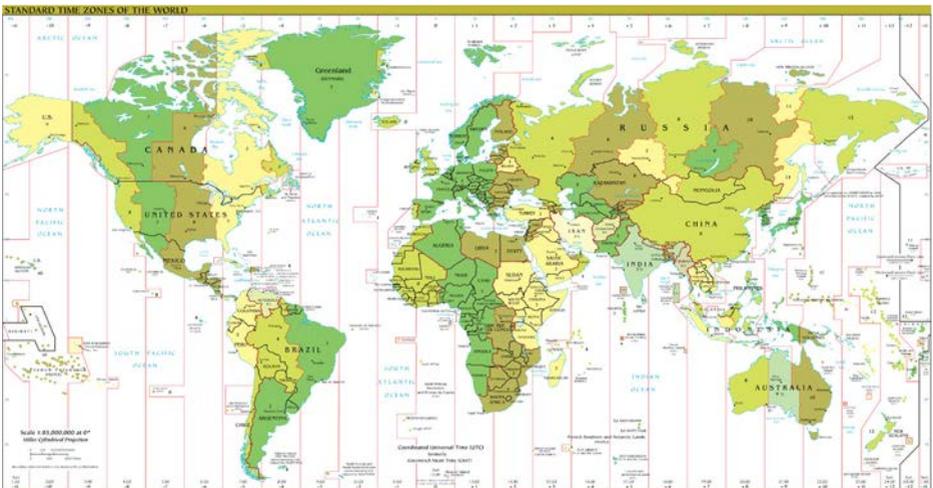

## “Centurio Tower” standard settings.

Standard settings are: Probes calibration and operating modes (bleed - inhibitor - biocide). To calibrate each channel select it within main menu. Channels availability is based on modules configuration. The controller will automatically add the proper channel when a new module is installed and detected.

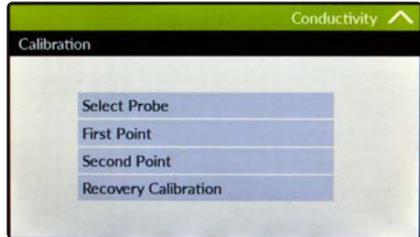

## Conductivity calibration menu.

This menu includes probe choice, conductivity calibration, temperature compensation and manual or automatic temperature compensation. Conductivity calibration procedure involves a zero calibration (First Point) and a 2nd calibration point (Second Point) that requires a buffer solution with value near working range. Furthermore Temperature and Automatic Compensation must be set. **Note: This procedure assumes that CONTROLLER is correctly installed and configured, connected to a working probe. Calibrate using plant's temperature otherwise unattended results might occur. If something wrong occurs use RECOVERY CALIBRATION to restore to previous calibration.**

### First Point & Second Point.

During this procedure probe must be dry and clean and not installed in plant. Tap on “First Point” (zero) and confirm it. Tap on “Second point”, dip probe's head into buffer solution and wait until reading value is stable, enter buffer solution value and confirm it.

### Temperature Compensation (if available)

Conductivity measurements are temperature dependent. The degree to which temperature affects conductivity varies from solution to solution and can be calculated using the following formula:  $C_{25} = C / \{1 + [a/100(t-25)]\}$  where:  $C_{25}$  = slution conductivity at 25°C, C = conductivity at operating temperature, a = temperature coefficient of solution %/°C.


Probe read value (uS or ppm)	Alpha (a)	Temperature (°C / °F)	Displayed Value (us or ppm)
5227	1.2	35°C / 95°F	4934
4524	3.5	27°C / 80.6°F	4228
3924	2.1	40°C / 104°F	2984

Samples alphas (a) are listed in the table above. To determine that “a” of other solutions, simply measure conductivity at a range of temperatures and graphic the change in conductivity versus the change in temperature. “CENTURIO Tower” has either fixed or adjustable automatic temperature compensation referenced to a standard temperature of 25°C.

Otherwise choose automatic temperature compensation and set % Alpha value.

## Chlorine calibration menu.

Chlorine calibration procedure is based on installed chlorine probe and may involve one or two calibration points depending on probes' model (see table at next page). From main menu choose "Chlorine" then tap on "Calibration". Installed probe will be automatically detected and according to model a one or two points calibration will be enabled.

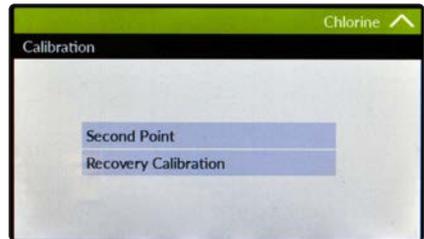

**Note:** This procedure assumes that CONTROLLER is correctly installed and configured, connected to a working probe. Calibrate using plant's temperature otherwise unattended results might occur. If something wrong occurs use RECOVERY CALIBRATION to restore to previous calibration.

### Two points calibration method.

During this procedure probe must be dry and clean and not installed in plant. Use chlorine free water (or a carbon filter system) and dip probe's head into it, wait until reading value is stable, then tap on "First Point" (zero) to confirm it.

For Second point calibration use a plant's sample water and analyze it using a DPD system to obtain value. Enter this value as second point calibration and confirm it.

### One point calibration method (second point).

For Second point calibration use a plant's sample water and analyze it using a DPD system (photometer) to obtain value. Enter this value as second point calibration and confirm it.



Carbon Filter System



Photometer

## Chlorine probes table.


Use this table to refer to calibration method to use.

Probe's model	Scale reading	Max reading value	
Scl 1/2	Cl2	2.000	Two Points Calibration
Scl 1/5	Cl2	5.000	
Scl 1/20	Cl2	20.00	
Scl 1/200	Cl2	200.0	
Scl 2/2	ClO2	2.000	Two Points Calibration
Scl 2/20	ClO2	20.00	
Scl 3/2	Cl2	2.000	Two Points Calibration
Scl 3/10	Cl2	10.00	
Scl 3/20	Cl2	20.00	
Ecl 6,7,12,20	Cl2	10.00	Two Points Calibration
Scl 8/2	Clt	2.000	Two Points Calibration
Scl 8/20	Clt	20.00	
Scl 9/200	H2O2	200.0	
Scl 9/2000	H2O2	2000	
Scl 10/1	O3	1.000	
Scl 10/10	O3	10.00	
Scl 11/200	PAA	200.0	
Scl 11/2000	PAA	2000	
Scl 13	O2	60.00	
Scl 17/10	ClO2	10.00	
Scl 18/10	Cl2	10.00	
Ecl 6,7,12,20 br	Br2	10.00	Two Points Calibration
Scl 17/2	ClO2	2.000	Two Points Calibration
Scl 18/2	Cl2	2.000	Two Points Calibration
SBR 1/20	Br2	20.00	
SCL SC	Cl2	2.000	Two Points Calibration
Ecl 4,5,6,7,12	ClO2	10.00	Two Points Calibration
SCL 17/20	ClO2	20.00	
SCL 18/20	Cl2	20.00	
SCL 10/2	O3	2.000	Two Points Calibration
SCL 10/20	O3	20.00	
SCLT/2	ClO2	2.000	Two Points Calibration
SCL11/50	PAA	50.00	Two Points Calibration
SCL9/50	H2O2	50.00	Two Points Calibration
SCL2/0,5	ClO2	0,50	Two Points Calibration

Note: some probes aren't supported.

## Tracer calibration menu.

Tracer calibration procedure is based on two buffer solutions (0 BTSA and "working value" BTSA buffer solutions). According to installed probe, before calibration, configure the model using "Probe Tracer" menu.

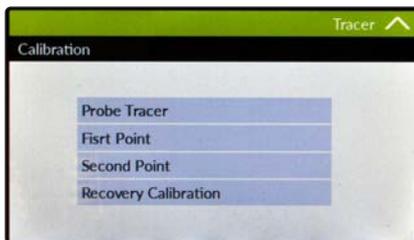

**Note:** This procedure assumes that CONTROLLER is correctly installed and configured, connected to a working probe. Calibrate using plant's temperature otherwise unattended results might occur. If something wrong occurs use RECOVERY CALIBRATION to restore to previous calibration.

### Two points calibration method.

During this procedure probe must be dry and clean and not installed in plant. Tap on "First Point" (zero) and confirm it. Tap on "Second point", dip probe's head into buffer solution and wait until reading value is stable, enter buffer solution value and confirm it. **Note:** buffer solution value may change if environment temperature it's different than 20°C. Read solution's label for more information. According to this occurrence "Default" must be changed. During calibration LIGHT could interfere with buffer solution reading value. Execute calibration in a dark environment.

## pH calibration menu.

pH calibration procedure is based on two buffer solutions (usually 7pH value for first point and 4pH value for second point).

### Calib 1st Point.

Once into calibration menu move tap on "First Point" then dip probe's sensor on 7pH buffer solution. Wait until reading value is stable and according to buffer solution value enter it on calibration field. ("Cal. at" field). Confirm it or discard if not satisfied. **Note:** buffer solution value may change if environment temperature it's different than 20°C. Read solution's label for more information. According to this occurrence "pH Default" must be changed. If something wrong occurs use RECOVERY CALIBRATION to restore to previous calibration.

### Calib 2nd Point.

Once into calibration menu move tap on "Second Point" then dip probe's sensor on 4pH buffer solution. Wait until reading value is stable and according to buffer solution value enter it on calibration field. ("Cal. at" field). Confirm it or discard if not satisfied. **Note:** buffer solution value may change if environment temperature it's different than 20°C. Read solution's label for more information. According to this occurrence "pH Default" must be changed. If something wrong occurs use RECOVERY CALIBRATION to restore to previous calibration.

## Temperature calibration.

For each channel, where available, there is a temperature probe to be used for proper probe's compensation. To calibrate the PT100 sensor a professional thermometer is required to obtain a reliable calibration. Within each channel calibration menu, tap on "Calib Temperature" to begin setup. Using an external thermometer to read actual temperature and enter value in calibration field. Confirm or discard changes. *Note: for pH calibration / Temperature compensation see curve at page 29.*

## Channels setpoints menu.


For each channel (except for CONDUCTIVITY) a setpoint configuration (for DIGITAL and PROPORTIONAL outputs) must be set to properly operate controller's outputs. It's also possible to set the related temperature setpoint for each channel (on/off mode only) and assign an output available.




For each setpoint choose working mode.

### Parameters to set are:


- 1) Working mode (digital or proportional)
- 2) Values
- 3) Output (if available)
- 4) Pulses per Minute

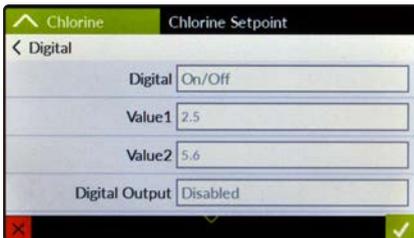

Digital Setpoint configuration sample having two values to work on.

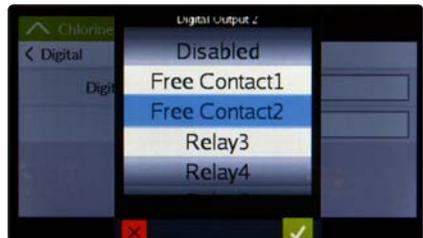

Digital outputs available.

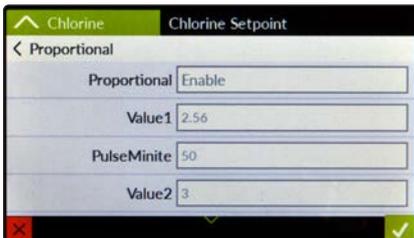

Proportional configuration sample having two values and pulses per minute to work on.



Proportional outputs available.

## “Set-Point CI” (PWM) mode - Digital

This mode is valid for any “Digital” output available. Pulse-width modulation (PWM) of a signal or power source involves the modulation of its duty cycle, to either convey information over a communications channel or control the amount of power sent to a load. This mode works over a settable (0 to 100 seconds) time to switch on or off selected output. During this time if reading value will move towards a set value (on or off) the PWM will operate the output on timered basis. Reaching the set value the PWM will permanently leave on or off the output. Parameters to set for this mode are:

**Unit Value + %:** (time activity towards set value. 0% means 0 seconds. 100% means 100 seconds.)  
**CI range:** two CI values within PWM operates.

For example: set first CI value at 1.40 = 00% and second CI value at 0.80 = 60%.


For reading values  $\geq 1.40$  the output will be permanently OFF.

For reading values  $\leq 0.80$  the output will be ON for 60 seconds and OFF for 40 seconds.

If reading value is 1.1 mg/l then the output will be active at 30% (ON for 30 seconds, OFF for 70 seconds).

## “Set-Point CI” (on/off) mode - Digital

This mode is valid for any “Digital” output available. On/Off mode set the CONTROLLER to operate using two set values that enable or disable the CI pump. To use this mode tap on On/Off working mode. Tap on it.

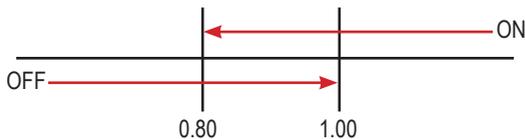


### ON/OFF mode

Set CI value at 0.80 mg/l ON and 1.00 mg/l OFF. The difference between the two CI values is called HYSTERESIS.

CONTROLLER will enable the Chlorine pump when reading value will decrease at 0.80mg/l

At 0.80mg/l the Chlorine pump will be enabled until reading value will increase at 1.00mg/l.

Pulse speed: to let pump operate at pulses per minutes add one or more minute (1pulse every xx minutes).

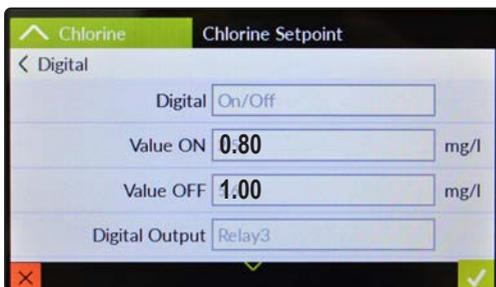

Tap on main function to enable / disable  
Tap on value to change them according to preferences  
Tap on Out to choose between any output available

## “Set-Point Cl” (Proportional) mode - Pulse

This mode is valid for any proportional / pulse output available.

Proportional mode set the CONTROLLER to operate using a calculated percentage between two set values that enable or disable the Cl pump. To use this mode tap on “Proportional First Point”. Tap on it.

**PROPORTIONAL mode between 1.00Cl (0 p/m) and 0.50Cl(180 p/m).** p/m is : pulses per minute

In this mode the Cl pump will be “ON” for values lower than 0.50mg/l with set pulses/minute capacity (e.g.: 180) and it'll be “OFF” for values greater than 1mg/l. For values of 0.75mg/l pump will be “ON” with 90 p/m capacity. The calculation is based on 180 pulse / minute.

The screenshot shows a mobile application interface for configuring Chlorine Setpoint. The title bar is green with a white arrow icon and the text "Chlorine". Below the title bar, the screen is titled "Chlorine Setpoint". A back arrow icon is followed by the text "Proportional". The main content area has four rows of input fields:

- Row 1: "Proportional" followed by a dropdown menu showing "Enable".
- Row 2: "Value" followed by a text input field containing "1.00", "mg/l at", a text input field containing "0", and "P/m".
- Row 3: "Value" followed by a text input field containing "0.50", "mg/l at", a text input field containing "180", and "P/m".
- Row 4: "Out Proportional" followed by a dropdown menu showing "Pulse1".

At the bottom of the screen, there is a red "X" icon on the left and a green checkmark icon on the right.

Tap on main function to enable / disable  
Tap on value to change them according to preferences  
Tap on Out to choose between any output available



## “Set-Point pH” (on/off) mode ALKALI

This mode is valid for any “Digital” output available. On/Off mode set the CONTROLLER to operate using two set values that enable or disable the pH pump. To use this mode choose “Working Mode”. Tap on it.

### ON/OFF mode while dosing ALKALI

Set pH value at 7.00 OFF and 6.90 ON. Set Pulse Speed per minute (strokes per minute) based on dosing device capabilities. CONTROLLER will leave the pH pump active until reading value will increase up to 7.00pH.

At 7.00pH the pH pump will be disabled until reading value will decrease under 6.90pH.

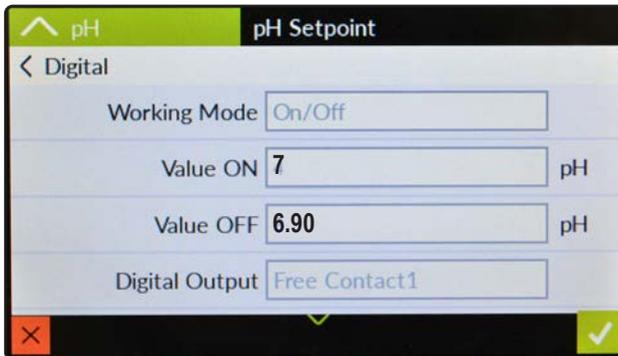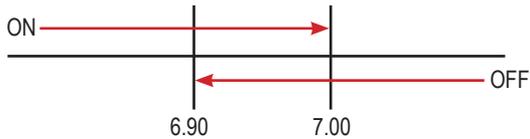

Tap on main function to enable / disable  
Tap on value to change them according to preferences  
Tap on Out to choose between any output available



## “Set-Point pH” (on/off) mode ACID

This mode is valid for any “Digital” output available. ON/OFF mode while dosing ACID

Set pH value at 7.00 OFF and 7.10 ON. Set Pulse Speed per minute (strokes per minute) based on dosing device capabilities.

CONTROLLER will leave the pH pump active until reading value will decrease up to 7.00pH

At 7.00pH the pH pump will be disabled until reading value will increase up to 7.10pH.

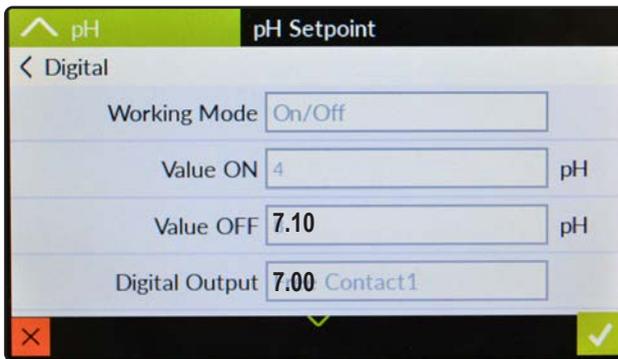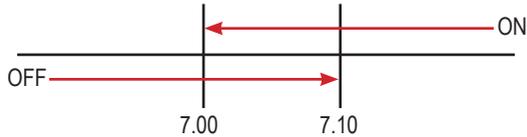

Tap on main function to enable / disable  
Tap on value to change them according to preferences  
Tap on Out to choose between any output available

---

### Did you know ?

In chemistry, an alkali is a basic, ionic salt of an alkali metal or alkaline earth metal element. Alkalies are best known for being bases (compounds with pH greater than 7) that dissolve in water. The adjective alkaline is commonly used in English as a synonym for base, especially for soluble bases. This broad use of the term is likely to have come about because alkalies were the first bases known to obey the Arrhenius definition of a base and are still among the more common bases. Since Brønsted-Lowry acid-base theory, the term alkali in chemistry is normally restricted to those salts containing alkali and alkaline earth metal elements.

An acid (often represented by the generic formula HA [H+A<sup>-</sup>]) is traditionally considered any chemical compound that, when dissolved in water, gives a solution with a hydrogen ion activity greater than in pure water, i.e. a pH less than 7.0. That approximates the modern definition of Johannes Nicolaus Brønsted and Martin Lowry, who independently defined an acid as a compound which donates a hydrogen ion (H<sup>+</sup>) to another compound (called a base). Common examples include acetic acid (in vinegar) and sulfuric acid (used in car batteries). Acid/base systems are different from Cl reactions in that there is no change in oxidation state.

## “Set-Point pH” (PWM)

This mode is valid for any “Digital” output available. Pulse-width modulation (PWM) of a signal or power source involves the modulation of its duty cycle, to either convey information over a communications channel or control the amount of power sent to a load.

This mode works over a settable (0 to 100 seconds) time to switch on or off selected output.

During this time if reading value will move towards a set value (on or off) the PWM will operate the output on timed basis. Reaching the set value the PWM will permanently leave on or off the output.

Parameters to set for this mode are:

**Unit Value + %:** (time activity towards set value. 0% means 0 seconds. 100% means 100 seconds.)

**pH range:** two pH values within PWM operates.


For example: set first pH value at 8.00 = 100% and second pH value at 4.0 = 0%.

For reading values  $\geq 8.00$  the output will be permanently ON.

For reading values  $\leq 4.0$  the output will be permanently OFF.

For reading value of 7.00 the output will be OFF for 25 seconds, ON for 75 seconds.

For reading value of 6.00 the output will be OFF for 50 seconds, ON for 50 seconds.

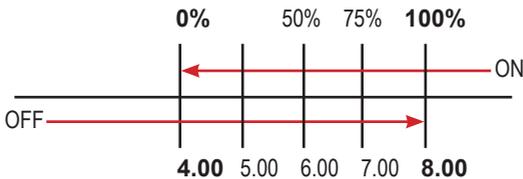


## “Set-Point pH” (Proportional) mode - Pulse

This mode is valid for any proportional / pulse output available.

Proportional mode set the CONTROLLER to operate using a calculated percentage between two set values that enable or disable the pH pump. To use this mode tap on “Proportional First Point”. Tap on it.

**PROPORTIONAL mode between 7pH(0 P/m) and 8pH (180 P/m).** p/m is : pulses per minute

In this mode the pH pump will be “ON” for values greater than 8pH with maximum set pulses per minute capacity (e.g.: 180) and it'll be “OFF” for values lower than 7pH. For values of 7.5pH pump will be “ON” with 90 pulses per minute capacity.

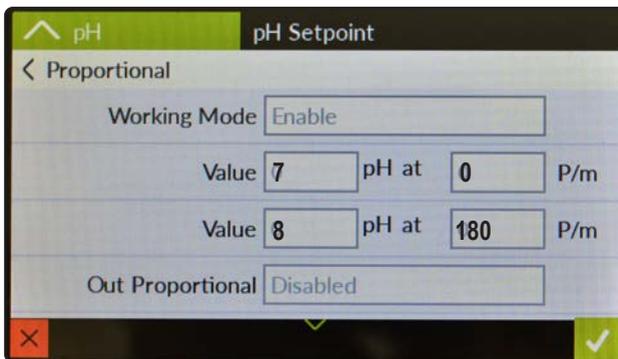

The screenshot shows a mobile application interface for configuring the pH Setpoint. The title bar at the top is green and contains a back arrow, the text 'pH', and 'pH Setpoint'. Below the title bar, the screen is titled 'Proportional'. There are four rows of configuration options, each with a label and a text input field:

- Working Mode: Enable
- Value 7 pH at 0 P/m
- Value 8 pH at 180 P/m
- Out Proportional: Disabled


At the bottom of the screen, there is a red 'X' icon on the left and a green checkmark icon on the right.

## “Set-Point ppm” (on/off) mode example n.1 tracer

This mode is valid for any “Digital” output available. On/Off mode set the instrument to operate using two set values that enable or disable the TRACER pump. To use this mode tap on “Working Mode”.

### ON/OFF mode example 1


Set ppm value at 7.00 OFF and 6.90 ON. Set Pulse Speed per minute (strokes per minute) based on dosing device capabilities. Instrument will leave the tracer pump active until reading value will increase up to 7.00ppm. At 7.00ppm the tracer pump will be disabled until reading value will decrease under 6.90ppm.

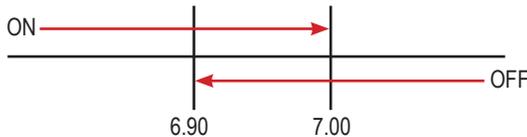

## “Set-Point ppm” (on/off) example n.2 tracer

This mode is valid for any “Digital” output available. ON/OFF mode


Set ppm value at 7.00 OFF and 7.10 ON. Set Pulse Speed per minute (strokes per minute) based on dosing device capabilities. Instrument will leave the tracer pump active until reading value will decrease up to 7.00ppm. At 7.00ppm the tracer pump will be disabled until reading value will increase up to 7.10ppm.

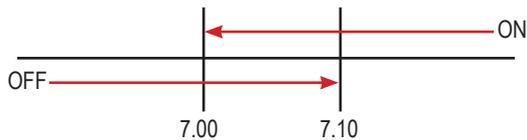



## “Inhibitor” menu.

Inhibitor function can operate in 5 feeding modes. Tap on wheel and rotate to choose most suitable mode. “WM PPM” submenu can be edited within “L/h” or “cc/st”.

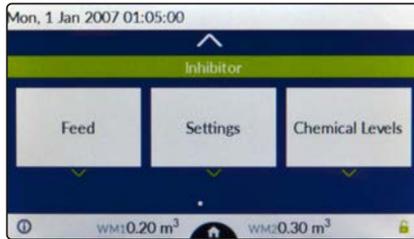

### Feed & Bleed.

Once Bleed mode has been set, the operating time for feeding procedure will be the same as for bleeding. Before setting this mode first configure “Bleed Menu”. No further options need to be set. Note: feed mode will operate only at the end of bleed timing.

### Feed & % Bleed.

Once Bleed mode has been set, the operating time for feeding procedure will be a percentage of total time needed for bleeding. Before setting this mode first configure “Bleed Menu”. Set percentage time. Note: feed mode will operate only at the end of bleed timing.

### Feed & % Time.

The operating time for feeding procedure will be a percentage (%) of cycle time (Time).

*E.g.: Time= 1h 00m and %=50. Inhibitor activity: 0h 30m.*


### Feed & Water Meter (WMI).

The operating time for feeding procedure will be active for a time (Time) every (WM Pulse) water meter pulses, Mode (WM1, WM2 or WM1 + WM2). Before setting this mode first configure “Flow meter menu” within main settings.


*E.g.: Time= 00h 30m and WM Pulse=0050. Working Mode= WM1 - Inhibitor activity: 30min every 50 pulses from water meter (WM1)*

### Feed & WM Ppm (WMI).

The operating time for feeding procedure will be active to keep product concentration (POM) based on pump's flow (L/h liters per hour), Water Meter counter with a minimum of 10 seconds activity and Mode (WM1, WM2 or WM1 + WM2). Furthermore pump's capacity can be edited into cc per stroke (cc/st) using ppm to set strokes needed to dose. Otherwise manual concentration value (%) can be set (rotate wheel). Before setting this mode first connect IS pump to the CONTROLLER and configure “Flow meter menu” within main settings.

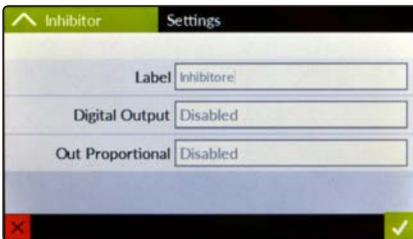

Configure and Name the related output.


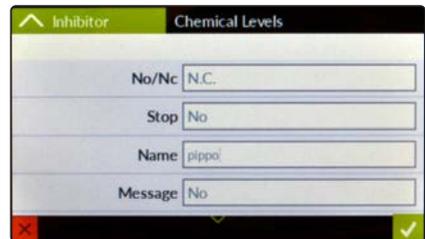


Configure output contact type and Stop (Yes or No) when an alarm occurs.

## “Biocide 1” and “Biocide 2” menu.

Usually two types of chemicals (e.g.: chlorine based chemical and bromine based chemical) are used to obtain best results in killing dangerous microorganisms. Use “Biocide 1” and “Biocide 2” menus to configure these tasks. Parameters to set are the same for both menus.

Note: “Biocide 1” can't be changed if “Setpoint Cl” working mode is set to “Constant Mode”.

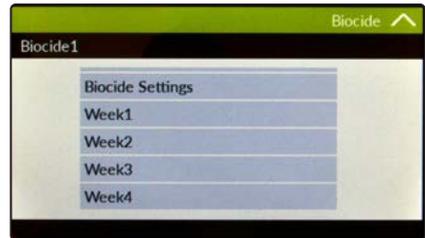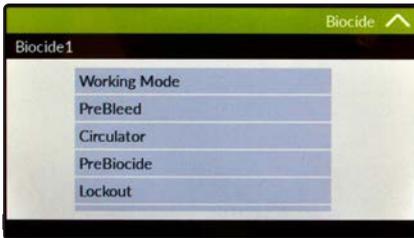


- Working Mode:** Constant / Timer Biocide (**for Biocide**) - Conductivity / Time (**for PreBleed**)
- Circulator:** Activate for the set time a selectable digital output to connect (e.g.) a circulator pump.
- Pre-bleed:** Timered or conductivity (uS/PPM) setpoint for bleed valve activity.
- |                                  |                                                                          |
|----------------------------------|--------------------------------------------------------------------------|
| Time mode                        | Conductivity (setpoint conductivity probe reading)                       |
| Bleed valve is open for set time | Bleed valve is open if probe's conductivity read value exceeds set value |
- Pre-biocide:** This option set Pre-biocide (1 or 2) output active for set time. Pre-biocide is generally used for biocide-activator chemicals. Pre-biocide 1 & 2 will activate configured outputs.
- Lockout:** This option lock (keep closed) bleed valve for set time at the end of biocide activity.
- Week:** This option set events repetitively on daily basis for set amount of time.
- hh mm    hh mm
- E.g.: 00 01 @ 01:00  
Biocide activity will start every  
Tuesday for 1 minute at 01:00 AM\*
- Biocide Settings:** This option assign a proportional / digital output, name and starting time.

- NOTES:
- 1) Activity execution order for selected options is:
    - 1st Pre-bleed
    - 2nd Pre-biocide
    - 3rd Biocide
    - 4th Lockout
  - 2) Pre-bleed option in conductivity mode has a time limit that can be set from "BLEED" menu. If conductivity value can't be restored within a time then the bleed valve will be closed and an alarm generated ("Bleed Timeout").
  - 3) Set 00h 00m to disable single option
  - 4) \*Execution time, for selected options, will begin calculating total events time and it will begin prior biocide time activity. (see "WK" option for starting time).

## “Bleed” menu.


A method for controlling the amount and concentration of make-up water and chemicals introduced into the recirculating water of a cooling tower system. A float operated make-up valve controls the addition of make-up water to the tower. As make-up water is added to the tower a vacuum is produced at an injector valve which draws chemicals from a chemical holding tank into the make-up water, thereby allowing precise control of the chemical concentration in the make-up liquid. Further, a bleed valve is provided which is responsive to the vacuum produced at the injector valve and bleeds a portion of the recirculating water to waste. Up to 3 setpoint, timeout and manual can be set for each bleed.

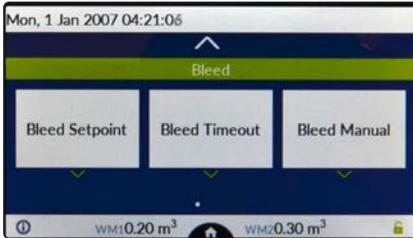

**Setpoint:** target value for conductivity.

**Delay:** activation delay (minutes) for selected digital output.

**Dead Band:** The controller opens bleed valve (configured Digital Output) when reaching setpoint and it leaves valve opens until conductivity value reaches dead band set value. Choose “-” (minus) before Dead Band value to invert bleed valve working mode. E.g.: Range (setpoint) is 4000 uS and Dead Band is 500 uS.

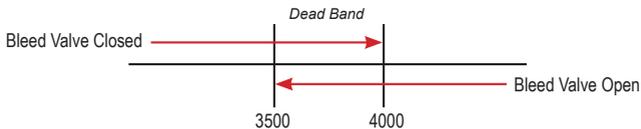



**Message:** this option create a warning message when bleed timeout is exceeded (message service must be configured).

**Log:** create a log for timeout activity (log service must be configured).

**Stop:** No, don't stop controller main activities - Yes, stop the controller until normal condition is restored.

**Time Limit:** this option set a time limit within restoring conductivity value. Outreaching this time the controller will close bleed valve and generate an alarm.

**Manual Bleed:** this option manually operates bleed valve for set time. Valve operation begins immediately after user confirm working time.

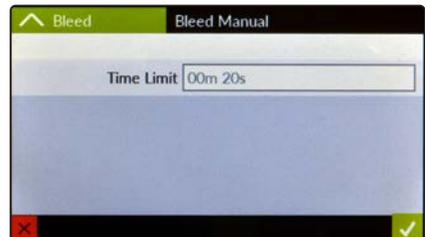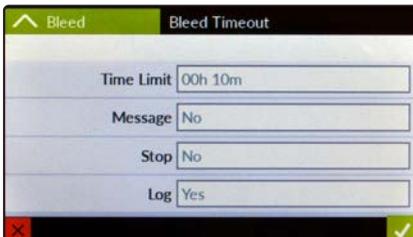

## “CENTURIO Tower” main menu: settings.

Main menu, Options are: Flow, Label, PASSWORD (see page 10), Flow meter, Log Setup and International (see page 35).

### “Flow Sensor”.

This menu allows to configure flow sensor contact (5 - 6 - 7/8).  
Options are:

**Mode:** Direct (N.O.), Reverse (N.C.), Disabled


**Delay:** starting delay time.

**Stop:** if enabled it stops controller when contact status changes.

**Message:** send alert message through message system.

**Log:** save status activity on logbook.

**Delay Send MSG:** Introduces a delay before sending a flow alarm message (0 disabled, max delay 999 minutes).

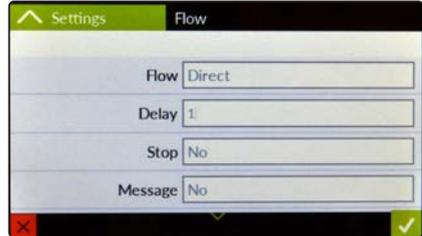

### “Label”.

This menu allows to name the controller to better identify it within a network / alerts messages.

**Default name:** “Centurio”.



### “Water Meters”.

This menu allows to configure WM1 and WM2 pulse sender water meters. Options are:


**WM1 / WM2:** working mode configuraion (see next page)

**Proportional WM 1, 2, 3:** analog output configuration.

The proportional water meter menu allows to setup the flow meter to operate for dosing required PPM (parts per million) of product with a configurable % of product's concentration.

Based on CC/ST (cc per strokes) of connected pump is possible to achieve dosing results of extreme precision.

**Reset Counter:** reset all water meters counters

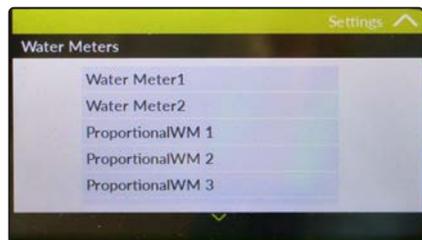

## “Water Meters” settings.

This menu allows to configure **WM1** (usually assigned to water input) and **WM2** (usually assigned to bleed) pulse sender water working modes. Options are:

**Factor:** based on mode “pulse / litre” or “litre / pulse” this option defines how many pulses made a liter or how many liters made a pulse.

**Mode:** Pulse / Litre or Litre / Pulse ratio setup

**Name:** Water Meter Name

**Alarm:** enable / disable controller’s alarm in main screen

**Time:** flow absent time before to generate alarm

**Message:** send alert message through message system.

**Stop:** halt controller when changes status or not.


**Log:** save status activity on logbook.

Settings | FlowMeter  
WM1  
Factor: 1  
Mode: Pulse/Litre  
Name: WM1  
Alarm: Enable

Settings | FlowMeter  
WM1  
Time: 00h 10m  
Message: No  
Stop: No  
Log: No

## Temperature compensation for pH channel curve.

pH measurements are temperature dependent. The degree to which temperature affects mV readings varies from solution to solution and can be calculated using the following graphic.

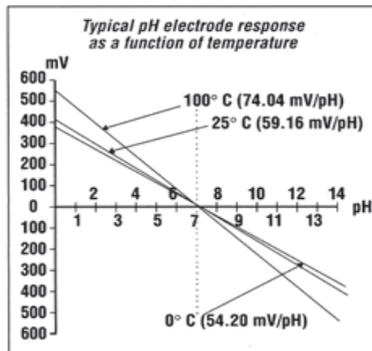

Instrument has either fixed or adjustable automatic temperature compensation referenced to a standard temperature of 25°C.

# “CENTURIO Tower” main menu: communication.

Main menu, Communication options are: ERMES, Mobile, Ethernet, Proxy, WiFi, Message and Modbus

## “ERMES”.

This menu allows to enable or disable “ERMES” remote management system. Option is ENABLED OR DISABLED. Before to enable it please configure at least one communication protocol between MOBILE, WiFi or Ethernet. Once the internet communication has been established, into main screen (see page 9) a confirmation icon will appears (e.g. ). Tap on it to complete “ERMES” configuration.

## “Mobile”.

This menu allows to configure the mobile communication when 3G GSM module has been installed. Options are:

**PIN:** Enter SIM PIN number (if required)

**APN:** According to your mobile operator, if required, enter the access point name. Usually this field is automatically assigned.

**Username:** Enter SIM Username (if required)

**Password:** Enter SIM Password (if required)

**WARNING: THIS FUNCTION COULD NOT BE FREE OF CHARGE. DEPENDING ON YOUR DATA PLAN IT COULD GENERATE PAYING SMS and/or DATA TRAFFIC !**



## “Ethernet”.

This menu allows to configure a cabled connection when an ethernet module has been installed. Usually a Dynamic configuration is suitable for most connections. Otherwise a Static configuration can be enabled according to LAN ADMINISTRATOR. If this is the case parameters to set are:


**IP:** static IP address assigned to the controller

**SubNet:** bitmask to encode the prefix length in quad-dotted notation

**Gateway:** (Internet) network node for outgoing connections

**DNS1 and / or DNS2:** server address for domain name and mapping

**Note:** for MODBUS access over TCP/IP instruct PLC to reach port 502.

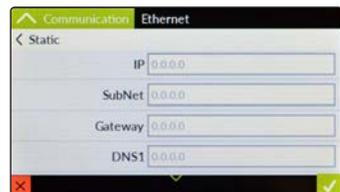

## “Proxy”.

This menu allows to configure the proxy server for the computer network service that allows clients to make indirect network connections to other network services. Ask to local ADMINISTRATOR about parameters to set.


In the most cases there is no need to configure this option.



The screenshot shows the 'Proxy' configuration screen under the 'Communication' menu. It features four input fields: 'Proxy IP' with the value '192.168.1.9', 'Proxy Port' with '8079', 'Proxy User', and 'Proxy Pwd'. A red 'X' icon is at the bottom left, and a green checkmark is at the bottom right.

## “WiFi”.

This menu allows to configure the wireless internet communication service when a WiFi module has been installed. Usually the controller automatically begin to scan for all networks available. At the end of scanning procedure tap on preferred network name and, if needed, enter password. If preferred network SSID (name) is hidden, ask to local ADMINISTRATOR about parameters to set.

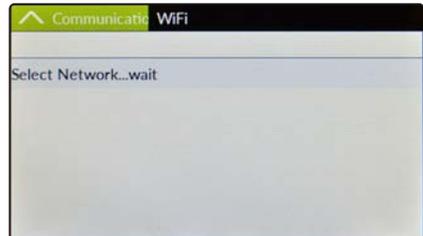

The screenshot shows the 'WiFi' configuration screen under the 'Communication' menu. It displays the text 'Select Network...wait' on a light blue background. A red 'X' icon is at the bottom left, and a green checkmark is at the bottom right.

## “Message”.

This menu allows to set up to 3 phone number and 3 email addresses for controller's alert messages. This option requires an ETHERNET or WiFi or Mobile module installed and properly configured. Tap on SMS or Email to configure it.

Telephone number format must be international.  
(e.g.: +39344123456)

Email address format must be xxxx@xxxx

WARNING: THIS FUNCTION COULD NOT BE FREE OF CHARGE.  
DEPENDENT ON YOUR DATA PLAN IT COULD GENERATE  
PAYING SMS and/or DATA TRAFFIC IF MOBILE CONNECTED!



The screenshot shows the 'Message' configuration screen under the 'Communication' menu. It has two options: 'SMS' and 'E-mail', with 'SMS' selected. A red 'X' icon is at the bottom left, and a green checkmark is at the bottom right.



The screenshot shows the 'SMS' configuration screen under the 'Message' menu. It has three input fields labeled 'Telephone 1', 'Telephone 2', and 'Telephone 3'. A red 'X' icon is at the bottom left, and a green checkmark is at the bottom right.



The screenshot shows the 'E-mail' configuration screen under the 'Message' menu. It has three input fields labeled 'E-mail 1', 'E-mail 2', and 'E-mail 3'. A red 'X' icon is at the bottom left, and a green checkmark is at the bottom right.

## “RS485” / “MODBUS”.

From this menu you can choose how the RS485 connection works. To set the RS485 port to operate as MODBUS protocol, choose the “MODBUS” entry and proceed with the configuration. To connect the controller to another one choose between “RS485 MASTER” (the controller will be the primary one and it will provide communication services) or “RS485 SLAVE” (the controller will be connected to others and it will receive the communication services from the MASTER). See page 40.



Modbus is a serial communications protocol originally published by Modicon (now Schneider Electric) in 1979 for use with its programmable logic controllers (PLCs). Simple and robust, it has since become a de facto standard communication protocol, and it is now a commonly available means of connecting industrial electronic devices. To configure this option a MODBUS module must be installed.

Set the ID assigning an UNIQUE address to avoid conflicts. According to connected device ensure that Baud Rate Speed is supported. Usually default value is the most suitable option.

---

### What is APN?

APN. Access point name (APN) identifies an IP packet data network (PDN), that a mobile data user wants to communicate with. In addition to identifying a PDN, an APN may also be used to define the type of service, (eg connection to wireless application protocol (WAP) server, multimedia messaging service (MMS)), that is provided by the PDN. APN is used in 3GPP data access networks, eg general packet radio service (GPRS), evolved packet core (EPC).

### What is a static IP address and a dynamic IP address?

A static IP address is a number (in the form of a dotted quad) that is assigned to a computer by an Internet service provider (ISP) to be its permanent address on the Internet. Computers use IP addresses to locate and talk to each other on the Internet, much the same way people use phone numbers to locate and talk to one another on the telephone. When you want to visit whatis.com, your computer asks a domain name system (DNS) server (think telephone information operator) for the correct dotted quad number (think phone number) for whatis.com and your computer uses the answer it receives to connect to the whatis.com server. It would be simple if every computer that connects to the Internet could have its own static IP number, but when the Internet was first conceived, the architects didn't foresee the need for an unlimited number of IP addresses. Consequently, there are not enough IP numbers to go around. To get around that problem, many Internet service providers limit the number of static IP addresses they allocate, and economize on the remaining number of IP addresses they possess by temporarily assigning an IP address to a requesting Dynamic Host Configuration Protocol (DHCP) computer from a pool of IP addresses. The temporary IP address is called a dynamic IP address.

Requesting DHCP computers receive a dynamic IP address (think temporary phone number) for the duration of that Internet session or for some other specified amount of time. Once the user disconnects from the Internet, their dynamic IP address goes back into the IP address pool so it can be assigned to another user. Even if the user reconnects immediately, odds are they will not be assigned the same IP address from the pool. To keep our telephone analogy going, using a dynamic IP address is similar to using a pay phone. Unless there is a reason to receive a call, the user does not care what number he or she is calling from.


There are times, however, when users who connect to the Internet using dynamic IP wish to allow other computers to locate them. Perhaps they want to use CU-SeeMe or use a VoIP application to make long distance phone calls using their IP connection. In that case, they would need a static IP address. The user has two choices; they can contact their ISP and request a static IP address, or they can use a dynamic DNS service. Either choice will probably involve an additional monthly fee.

Using a dynamic DNS service works as if there was an old-fashioned telephone message service at your computer's disposal. When a user registers with a DNS service and connects to the Internet with a dynamic IP address, the user's computer contacts the DNS service and lets them know what IP address it has been assigned from the pool; the service works with the DNS server to forward the correct address to the requesting DHCP computer. (Think of calling the message service and saying "Hi, I can be reached at 435.44.32.111 right now. Please tell anyone who tries to reach me to call that number.") Using a dynamic DNS service to arrange for computers to find you even though you are using a dynamic IP address is the next-best thing to having a static IP.

## “Graphics”.

“Centurio Tower” controller can graph readings value for every channel. Within main screen swipe to the left until option graphic screen is shown (see screenshot below). Tap on required graphic period (daily, weekly or monthly) and wait until all data are collected. Once the graphic has been shown tap on  to edit parameters (channel, date, time, etc...).

**Note:** based on amount of collected data / period, plotting time may be longer.

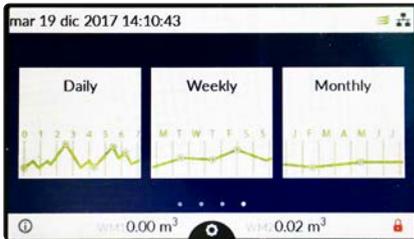

Choose



Plot

19/12/17 15:20				
Conductivity	23.6	Bleed Timeout	1	WM1
Chlorine	0.14			
Tracer	100	Tracer High	1	
19/12/17 15:00				
Conductivity	23.6	Bleed Timeout	1	WM1
Chlorine	0.14			
Tracer	100	Tracer High	1	

To alternate graphic / text view, swipe over graph

Change

## “USB Pendrive”.

“Centurio Tower” controller can import / export data such as setpoint configuration (backup & restore), log activity and firmware update through USB port (located to the right side of the controller). Insert a *FAT32 previously formatted* pendrive and wait until the controller discover it. Then choose between available options to perform requested operation.



USB port is located at the side of controller's box



Pendrive required minimum size: 1GB.

## “CORROSION” Percentual and Proporional Modes

When the ECORR probe is installed, the instrument can be configured to read and control the corrosion rate in the pipes of a plant. In the main menu, touch the corrosion icon to access the main options.

**Setpoint:** enable / disable control on inhibitor dosage

**Corrosion Level:** tank level of anti-corrosion product

**Corrosion Alarm:** alarm management for high corrosion values


**Settings:** selection of alloy factor for type of pipes



**Example:** if MPY value set is exceeded, then the inhibitor PPM value is increased by the set percentage. When corrosion returns below the set value, the % mode will no longer act.

### “CORROSION SETPOINT”

This setpoint acts on the operating activity of the inhibitor if the instrument is set in WaterMeter PPM or CC / ST mode. For inhibitor control mode it is necessary to configure “Action Inhibitor”. For proportional mode operation configure the “Proportional” item.

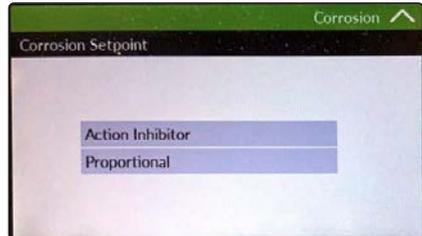


#### Action Inhibitor (percentual mode)

**Enable:** enable / disable setpoint activity on inhibitor

**% Action:** increase value on the activity of the inhibitor to exceeding the limit threshold

**Limit:** MPY limit threshold after which the increase starts percentage on the activity of the inhibitor

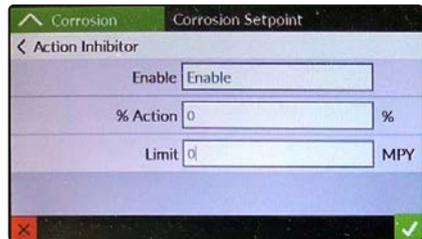

#### Proportional (mode)


**Working Mode:** enable / disable proportional setpoint mode

**Limit:** MPY limit threshold after which the output is activated

**Pulse Minute:** activity in pulses / minute of the “IS” pump if the set limit is exceeded

**Out Proportional:** choice of the analogue output on which the pump is connected to restore corrosion values

**Name:** name of the activity

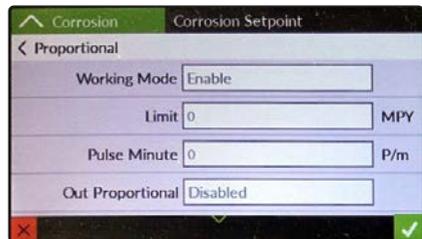

## CORROSION LEVEL

**Input:** enable / disable / select level probe input

**NO / NC:** sets the type of contact for the level probe input (normally open or normally closed)

**Stop:** Enable or disable controller's stop when contact changes state

**Name:** Name of the label

**Message:** Enable or disable alarm messages

**Log:** Enable or disable logging of the event log

Corrosion Level configuration screen showing: Input: Disabled, No/Nc: N.O., Stop: No, Name: Level.

Corrosion Level configuration screen showing: Stop: No, Name: Level, Message: No, Log: No.

## CORROSION ALARM

**Absolute:** "absolute" alarm algorithm

**Track:** "track" alarm algorithm

Indifferently select one of the two modes to enable the alarm

Corrosion Alarm selection screen showing: Disabled, Absolute (selected), Track.

Corrosion Alarm configuration screen (Absolute mode) showing: Alarm High: Absolute, ValueHigh: 9.25 MPY, Delay: 0h 0m, Name: High.

Corrosion Alarm configuration screen (Track mode) showing: Name: High, Message: No, Stop: No, Log: Yes.

Corrosion Alarm configuration screen (Track mode) showing: Alarm High: Track, ValueHigh: 9.25 MPY, Delay: 0h 0m, Name: High.

**Alarm High:** Enable or disable the alarm

**ValueHigh:** Corrosion limit value (MPY units)

**Delay:** Activation delay time

**Stop:** Enable or disable activity block if active


**Message:** Enable or disable alarm messages

**Log:** Enable or disable logging of the event log

**Label:** Name of the label

## “SETTINGS” / “ALLOY FACTOR” (SETTINGS / ALLOY)

Based on the construction material of the pipes, select the most suitable alloy factor value according to the following table:

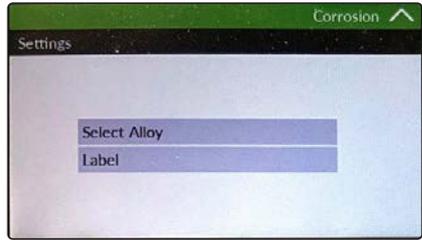



It is possible to assign a name to the type of material by selecting the LABEL item.

Common Designation	UNS	Alloy Factor
Aluminum AA1100	A91100	0.94
Aluminum Alloy AA6061	A96061	0.94
Copper CDA110	C11000	2.00
Arsenical Admiralty Brass CDA443	C44300	1.67
Mild Steel C1010	G10100	1.00
Stainless Steel 304	S30400	0.89

# Laser Level Sensor (via 485)

The SLL laser level sensor allows stable and reliable quantity detection of liquids in different sizes. It is also capable of detecting simply by distance, regardless of shape, color or surface finish. Shaft PVC made. This feature makes this sensor ideal for detecting the quantity of products in the tanks without any dependence on density, viscosity, color or degree of transparency. Connect the sensor to the instrument as described on page 43. The meter will automatically detect the new probe. Confirm by selecting the check mark.

From the main menu select „TANK“ and proceed with the configuration of the tank assigned to the sensor by selecting the item „Settings“. In this menu it is possible to set the type of tank (Select Tank), reset the previously entered configuration parameters (Reset Tank) or assign a custom name to the tank (Label Tank).

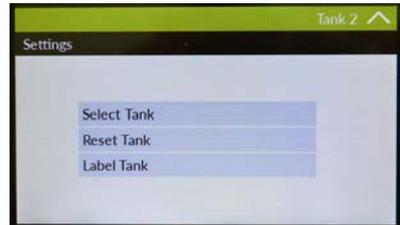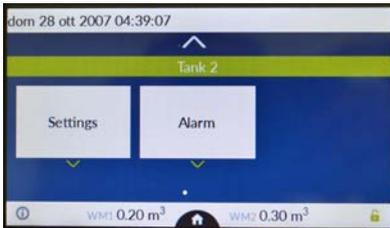

If the tank is not listed (CNTxx) it is possible to assign a generic tank and proceed to its configuration. From the menu „Select Tank“ select „GENERIC“. In the following screen it will be possible to configure the tank capacity parameters.

### Tank.

Tank name.

### Tank Min

Minimum product threshold.

Enter liters of the minimum product value related to the height from above. Eg.: At 90mm there are 5 liters of product.


### Tank Max

Maximum product threshold.

Enter liters of the maximum product value related to the height from above. Eg.: At 30mm there are 40 liters of product.

### Current Probe

Value in mm of the product currently read.

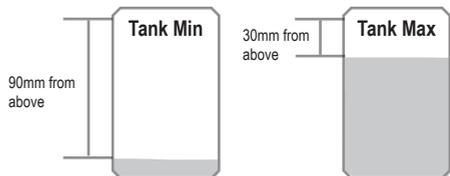

LED Status from SLL. The green LED shows the connection status as follows:

LED fast blinking: sensor not associated to controller

LED slow blinking: sensor connected, standby mode

LED on: working sensor



## Laser Level Sensor (via RS485) - Alarm Management

From the container menu (TANK) select the „Alarm“ item and set the configuration parameters as follows:

### Alarm Low.

Enable (Enable) or Disable (Disable) the alarm for low product in tank.

### Limit

Defines the minimum level of product in the tank in liters for the activation of the level alarm.

### Delay

Defines in hours and minutes the delay time between detection of the minimum level of product in the tank e activation of the level alarm.

### Label

Assigning the name of the tank.

### Stop

If set to „Yes“ the work activity of the instrument stops and an alarm message is generated.  
If set to „No“ a message is generated alarm but the instrument's activity is not interrupted.

### Message


If set to „Yes“ an alarm message is sent to the recipient configured in the communication menu.

### Log

If set to „Yes“, it records sensor operation activity in the event log as configured in the communication menu.




The screenshot shows the 'Alarm' configuration screen for 'Tank 2'. The 'Alarm Low' section is active, with the following settings: 'Alarm Low' is set to 'Enable', 'Limit' is '0' (with 'Liter' as the unit), 'Delay' is '0h 0m' (with 'h,m' as the unit), and 'Label' is 'Tank 2'. There are red 'X' and green checkmark icons at the bottom corners of the screen.

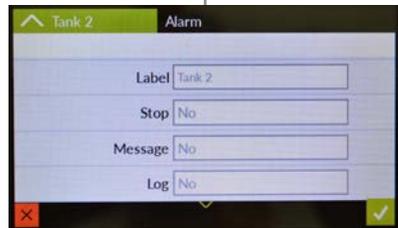

The screenshot shows the 'Alarm' configuration screen for 'Tank 2', with the 'Label' field set to 'Tank 2'. Below this, the 'Stop', 'Message', and 'Log' sections are visible, all set to 'No'. There are red 'X' and green checkmark icons at the bottom corners of the screen.

## Appendix - Probes Modules

CD Module

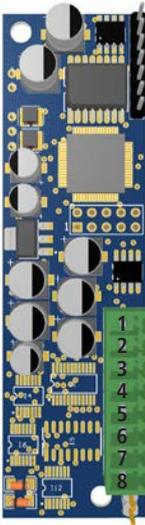


This module is suitable for **CONDUCTIVITY PROBE**

- 1) n/a
  - 2) PT100 yellow wire
  - 3) PT100 white wire
  - 4) PT100 brown wire
  - 5) PT100 green wire
  - 6) CD PROBE out red wire
  - 7) CD PROBE in black wire
  - 8) CD PROBE gnd
- 2) + 3) PT100 white wire
  - 4) + 5) PT100 green wire
  - 6) SONDE CD red wire
  - 7) SONDE CD black wire
  - 8) SONDE CD gnd

For ECDHLCPT/1

mA Module

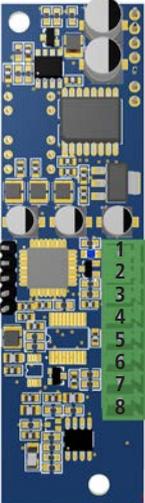

This module is suitable for **mA EXTERNAL DEVICE / LITTLE DIPER TRACER**


- 1) GND (i.e. black wire for tracer probe)
- 2) +12VDC (i.e. red wire for tracer probe)
- 3) PT100 yellow wire
- 4) PT100 white wire
- 5) PT100 brown wire
- 6) PT100 green wire
- 7) -mA signal INPUT (i.e. brown / green wire for tracer probe)
- 8) +mA signal INPUT (i.e. orange wire for tracer probe)



Warning: Connections must be performed by qualified and trained personnel only

## Appendix - Probes Modules

### CDIND / CDINDS Module

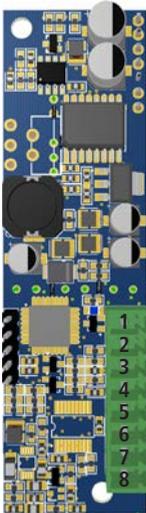


#### Connection for CD INDUCTIVITY PROBE

- 1) n/a
- 2) PT100 green wire
- 3) PT100 orange or pink wire
- 4) PT100 white wire
- 5) PT100 yellow wire
- 6) PROBE power supply red wire
- 7) PROBE signal grey wire
- 8) PROBE gnd blue and black wire

#### Connection for CD INDUCTIVITY PROBE mod. "S"

- 1) n/a
- 2) PT100 white wire
- 3) PT100 white wire
- 4) PT100 black wire
- 5) PT100 black wire
- 6) PROBE power supply red wire
- 7) PROBE signal green wire
- 8) PROBE gnd blue wire

### pH Module

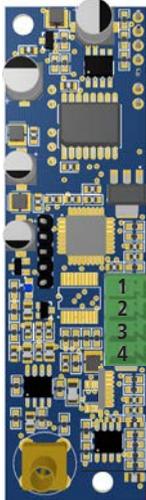

#### This module is suitable for pH / ORP / FI probes

- 1) PT100 yellow wire
- 2) PT100 white wire
- 3) PT100 brown wire
- 4) PT100 green wire


Probe Input



Warning: Connections must be performed by qualified and trained personnel only

## Appendix - Probes Modules


CI Module

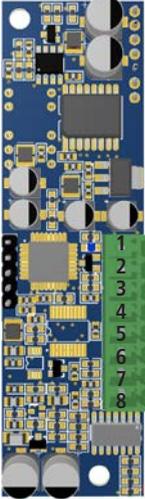

**This module is suitable for SVCL PROBE (suitable also for OPEN CELLS ECL6):**

- 1) -12VDC white wire SVCL probe
- 2) +12VDC brown wire SVCL probe
- 3) PT100 yellow wire
- 4) PT100 white wire
- 5) PT100 brown wire
- 6) PT100 green wire
- 7) +mV SVCL probe green wire (or ECL6 red wire)
- 8) -mV SVCL probe yellow wire (or ECL6 black wire)

CIDO Module

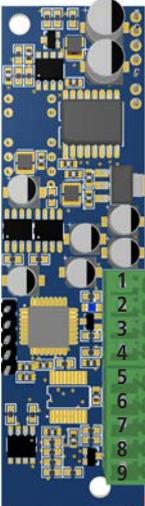

**This module is suitable for SCL / DO probe**

### SCL

- 1) PT100 yellow wire
- 2) PT100 white wire
- 3) PT100 brown wire
- 4) PT100 green wire
- 5) n/a
- 6) GND SCL black wire
- 7) +5VDC SCL red wire
- 8) -RS485 SCL green wire
- 9) +RS485 SCL white wire


\*without extra plug cable



Warning: Connections must be performed by qualified and trained personnel only

## Appendix - Probes Modules


### POTENTIOSTATIC

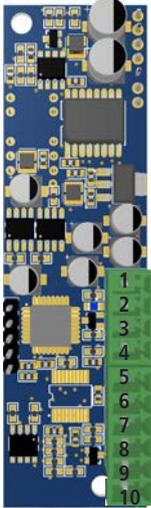

This module is suitable for POTENTIOSTATIC probe:

- |                                |                                |
|--------------------------------|--------------------------------|
| 1) PT100: Yellow wire          |                                |
| 2) PT100: White wire           |                                |
| 3) PT100: Brown wire           |                                |
| 4) PT100: Green wire           |                                |
| 5) n/a                         |                                |
| 6) n/a                         |                                |
| 7) Probe Type 1: Blue + Yellow | n/a                            |
| 8) Probe Type 1: Brown         | Probe Type 2: Grey Transparent |
| 9) Probe Type 1: White         | Probe Type 2: Shield           |
| 10) Probe Type 1: Green        | Probe Type 2: Black            |




### ETRC2 / ECORR MODULE

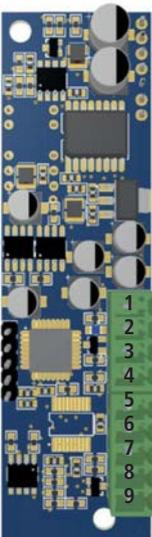

This module is suitable for ETRC2 / ECORR\* probes:

- 1) PT100: Yellow wire (ETRC2 probe only)
- 2) PT100: White wire (ETRC2 probe only)
- 3) PT100: Brown wire (ETRC2 probe only)
- 4) PT100: Green wire (ETRC2 probe only)
- 5) Red Wire +24 VDC
- 6) Brown\* Wire -24 VDC
- 7) n/a
- 8) Yellow Wire RS-485 B
- 9) Blue Wire RS-485 A

## Appendix - Dimensions (mm)

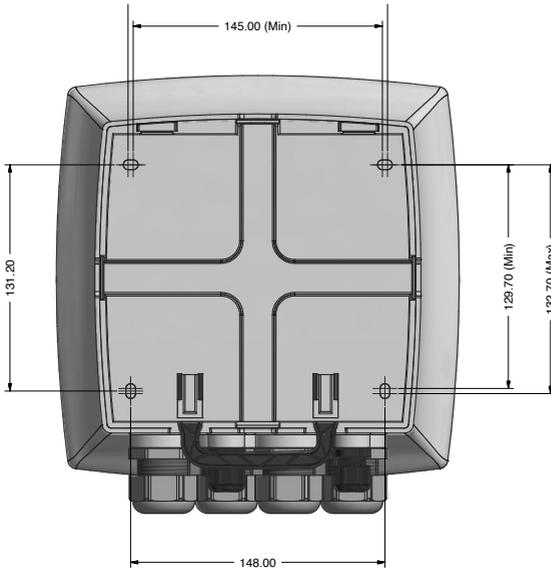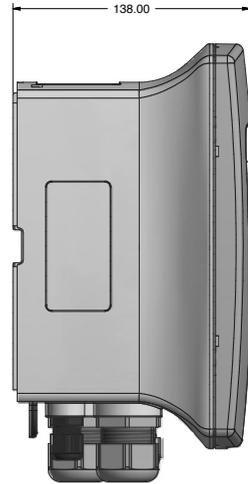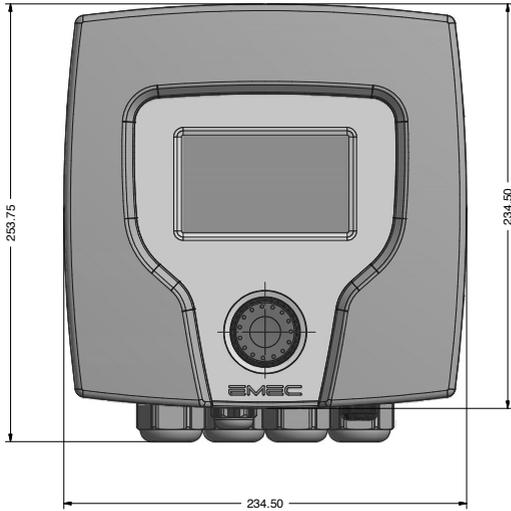


### ENCLOSURE

IP65 enclosure (NEMA4x)  
CENTURIO control  
CONTROLLER is manufactured  
in ABS housing to ensure  
protection against aggressive  
chemicals and tough  
environment.


### ENVIRONMENT

-10°C ÷ 50°C (14°F ÷ 122°F)  
0 ÷ 95% (non condensing)  
relative humidity

## Appendix - Lock / Unlock from the wall mounting rack

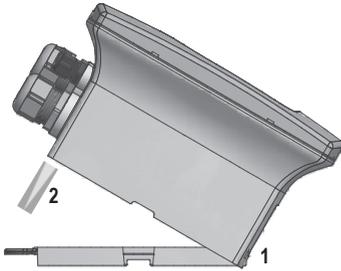


**LOCK**

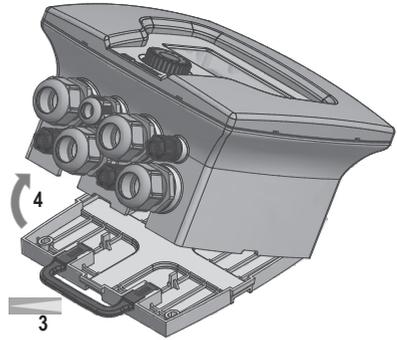

**UNLOCK**


To **lock** controller to the wall gently insert (1) upper case to the wall mounting rack and move it (2) down until it locks to the lower part of the wall mounting rack.

To **unlock** controller from the wall pull (3) the handle from the wall mounting rack and raise up (4) the controller.

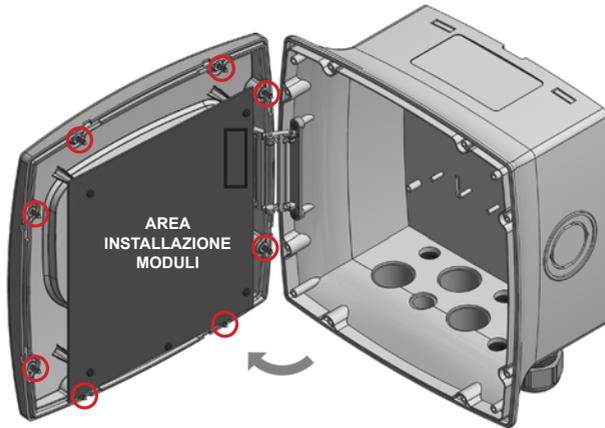

## Appendix - Adding / Removing probe modules / COMM Port / mA

To remove or add a new probe's module, first disconnect the controller from main power supply then remove the white front cover by pulling it. Unscrew the 8 screws and open main panel as shown in figure p.38 to gain access to modules. Install the new module to any slot available or remove unwanted modules by unscrewing it from main board. Slots order shown on the display is progressive from left to right.

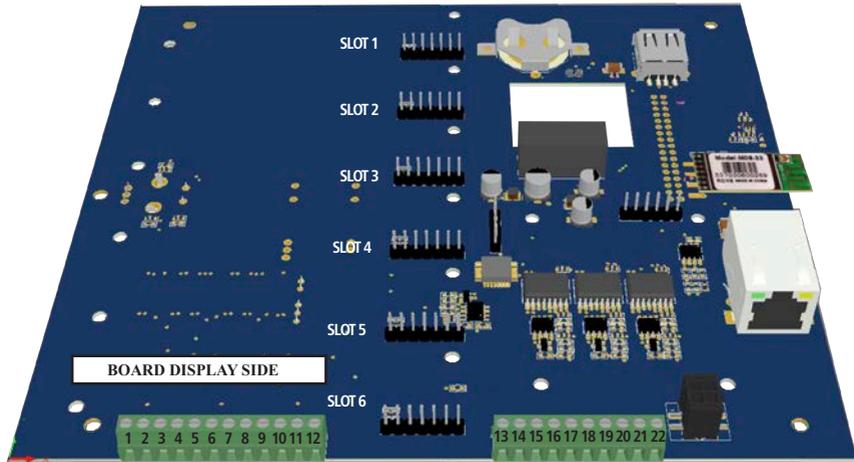

### I/O Connections:

1: mA Output n.6 n/a  
3: mA Output n.5  
5: mA Output n.4  
7: mA Output n.3  
9: mA Output n.2  
11: mA Output n.1  
2 / 4 / 5 / 8 / 10 / 12: GND

#### mA Outputs

13: GND (black wire)  
14: 12VDC (red wire)  
15: -RS485 (B) (green wire)  
16: +RS485 (A) (white wire)

#### LEVEL LASER SENSOR COMMUNICATION BUS / SERIAL PROBES

17: -RS485 (B)  
18: +RS485 (A)  
19: GND


#### COMMUNICATION PORT LEGACY CONTROLLERS (LD - LDS SERIES)

20: -RS485 (B)  
21: +RS485 (A)  
22: GND

#### COMMUNICATION PORT CENTURIO - LDOSIN SERIES - MODBUS


## Appendix - Adding / Removing communication modules

To remove or add a communication module, first disconnect the controller from main power supply then remove the white front cover by pulling it. Unscrew the 8 screws and open main panel as shown in figure to gain access to modules connectors.

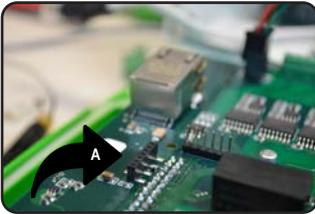

### A. WiFi Module Installation

Insert the module on the connector highlighted in the figure. Make sure that the antenna is properly connected.

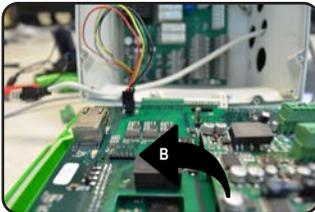


### B. MODEM (SIM) installation

Insert the module on the connector highlighted in the figure. Make sure that SIM is correctly inserted and active. Secure the module with the supplied screws.




## Appendix - Passing the wires through the cable-retaining ring


For the passage of the cables / wires through the rubber pad, it is necessary to make a cut in correspondence of the hole in order to favor the entrance of cable. Once the cable is inserted, it is possible to reassemble the rubber with the cable clamp by screwing it back to the instrument box.

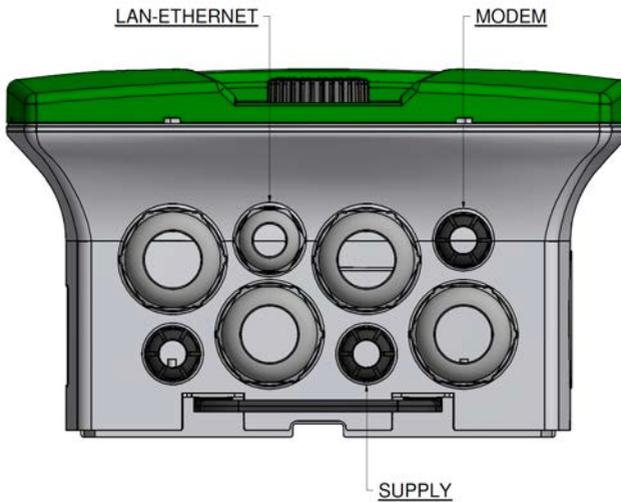

# Appendix - Logical Working Scheme

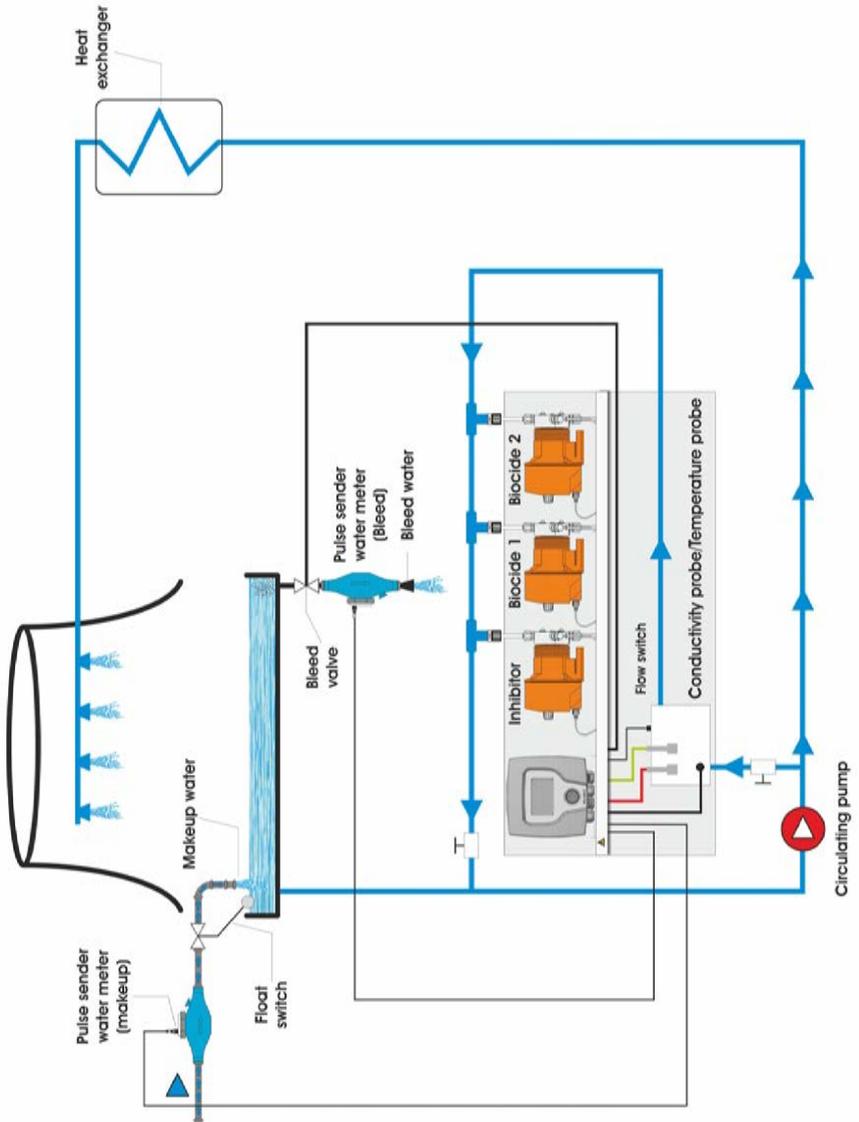


# Appendix - Motorized Electrovalve (2 points) installation i.e.: 1

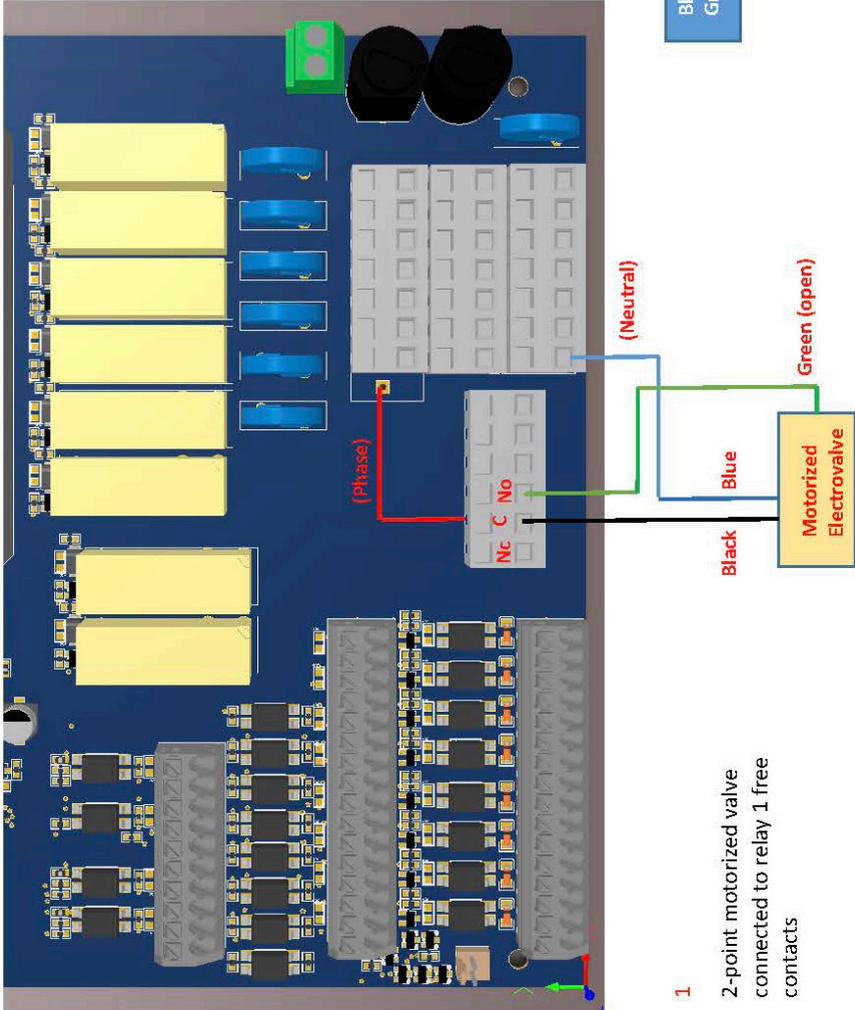

1

2-point motorized valve connected to relay 1 free contacts


# Appendix - Motorized Electrovalve (2 points) installation i.e.: 2

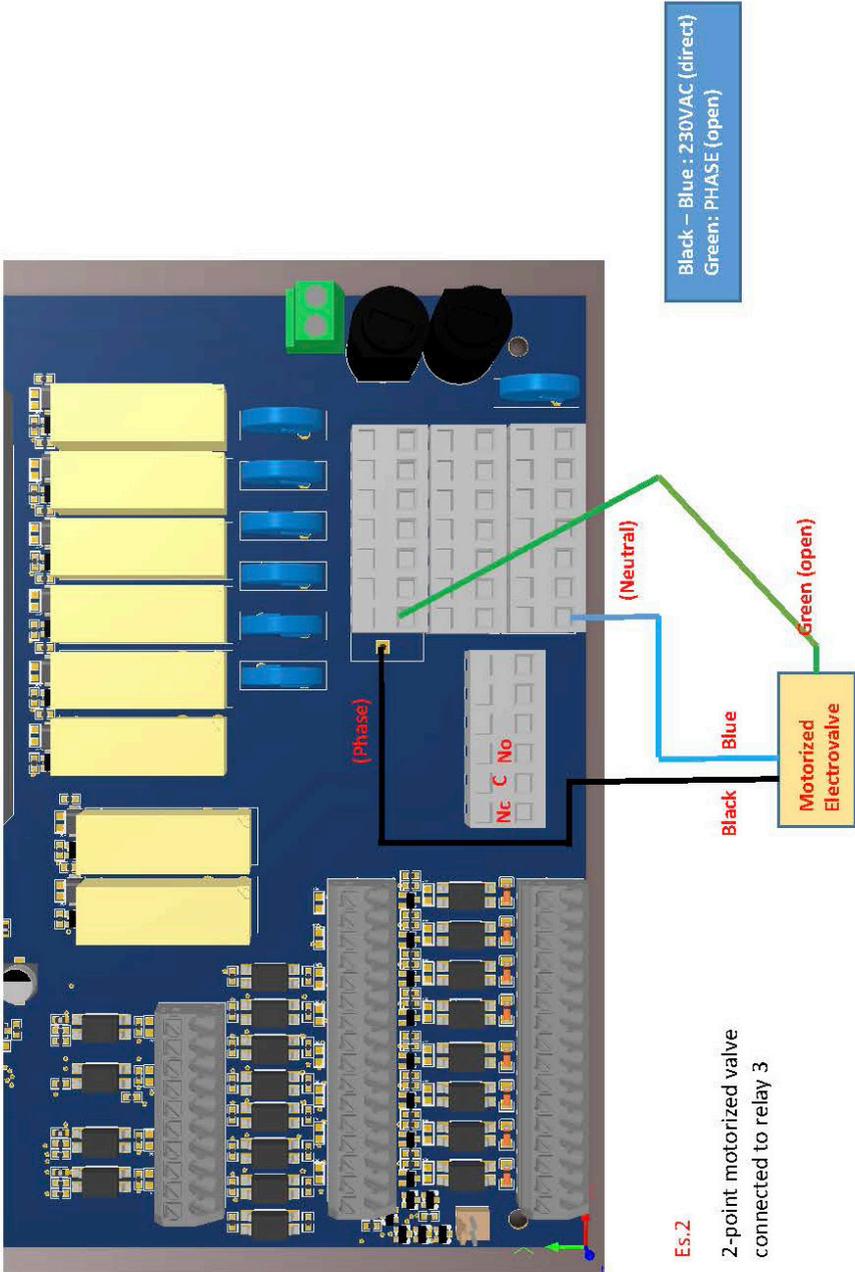


Es.2

2-point motorized valve connected to relay 3

# Appendix - Motorized Electrovalve (2 points) installation i.e.: 3

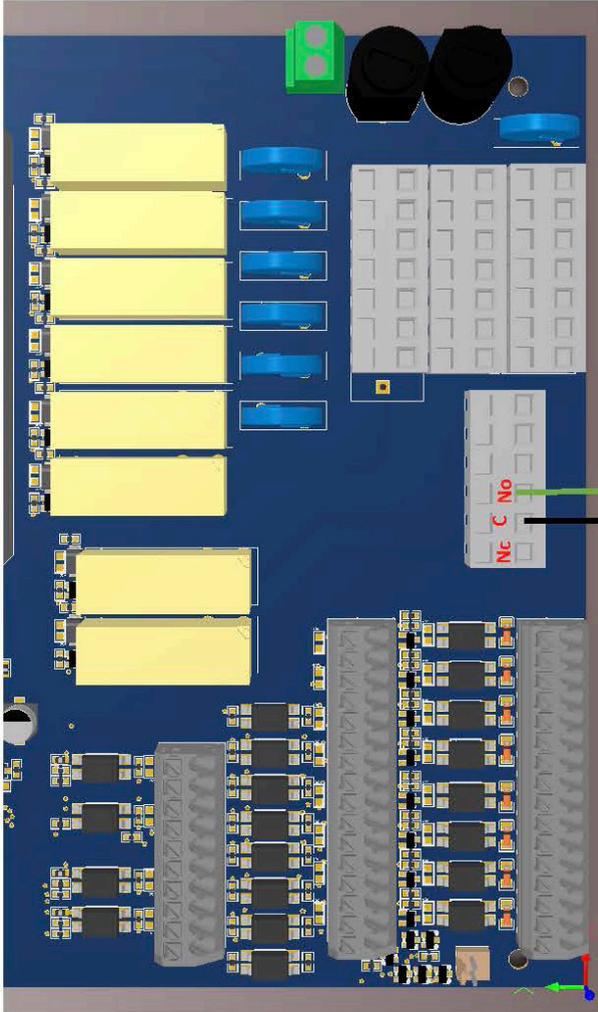

Black – Blue : 24Vac (direct)  
Green: 24Vac (open)

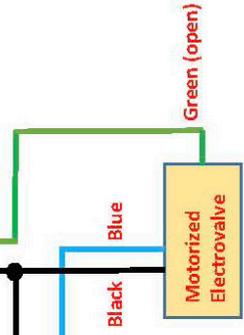

Es:3

Motorized 2-point 24Vac electric valve connected to relay 1


# INDEX

<b>INTRODUCTION</b>	page 3
The wheel and the touch screen	page 3
<b>MAINBOARD CONNECTIONS</b>	page 4
<b>COOLING TOWER BASICS KNOWLEDGE</b>	page 6
“CENTURIO Tower” BASIC TREATMENTS	page 8
“CENTURIO Tower” main screen	page 9
“CENTURIO Tower” basic settings	page 10
“International” menu	page 11
<b>“CENTURIO Tower” STANDARD SETTINGS</b>	page 12
“Calibration” menus	page 12
“Setpoints” menus	page 16
“Inhibitor” menu	page 25
“Biocide 1” / “Biocide 2” menus	page 26
“Bleed” menu	page 27
“Settings” menu	page 28
<b>“Communication” ADVANCED SETTINGS</b>	page 30
	ERMES
	Mobile
	Ethernet
	Messages
	WiFi
	Proxy
“Graphics” menu / “USB” pendrive setup	page 33
Anticorrosion Inhibitor Settings	page 34
Laser Level Sensor (RS485)	page 37
APPENDIX - Probes modules connection	page 39
APPENDIX - DIMENSIONS	page 43
APPENDIX - WALL mounting and modules installation	page 44
APPENDIX - I/O Board connections	page 45
APPENDIX - ADD / Remove Communication modules	page 46
APPENDIX - Wires connections	page 47
APPENDIX - Logical Working Scheme	page 48
APPENDIX - Motorized Valve installation	page 49
<b>INDEX</b>	page 52







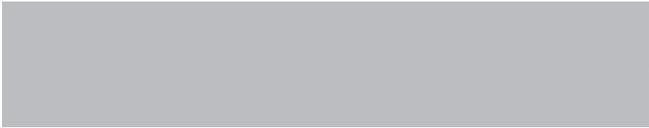

*When dismantling this product please separate material types and send them according to local recycling disposal requirements.  
We appreciate your efforts in supporting your local Recycle Environmental Program.  
Working together we'll form an active union to assure the world's invaluable resources are conserved.*