




EMEC PEA 108.1861.1 Installation Guide

Using Glass bodied probes with the EMEC PEA Probe Holder

Order of Installation

- Probe Holder threaded hexagonal nut,
- First O-ring,
- Plastic spacer -ensure chamfer is towards the top of the probe (Cable End),
- Probe Holder threaded body with second O-ring fitted into top groove,
- Screw entire assembly together as shown in "Assembled Diagram" (Below) and install into process.

Exploded Diagram

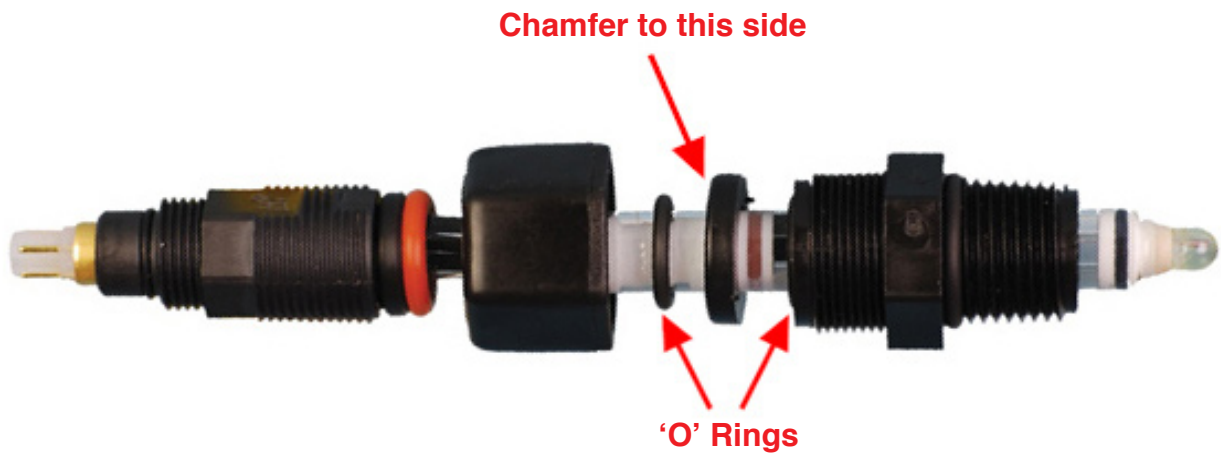

Assembled Diagram

