




This operating instructions contains safety information that if ignored can endanger life or result in serious injury. They are indicated by this icon.



Use of this pump with radioactive chemicals is forbidden!

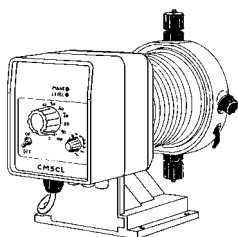

## OPERATING INSTRUCTIONS MANUAL FOR “CMS ANALOG” SERIES DOSING PUMP



Keep the pump protected from sun and water.  
Avoid water splashes.



Please read it carefully!

English language

R1-01-08

### « CE » referring norms



“CMS Analog” series dosing pumps comply with the following European regulations:

EN60335-1 : 1995, EN55014, EN50081-1/2, EN50082-1/2, EN6055-2, EN60555,3

Based on directive CEE 73/23 c 93/68 (DBT Low voltage directive) and directive 89/336/CEE (EMC Electromagnetic Compatibility)



## GENERAL SAFETY GUIDELINES

### **Danger!**

In emergencies the pump should be switched off immediately! Disconnect the power cable from the power supply!

When using pumps with aggressive chemicals observe the regulations concerning the transport and storage of aggressive fluids!

When installing outside European Community, always observe national regulations!

Manufacturer is not liable for any unauthorized use or misuse of this product that can cause injury or damage to persons or materials!

### **Caution!**

Pumps must be accessible at all times for both operating and servicing. Access must not be obstructed in any way!

Feeder should be interlocked with a no-flow protection device to automatically shut-off the pump when there is no flow!

Pumps and accessories must be serviced and repaired by qualified and authorized personnel only!

Always discharge the liquid end before servicing the pump!

Empty and rinse the liquid end before work on a pump which has been used with hazardous or unknown chemicals!

Always read chemical safety datasheet!

Always wear protective clothing when handling hazardous or unknown chemicals!

### *Introduction:*

Metering Pumps “CMS Analog” Series are the ideal solution for low / middle dosing of chemicals. All control and setup parameters are available through knobs and a visual system (led).

### *Pump's capacity*

Flow rate is determined by the stroke length and by the stroke speed. The stroke length is adjustable from 0 to 100% using the stroke length adjustment knob. However dosing accuracy is guarantee within an adjustment range from 30% to 100%.

### *Models:*

<b>CMS CO</b>	Constant pump with stroke speed (frequency) adjustment
<b>CMS CL</b>	Constant pump with level control, stroke speed (frequency) adjustment
<b>CMS IS</b>	Constant-proportional pump driven by external digital signal with level control: to each external pulse correspond one pump stroke
<b>CMS PV</b>	Constant-proportional pump driven by external digital signal with pulse divider mode (ratio 1 to 1000) and level control
<b>CMS PVM</b>	Constant-proportional pump driven by external digital signal, level control , with pulse divider mode (ratio 1 to 100) and multiplier mode (ratio 1 to 10)
<b>CMS IC</b>	Constant-proportional pump driven by current signal (0/4mA = 0 pulses; 20mA = max pulses) and level control

### *Capacity:*

Pressure bar	Flow l/h
25	05
15	10
07	20
03	40
02	60


## 2. Unpacking

*Included into package:*

n.4	Dibbles ø6
n.4	Self tapping screws 4,5 x 40
n.1	Delayed fuse 5 X 20
n.1	Foot filter with valve
n.1	Injection valve
n.1	Level probe
m 2	Delivery pipe* (opaque PE)
m 2	Suction pipe * (transparent PVC)
m 2	Discharge pipe (transparent PVC)
n.1	This installation manual


\* If hose is 6x8 there is only a 4meters long hose.  
Cut to obtain suction and delivery hoses.

Remove the contents from the box.

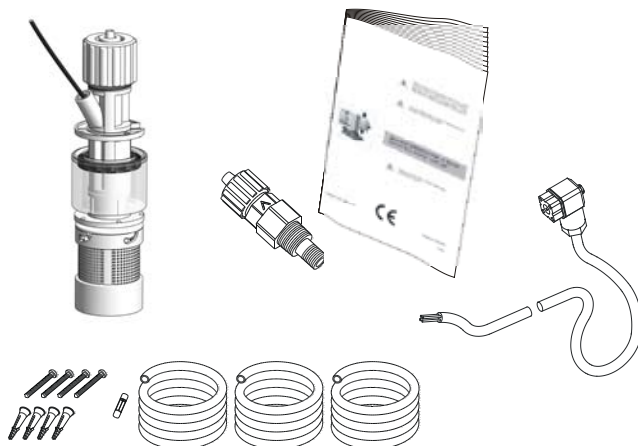

**PLEASE DO NOT TRASH PACKAGING.  
IT CAN BE USED TO RETURN THE PUMP.**

### 3. Pump's description

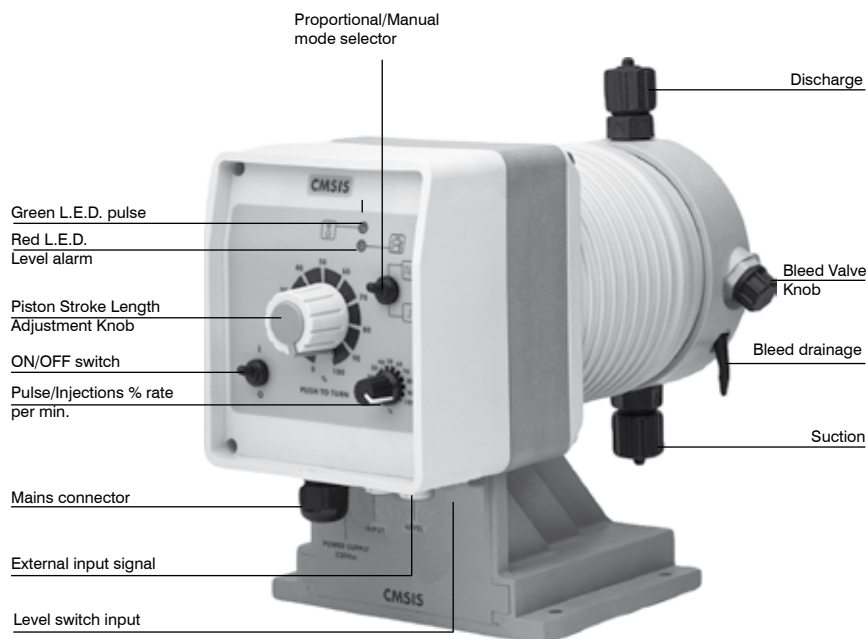

*\* Note:if knob isn't on 100% position  
then the pump will dose at pressure greater  
than the one declared on label.*

---

## 4. Before to Install warnings

---

Pump's installation and operativity is made in 4 main steps:

*Pump's installation*

*Hydraulic Installation (hoses, level probe, injection valve)*

*Electrical Installation (main power connection, priming)*

*Programming the pump.*

Before to start, please read carefully the following safety information.

### *Protective clothes*



*Wear always protective clothes as masks, gloves, safety glasses and further security devices during ALL installation procedure and while handling chemicals.*

### *Installation location*



*Pump must be installed in a safety place and fixed to the table / wall to avoid vibration problems!*

*Pump must be installed in a easy accessible place!*

*Pump must be installed in horizontal position!*

*Avoid water splashes and direct sun!*

### *Hoses and Valves*



*Suction and delivery hoses must be installed in vertical position!  
All hoses connections must be performed using only hands' force!  
No tongs required!*


***Delivery hose must be firmly fixed to avoid suddenly movements that could damage near objects!***

***Suction hose must be shorter as possible and installed in vertical position to avoid air bubbles suction!***

*Use only hoses compatibles with product to dose! See chemical compatibility table. If dosing product is not listed please consult full compatibility table or contact chemical's manufacturer!*

## 5. Installation Draw

Pump must be installed in a stable support (for example a table) at a maximum height (**from tank's bottom**) of **1,5 meters**.

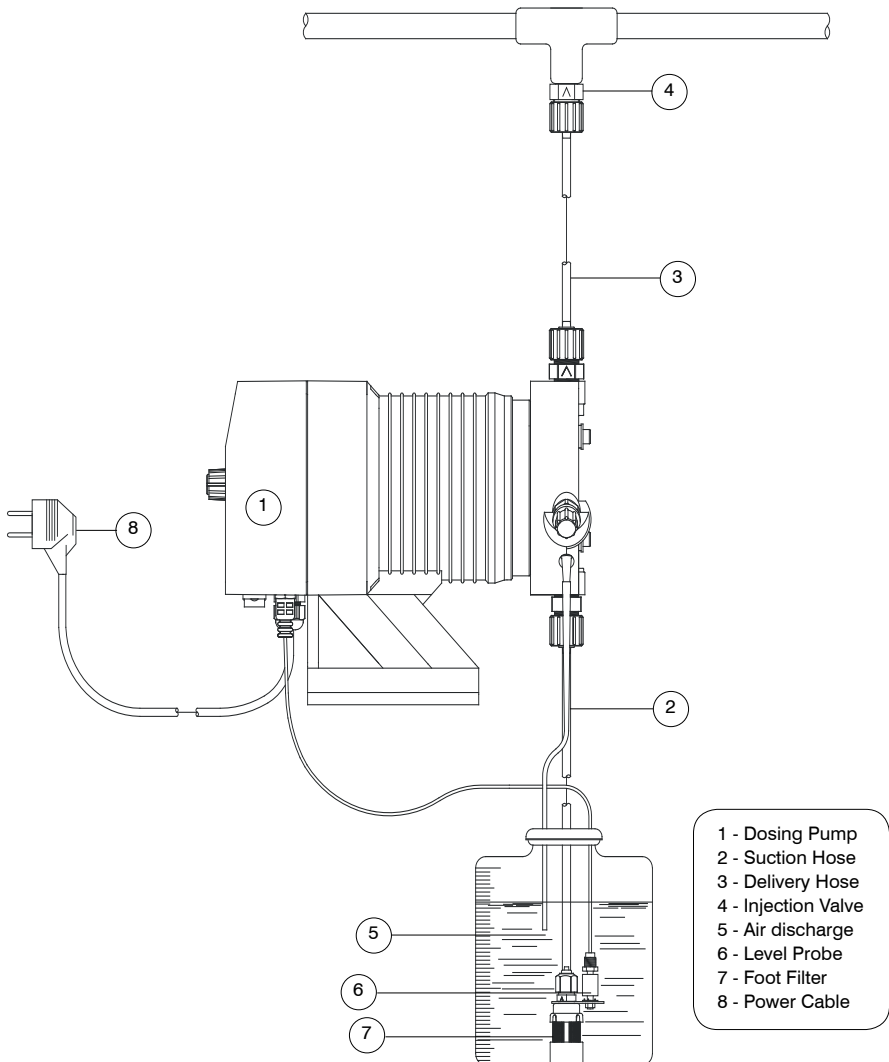

## 6. Hydraulic Installation

Hydraulic connections are:

*Suction Hose with level probe and foot filter*  
*Delivery Hose with injection valve*  
*Discharge Hose*

### Suction Hose.

Completely unscrew tightening nut from pump's head and remove assembling components: *tightening nut, holding ring and pipe holder.*

Assembly as shown in fig. (A). Insert hose into pipe holder until it reaches the bottom.

Lock hose on pump's head by screwing down the tightening nut.  
Use only hands to do it!

Connect other side of the hose to the foot filter using the same procedure.

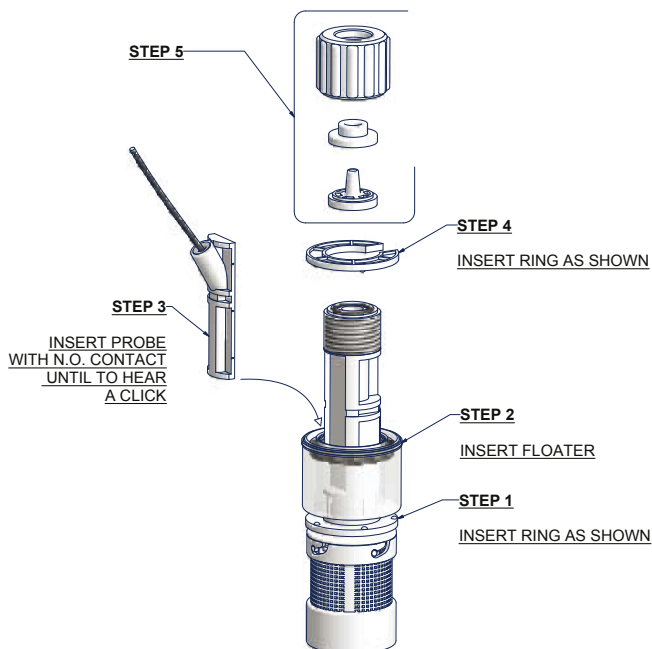


fig. (A)



### Assembling foot filter with level probe.

Level probe must be assembled with foot filter using the provided kit. Foot valve is made to be installed into tank's bottom without sediments priming problem.



Connect BNC from level probe into pump's level input (front side of the pump). Put level probe assembled with foot filter into tank's bottom.

**Warning:** If there is a mixer installed into tank, install a suction lance instead of level probe / foot filter.

### Delivery Hose.

Completely unscrew tightening nut from pump's head and remove assembling components: *tightening nut, holding ring and pipe holder*.

Assembly as shown in fig. (A). Insert hose into pipe holder until it reaches the bottom.

Lock hose on pump's head by screwing down the tightening nut. Use only hands to do it!

Connect other side of the hose to the injection valve using the same procedure.

## 6. Hydraulic Installation

---

### ***Injection Valve.***

Injection valve must be installed on plant from water's input.  
Injection valve will open at pressure greater than 0,3bar.

### ***Discharge hose.***

Insert one side of discharge hose into discharge connector as shown in fig (C).

Insert other side of discharge hose into product's tank.  
During priming procedure product exceeding will flow into tank.


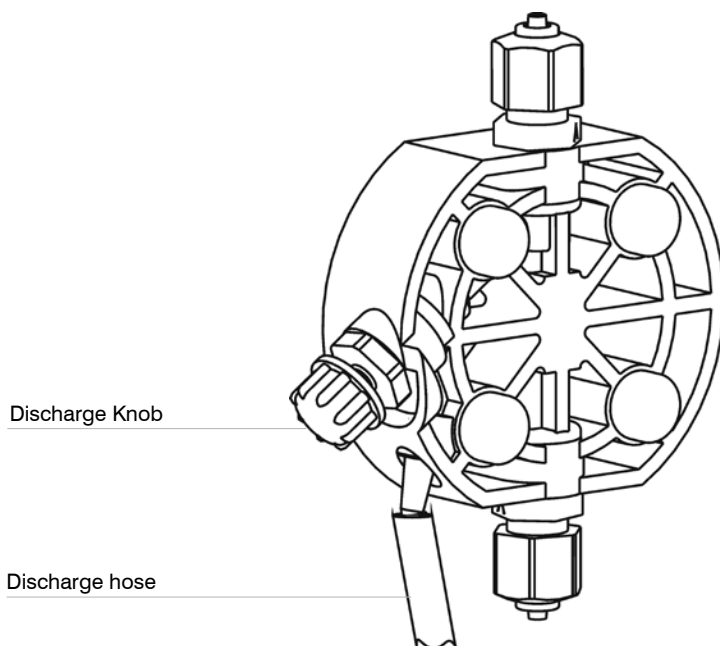


fig (C)

For priming procedure see page the chapter "Priming".

### **Self-venting pump head.**

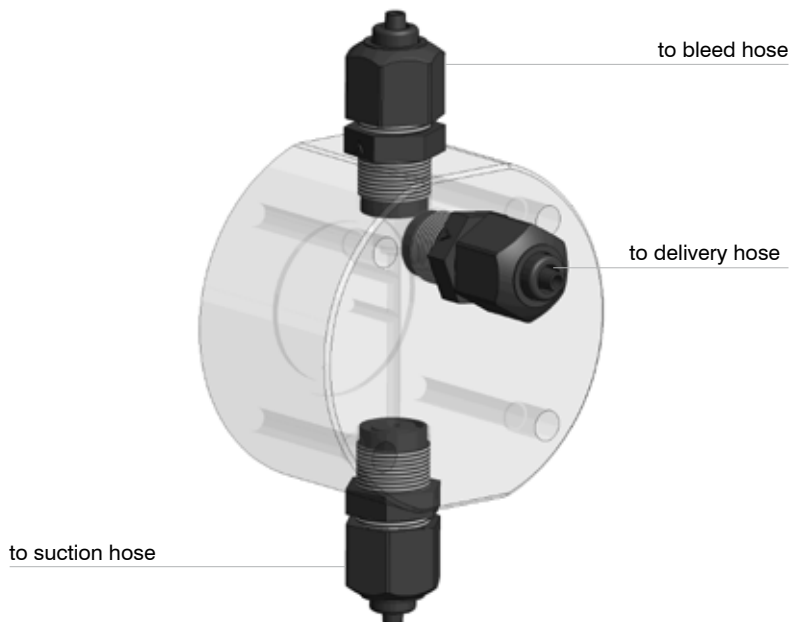

*Self-venting* pump head must be used when using chemicals that produce gas (i.e. hydrogen peroxide, ammonium, sodium hypochlorite at particular conditions).

Hoses assembling procedure (*including purge hose*) is described in fig. (A).


#### **Notes:**

- suction, delivery and purge valves are DIFFERENT! Do not exchange them!
- delivery and purge hoses are made of same material!
- it's allowed to lightly bend discharge hose!
- during calibration procedure ("TEST") insert discharge hose into BECKER test-tube!

## 7. Electrical Installation

All electrical connections must be performed by **AUTHORIZED AND QUALIFIED** personnel only. Before to proceed, please, verify the following steps:

- verify that pump's label values are compatible with main power supply.
- pump must be connected to a plant with a differential switch (0,03A sensitivity) if there isn't a good ground.
- to avoid damages to the pump do not install it in parallel with heavy inductance load (for example: engines). A relay switch must be used. See below picture.

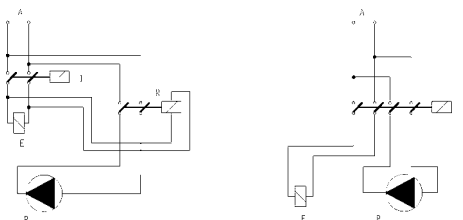

*P - Dosing Pump*


*R - Relay*

*I - Switch or safety device*

*E - Electrovalve or inductance load*


*A - Main Power*

- On pump's mother board there is a further protection against over voltages (275V - 150V) and distribution line noises (4KV for max 50 $\mu$ sec) as shown:

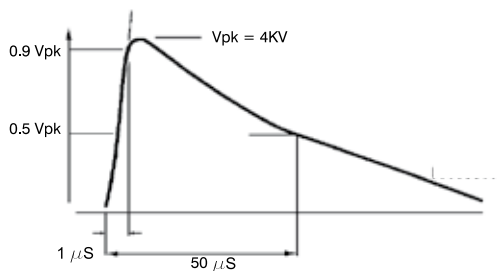

Once verified previous steps proceed as follows:

- check that “BNC” of level probe has been connected as described in “Hydraulic Installation” chapter.
- connect “BNC” and external signal to pump’s “INPUT” connectors.

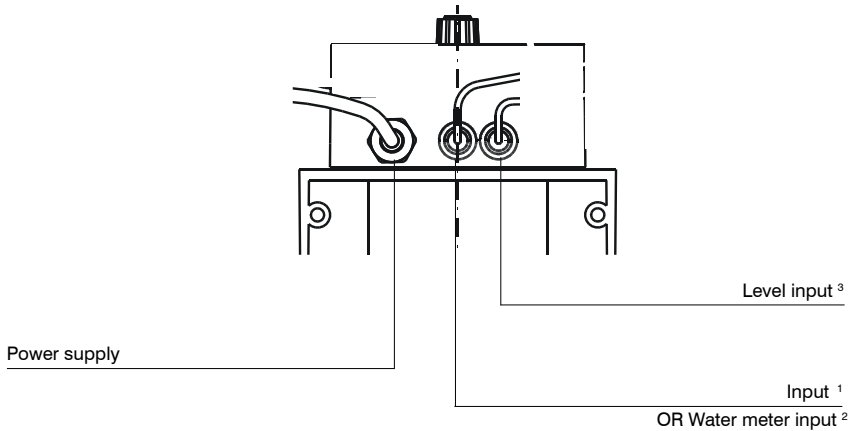

<sup>1</sup> Only for CMS IC; CMS IS model.

<sup>2</sup> Only for CMS PV; CMS PVM model.

<sup>3</sup> Not available for CMS CO model.

---

## 8. Models

---

### LEVEL ALARM

CL, IS, IC, PV and TE type pump are provided with a liquid level alarm to indicate if product tank is empty. The level probe is connected to the right BNC plug on pump's bottom panel. The level probe is made of a N.O. reed contact (10VA, 1A max, 230Vac max) closed by a floating magnet housed in a (PP) plastic box. When the product level goes below the minimum the magnet closes the reed contact. The pump stops and the red LED on pump's front panel indicates the alarm status.

### PUMP TYPES

"CMS Analog" series pump capacity can be reduced 10 or 100 times operating the 1/10/100 switch in the frontal panel, the % marked knob will act on this set capacity.



#### **CMS CO**

*Constant* dosing pump with stroke speed adjustment between 0 and 100% of indicated capacity (see label on pump type). The % marked knob sets the pump capacity, changing linearly the magnet stroke number per minute. It is strongly suggested to not operate the pump in the range from 0 to 10%, since there is not a linear correlation with the pump stroke speed in that range. This pump is specially designed for constant dosing rates. CMS CO pump can be ON/OFF driven by a LPH or a LCD instrument. To set 2 l/h against 10 bar on a CMS CO 1004 the % marked knob should be set to 50%.

#### **CMS CL**



*Constant dosing pump with level alarm*, provided with a floating magnetic sensor probe. A red led indicates that the pump stops dosing because the product tank is empty. This pump has the same features and adjustments of the CO type pump.

#### **CMS IC**



*Proportional/constant* pump driven by current signal. Setting the switch on the *constant*  position, the pump has the same features and adjustments of the CL pump. Setting the switch on the *proportional*  position, the pump capacity is set proportionally to a given analog current signal; a given linear change of the signal will be followed by a linear change of capacity.

The current signal accepted range is 0 ÷ 20 mA (it can be changed upon demand). The maximum pump capacity requested by the maximum input signal is set by the % marked knob. The IC pump can be driven by any electronic device (such as pH-meter, RH-meter, etc) that gives an analog current signal output. This signal must be applied to the bipolar cable provided with the pump, already internal connected, being care to connections: red wire: *positive* (+); black wire: *negative* (-).

**CMS IS**

*Proportional/constant* pump driven by a digital signal. Setting the switch on the *constant*  position, the pump has the same features and adjustments of the CL pump. Setting the switch on the *proportional*  position, to each external voltage free pulse correspond a magnet stroke. When proportional position is set, the % marked knob does NOT affect the pump capacity. The IS proportional dosing pump can be driven by any external device (PCs, PLCs, etc.) that produce a digital signal. The digital signal (N.O. contact) must be applied to the cable provided with the pump, already internal connected. If it is requested a 0÷5; 0÷12 Vdc input signal option, be care to connections: red wire: *positive* (+); black wire: *negative* (-).

**CMS PV**

*Proportional/constant* pump driven by a water meter digital signal. Setting the switch on the *constant*  position, the pump has the same features and adjustments of the CL pump. It is furthermore possible to divide the maximum magnet strokes per minute by 1, 10 and 100 using the switch on the front panel. Setting the switch on the *proportional*  position, to each external pulse correspond one pump stroke. This pump can be driven by a CTFI or CWFI series water meters. This pump can also be driven by a digital signal coming from a voltage free contact. Driving signal is applied on the BNC plug on the left bottom of the front cover. Dividing factor (N) value is obtained multiplying the value indicated on the adjustment knob by the multiplying switch (x1, x10, x100) value.

**Capacity definition for “CMS PV” pump**

Given the water m<sup>3</sup> to be treated and the product amount to dose in p.p.m., the minimum pump capacity to be used can be obtained with the following formula:

$$\frac{\text{ppm} \times K \times \text{m}^3}{1000} = \text{l/h}$$

*l/h* - minimum pump capacity required

*ppm* - product amount to dose in p.p.m. (gr/m<sup>3</sup>)

*k* - dosed product dilution factor (pure chemical *k*=1)

*m<sup>3</sup>* - maximum capacity of the system to be treated in m<sup>3</sup> /h.

Dividing factor (N) to be set on the adjustment knob is given by the following formula:

$$\left( \frac{\text{imp/l} \times \text{cc}}{\text{ppm} \times K} \right) \times 1000 = N$$

*N* - is the number the external pulses are divided by to be set on the adjustment knob

*imp/l* - pulse per liter given by the water meter

*cc* - pump's single stroke dosing quantity (in cc). Refer to following table

*k* - dosed product dilution factor (pure chemical *k*=1)

*ppm\** - product amount to dose in p.p.m. (gr/m<sup>3</sup>)



\* 10.000 ppm equals to 1%

## 8. Models

Pump model	cc max	Piston displacement
CMSPV 0260	8,4	100%
CMSPV 0340	5,6	100%
CMSPV 0720	2,8	100%
CMSPV 1408	0,89	100%
CMSPV 1804	0,45	100%
CMSPV 1510	1,4	100%
CMSPV 2505	0,70	100%

If the dividing factor (N), obtained with the above formula, is  $<1$ , a pump with higher single stroke dosing quantity is required or the water meter needs to be changed with one that gives higher number of pulses per liter. In some application this issue can be solved reducing the dosed product dilution factor. If dosed amount is higher than the needed one, the set dividing factor (N) can be increased.

### CMS PVM

*Proportional/constant* pump driven by a water meter digital signal. Setting the switch on the *constant*  position, the pump has the same features and adjustments of the CL pump. It is furthermore possible to divide the maximum magnet strokes per minute by 1 ( $\div 1$ ), 10 ( $\div 10$ ) and 100 ( $\div 100$ ) using the selector on the front panel. The electronic capacity adjustment sets the injection per minute. Setting the switch on the *proportional*  position and the selector on “multiplier” (X1), the pump gives a stroke each 10 external pulses sent. Setting the selector on “divider” ( $\div 1$  or  $\div 10$ ), the pump gives at maximum a stroke each external pulse sent and at minimum a stroke each 100 pulses sent. This pump can be driven by a CTFI or CWFII series water meters. This pump can also be driven by a digital signal coming from a voltage free contact. Driving signal is applied on the BNC plug on the left of the bottom pump cover.



### PRIMING

To prime the pump without touching chemicals please do as follow:

- connect all hoses into proper places (delivery hose, suction hose, outgassing hose).
- open outgassing valve and turn on the pump.
- set pump's single injection at 100% and pulses at 50%.

All air inside the pump head will exit through the outgassing outlet. When product will leak from it, close immediately the outgassing valve. If dosing product is particularly dense, to facilitate the priming, insert on vent pipe a syringe of 20 cc and suck inside.

## 10. Troubleshooting

Problem	Possible Cause
<b>Pump doesn't turn on.</b>	<p><i>Pump isn't powered. Connect it to main supply.</i></p> <p><i>Pump's protection fuse is broken. Replace it. See page 19 for replacement procedure.</i></p> <p><i>Pump's main board is broken. Replace it. See page 19 for replacement procedure.</i></p>
<b>Pump is not dosing and solenoid is operating.</b>	<p><i>The foot filter is obstructed. Clean it.</i></p> <p><i>Suction hose is empty. Pump must be primed. Repeat priming procedure.</i></p> <p><i>Air bubbles inside hydraulic circuit. Check valves - hoses - fittings.</i></p> <p><i>Product to dose is generating gas. Turn discharge knob and let air flow away.</i></p> <p><i>Use a self-venting pump head.</i></p>
<b>Pump is not dosing and solenoid isn't operating or slightly operating.</b>	<p><i>Crystals presence inside valves. Check them and try to dose 2-3 liters of normal water. Change valves.</i></p> <p><i>Injection valve obstructed. Change it.</i></p>

---

## 11. Fuse and main board replacement

---

Fuse or main board replacement is allowed to qualified personnel only. Before to operate disconnect the pump from main power and all hydraulic connections.

For fuse replacement is necessary to use a 3x16 and 3x15 screwdriver and a new fuse (same model of old one).

For main board replacement is necessary to use a 3x16 and 3x15 screwdriver and a new main board (same model of old one).


### ***Fuse replacement procedure:***

- Turn pump's injection knob on 0%.
- Remove 6 screws from pump's back.
- Pull pump's back cover until it's completed separated from pump's front. Be careful of the knob's spring.
- Locate the blown fuse and replace it.
- Reassemble the pump. Be careful to put back the knob's spring.
- Reinsert screws.


### ***Main board replacement procedure:***

- Turn pump's injection knob on 0%.
- Remove 6 screws from pump's back.
- Pull pump's back cover until it's completed separated from pump's front. Be careful of the knob's spring.
- Remove board's screws.
- Completely disconnect wires from main board and replace it. Reinsert screws.
- Reconnect wires to the main board (see enclosed picture).
- Reassemble the pump. Be careful to put back the knob's spring.
- Reinsert screws.


12. Main Board

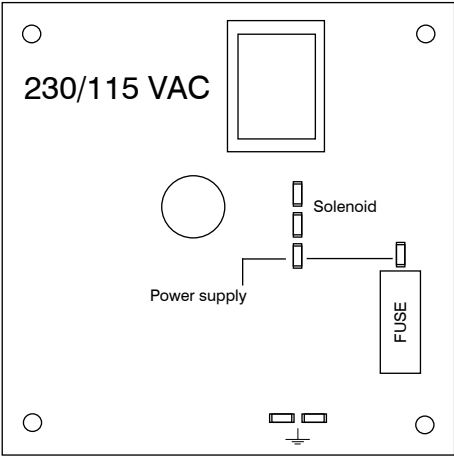


“CO” Power  
Circuit Board

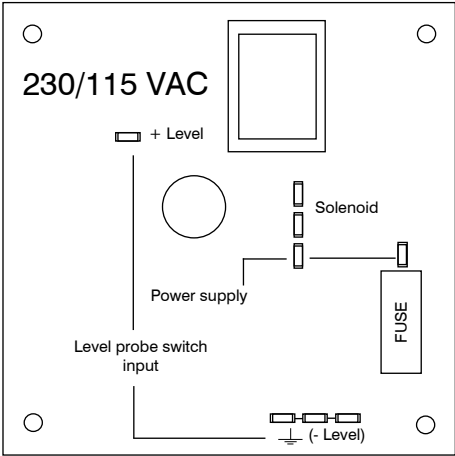

“CL” Power  
Circuit Board

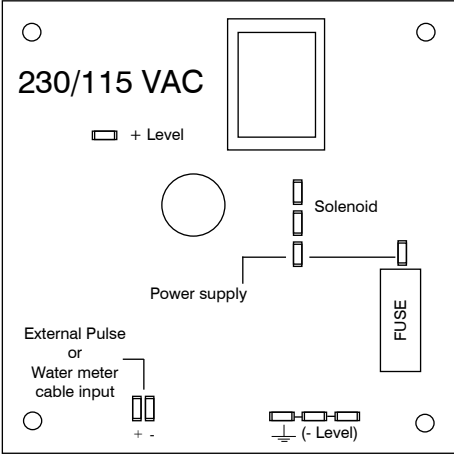

“IS/IC” Power  
Circuit Board

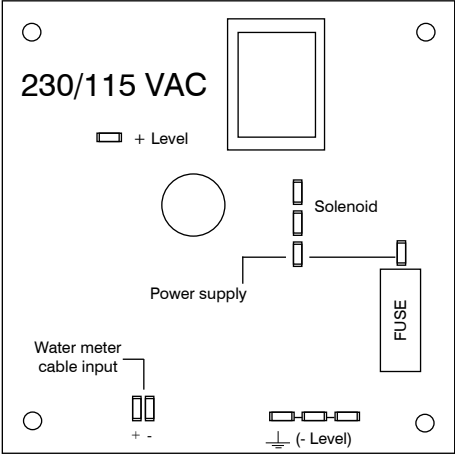

“PV” Power  
Circuit Board

During normal operating mode, pump must be checked once for month. Wear needed safety devices and check hoses and all hydraulic components for:

- product leak
- broken hoses
- corroded connections

**All maintenance operations must be performed by authorized and trained personnel only. If pump needs factory assistance please use original package to return it. Before to do it, please, remove all dosing product inside the pump and hoses. Use only original spare parts!**

## B Appendix. Construction Materials and Technical info

### Technical Features and Manufacturing materials

#### TECHNICAL FEATURES

Power supply:	230 VAC (180-270 VAC)
Power supply:	115 VAC (90-135 VAC)
Power supply:	24 VAC (20-32 VAC)
Power supply:	12 VDC (10-16 VDC)
Power supply:	24 VDC (20-32 VDC)
Pump strokes:	0 ÷ 120 injections/minute
Suction Height:	1,5 metres
Environment Temperature:	0 ÷ 45°C (32 ÷ 113°F)
Chemical Temperature:	0 ÷ 50°C (32 ÷ 122°F)
Protection degree:	IP 65

#### MANUFACTURING MATERIALS

Case:	PP
Pump head:	PP, PVDF, PMMA, SS *
Diaphragm:	PTFE
Balls:	CERAMIC, GLASS, PTFE, SS *
Suction Pipe	PVC/PE **
Delivery Pipe:	PE
Valve Body:	PP, PVDF, SS *
O-ring:	FP, EP, WAX, SI, PTFE *
Injection connector :	PP, PVDF (ceramic, HASTELLOY C276 spring)
Level Probe:	PP, PVDF *
Level probe cable:	PE
Foot Filter:	PP, PVDF *

\*as ordered.


\*\* according with pump's model.

MORE INFORMATION								
	Flow				cc per Stroke		Maximum injection Pressure	
	Min cc/h	Max l/h	Min GPH	Max GPH	Min	Max		
2505	150	5	0.039	1.32	0.21	0.70	25 bar	362 PSI
1510	300	10	0.079	2.64	0.42	1.4	15 bar	217 PSI
0720	600	20	0.158	5.28	0.84	2.8	7 bar	101 PSI
0340	1200	40	0.317	10.56	1.68	5.6	3 bar	43 PSI
0260	1800	60	0.475	15.85	2.52	8.4	2 bar	29 PSI
MORE INFORMATION FOR Self Venting MODELS								
253,2	96	3,2	0.025	0.84	0.13	0.44	25 bar	362 PSI
1506	180	6	0.047	1.59	0.249	0.83	15 bar	217 PSI
0713	390	13	0.103	3.43	0.543	1.81	7 bar	101 PSI
0330	900	30	0.238	7.93	1.251	4.17	3 bar	43 PSI

Pump head B

25 - 05


l/h 05  
bar 25

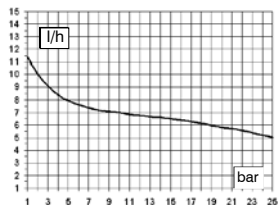

Pump head C

15 - 10


l/h 10  
bar 15

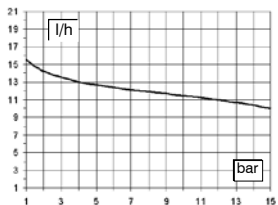

Pump head D

07 - 20


l/h 20  
bar 07

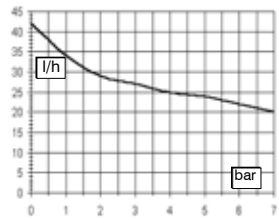

Pump head E

03 - 40


l/h 40  
bar 03

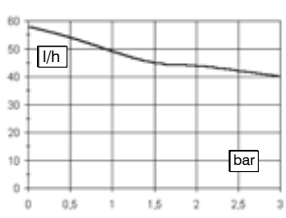

Pump head F






02 - 60

l/h 60  
bar 02

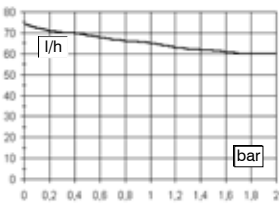

Flow rate indicated is for H<sub>2</sub>O at 20°C at the rated pressure. Dosing accuracy  $\pm 2\%$  at constant pressure  $\pm 0,5$  bar.


C Appendix. Delivery Curves for self-purge pump head

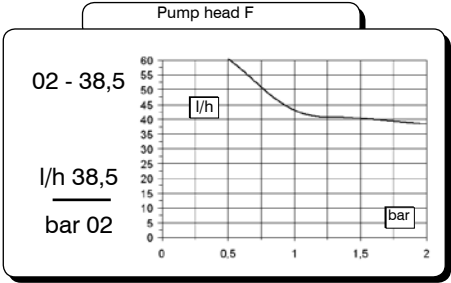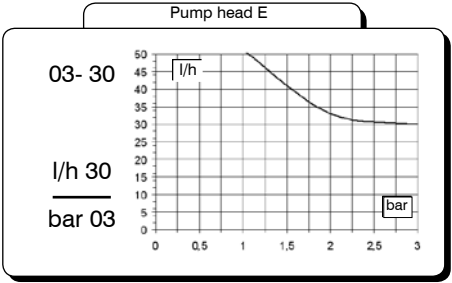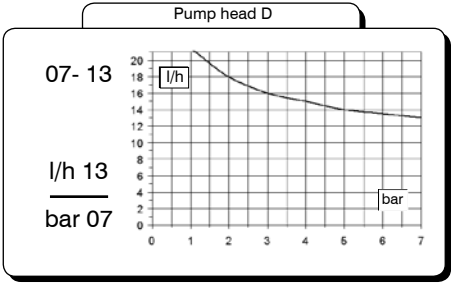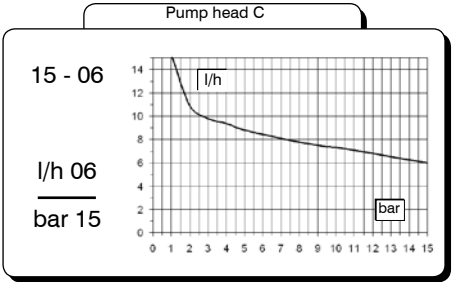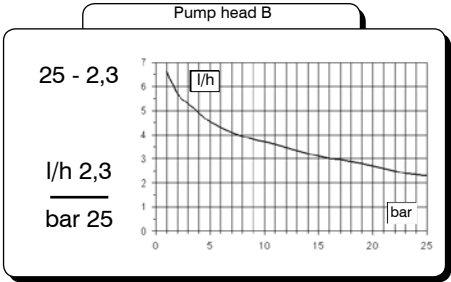

Flow rate indicated is for H<sub>2</sub>O at 20°C at the rated pressure. Dosing accuracy ± 2% at constant pressure ± 0,5 bar.



Dimensions

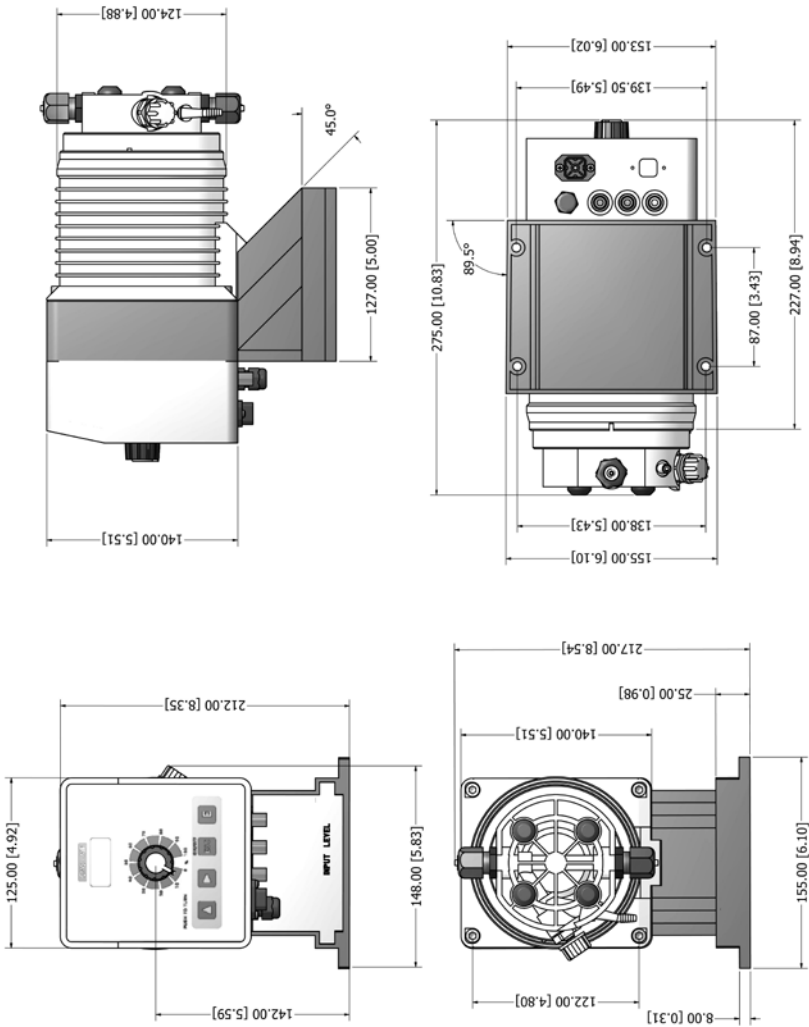

mm [inches]

## E Appendix. Chemical Compatibility Table

Solenoid driven metering pumps are widely used to dose chemical fluids and it is important that the most suitable material in contact with fluid is selected for each application. This compatibility table serves as a useful help in this respect. All the informations in this list are verified periodically and believed to be correct on the date of issuance. All the informations in this list are based on manufacturer's data and its own experience but since the resistance of any material depends by several factors this list is supplied only as an initial guide, in no way EMEC makes warranties of any matter respect to the informations provided in this list.

Chemical	Formula	Ceramic	PVDF	PP	PVC	SS 316	PMMA	Hastelloy	PTFE	FPM	EPDM	NBR	PE
Acetic Acid, Max 75%	CH <sub>3</sub> COOH	2	1	1	1	1	3	1	1	3	1	3	1
Aluminium Sulphate	Al <sub>2</sub> (SO <sub>4</sub> ) <sub>3</sub>	1	1	1	1	1	1	1	1	1	1	1	1
Amines	R-NH <sub>2</sub>	1	2	1	3	1	-	1	1	3	3	1	1
Calcium Hydroxide (Lime Milk)(Slaked Lime)	Ca(OH) <sub>2</sub>	1	1	1	1	1	1	1	1	1	1	1	1
Calcium Hypochlorite (Chlorinated Lime)	Ca(OCl) <sub>2</sub>	1	1	1	1	3	1	1	1	1	1	3	1
Copper-II-Sulphate (Roman Vitriol)	CuSO <sub>4</sub>	1	1	1	1	1	1	1	1	1	1	1	1
Ferric Chloride	FeCl <sub>3</sub>	1	1	1	1	3	1	1	1	1	1	1	1
Hydrofluoric Acid 40%	HF	3	1	1	2	3	3	2	1	1	3	3	1
Hydrochloric Acid, Concentrate	HCl	1	1	1	1	3	1	1	1	1	3	3	1
Hydrogen Peroxide, 30% (Perydrol)	H <sub>2</sub> O <sub>2</sub>	1	1	1	1	1	1	1	1	1	2	3	1
Nitric Acid, 65%	HNO <sub>3</sub>	1	1	2	3	2	3	1	1	1	3	3	2
Phosphoric Acid, 50% (Orthophosphoric Acid)	H <sub>3</sub> PO <sub>4</sub>	1	1	1	1	2	1	1	1	1	1	3	1
Potassium Permanganate, 10%	KMnO <sub>4</sub>	1	1	1	1	1	1	1	1	1	1	3	1
Sodium Bisulphite	NaHSO <sub>3</sub>	1	1	1	1	2	1	1	1	1	1	1	1
Sodium Carbonate (Soda)	Na <sub>2</sub> CO <sub>3</sub>	2	1	1	1	1	1	1	1	2	1	1	1
Sodium Hydroxide (Caustic Soda)	NaOH	2	1	1	1	1	1	1	1	2	1	2	1
Sodium Hypochlorite, 12.5%	NaOCl + NaCl	1	1	2	1	3	1	1	1	1	1	2	1
Sulphuric Acid, 85%	H <sub>2</sub> SO <sub>4</sub>	1	1	1	1	2	3	1	1	1	3	3	1
Sulphuric Acid, 98.5%	H <sub>2</sub> SO <sub>4</sub>	1	1	3	3	3	3	1	1	1	3	3	3

### Resistance rating

Resistant	1
Fairly resistant	2
Not resistant	3

### Materials

Pump Heads, valves, fitting, tubing  
PP  
PVC  
Stainless steel  
Polymethyl Metacrilate (Acrylic)  
Hastelloy C-276  
Polytetrafluoroethylene  
Fluorocarbon (Viton® B)  
Ethylene propylene  
Nitrile  
Polyethylene

Polyvinylidene fluoride    PVDF  
Polypropylene  
Pump Heads, valves, fitting, level floater  
PVC  
SS 316  
PMMA  
Hastelloy  
PTFE  
FPM  
EPDM  
NBR  
PE  
Injection valve spring  
Diaphragm  
Sealings  
Sealings  
Sealings  
Tubing


## F Appendix. Hoses resistance table

Hose features are very important for a reliable dosage. Every pump's model is made to work in the best way using selected hoses according to pump's capacity / model. Information reported here are intended for standard use only. For extended information ask to hose's manufacturer.


<u>Suction / Delivery Hose</u>			
4x6 mm PVC (transparent)	4x8 mm PE (opaque)	6x8 mm PE (opaque)	8x12 mm PVC (transparent)

<u>Delivery Hose</u>	<u>Working Pressure</u>				<u>Breaking Pressure</u>			
4x6 mm PE 230 (opaque)	20°C 12 bar	30°C 10.5 bar	40°C 8.5 bar	50°C 6.2 bar	20°C 36 bar	30°C 31.5 bar	40°C 25.5 bar	50°C 18.5 bar
4x8 mm PE 230 (opaque)	20°C 19 bar	30°C 15.7 bar	40°C 12 bar	50°C 7.5 bar	20°C 57 bar	30°C 47 bar	40°C 36 bar	50°C 22.5 bar
6x8 mm PE 230 (opaque)	20°C 8.6 bar	30°C 6.8 bar	40°C 4.8 bar	50°C 2.3 bar	20°C 26 bar	30°C 20.5 bar	40°C 14.5 bar	50°C 7 bar
8x12 mm PE 230 (opaque)	20°C 12 bar	30°C 10.5 bar	40°C 8.5 bar	50°C 6.2 bar	20°C 36 bar	30°C 31.5 bar	40°C 25.5 bar	50°C 18.5 bar
4x6 mm PVDF Flex 2800 (opaque)	20°C 40 bar	30°C 34 bar	40°C 30 bar	50°C 27 bar	60°C 24.8 bar	80°C 20 bar	90°C 10 bar	
6x8 mm PVDF Flex 2800 (opaque)	20°C 29 bar	30°C 25.5 bar	40°C 22 bar	50°C 20 bar	60°C 18 bar	80°C 14.5 bar	90°C 7.3 bar	
8X10 mm PVDF Flex 2800 (opaque)	20°C 18 bar	30°C 15.5 bar	40°C 13.5 bar	50°C 12.5 bar	60°C 11.2 bar	80°C 9 bar	90°C 4.5 bar	
1/4 PE 230 (opaque)	20°C 17.6 bar							
3/8 PE 230 (opaque)	20°C 10.6 bar							
1/2 PE 230 (opaque)	20°C 10.6 bar							


G Appendix. Installation draw for CMS CO

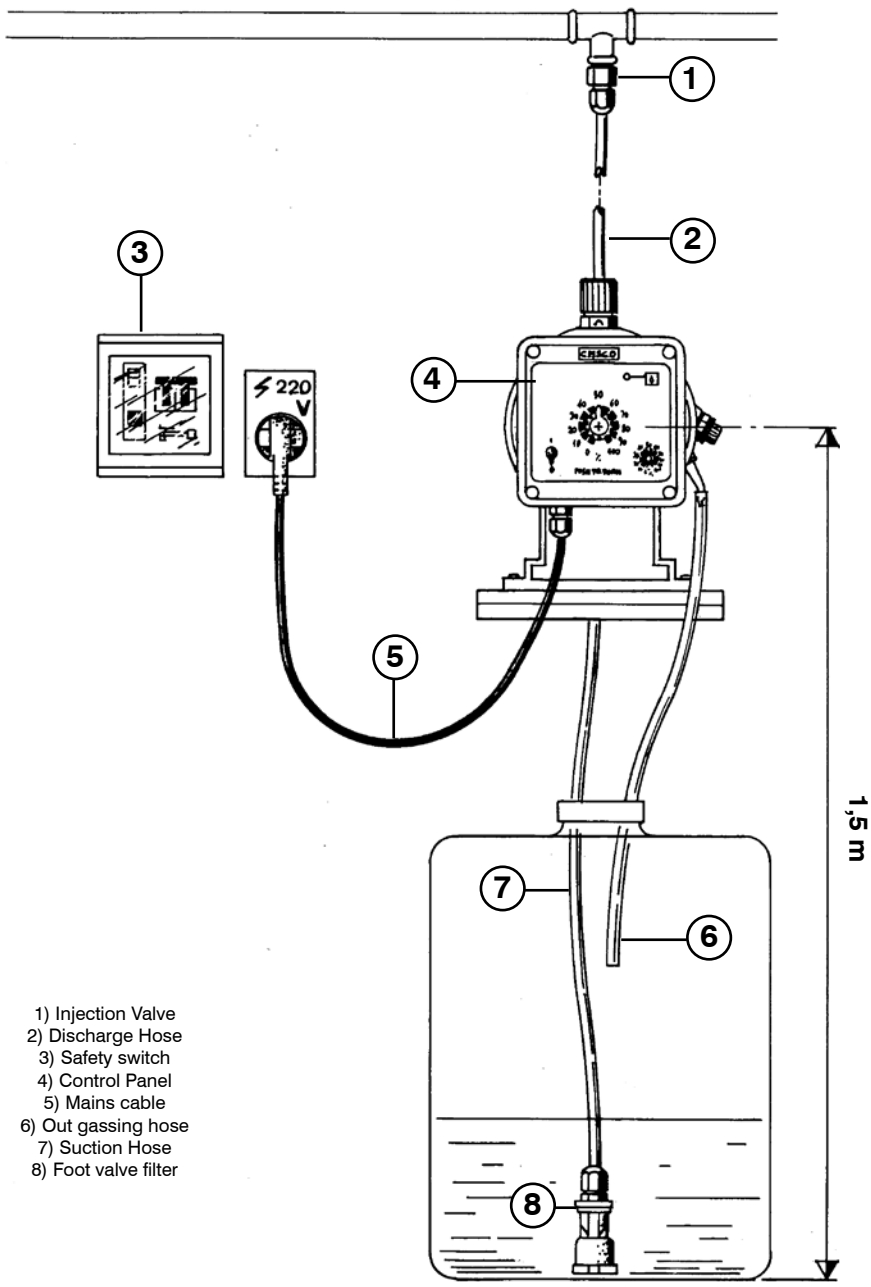



## G Appendix. Installation draw for CMS CL

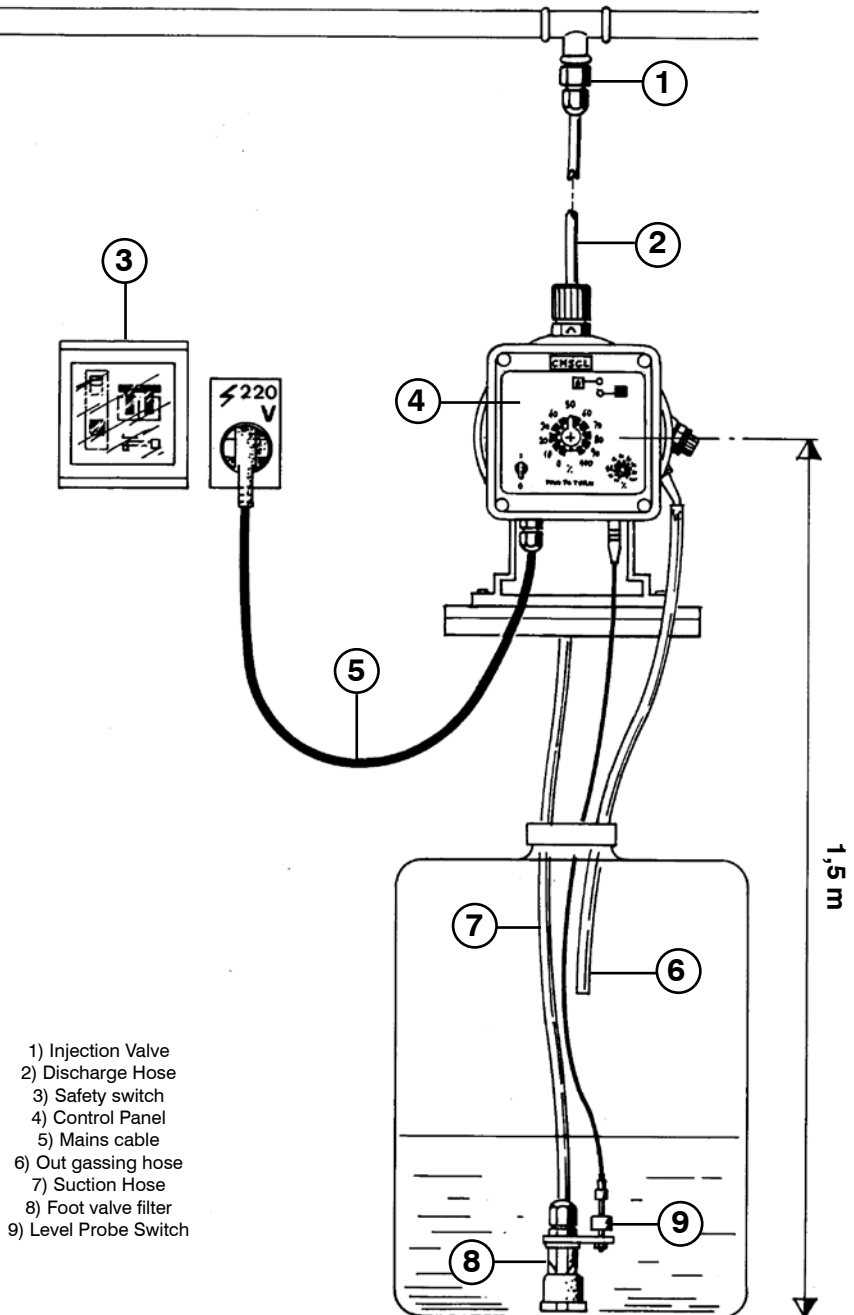

## G Appendix. Installation draw for CMS IS

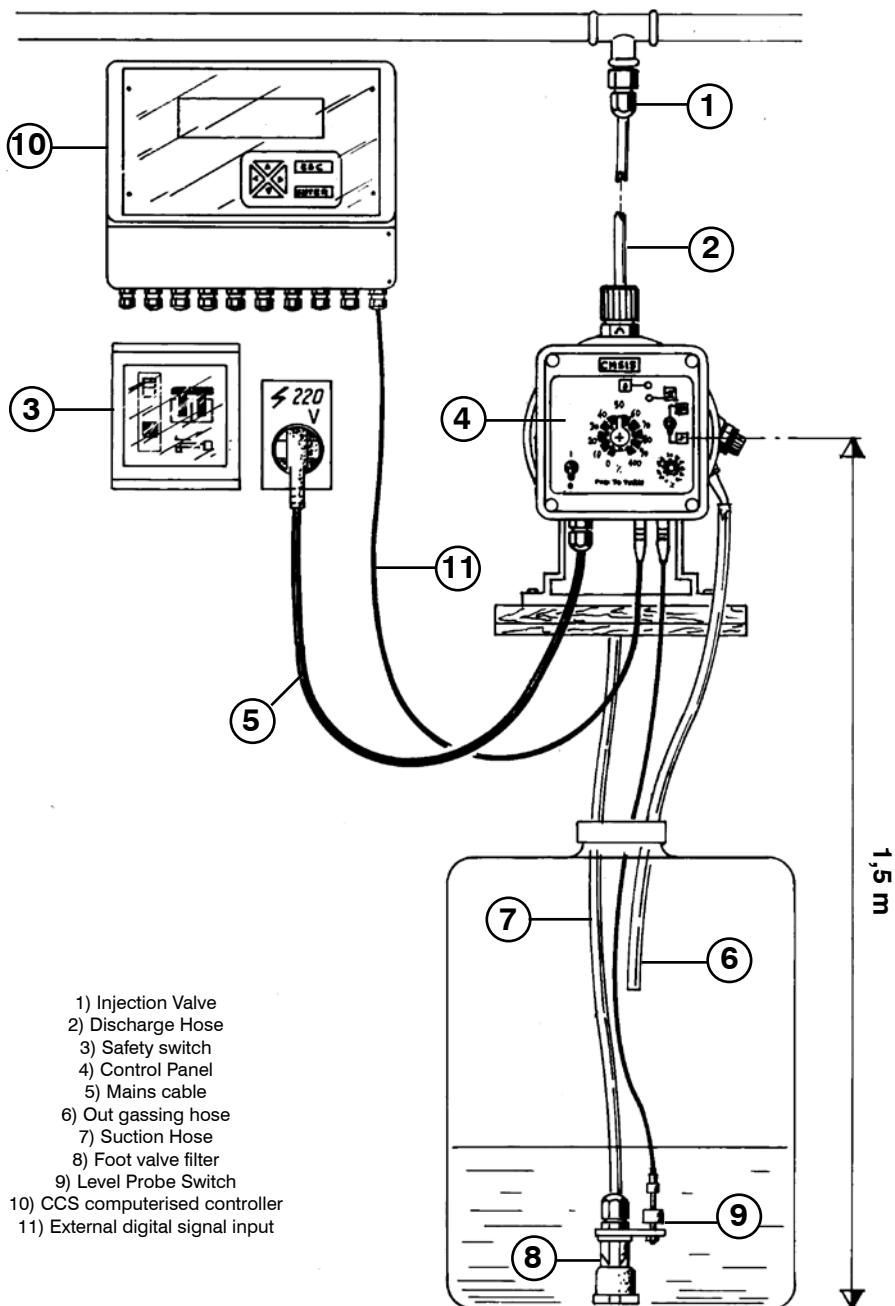

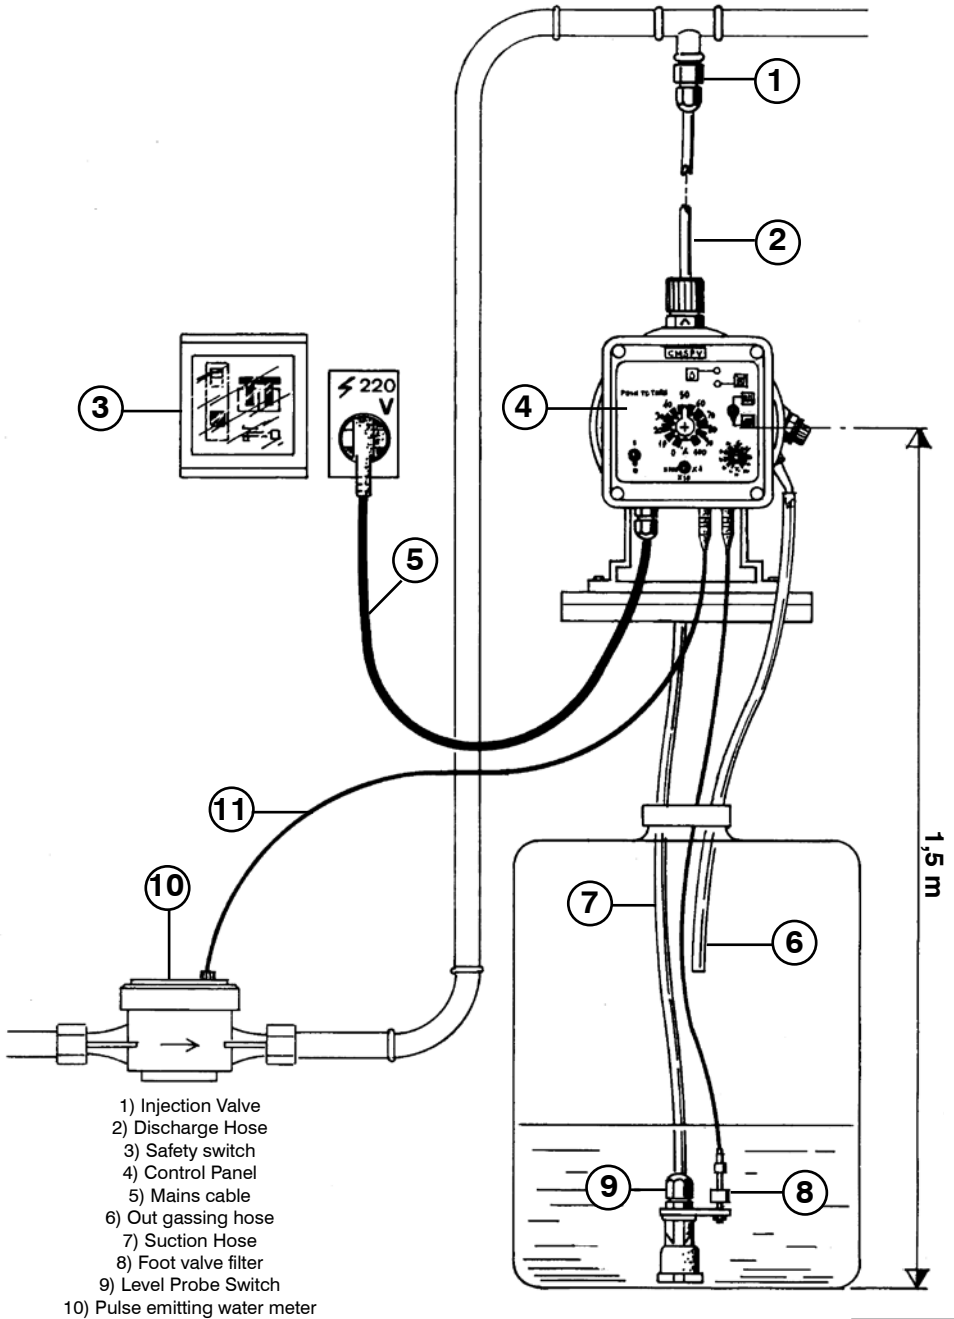

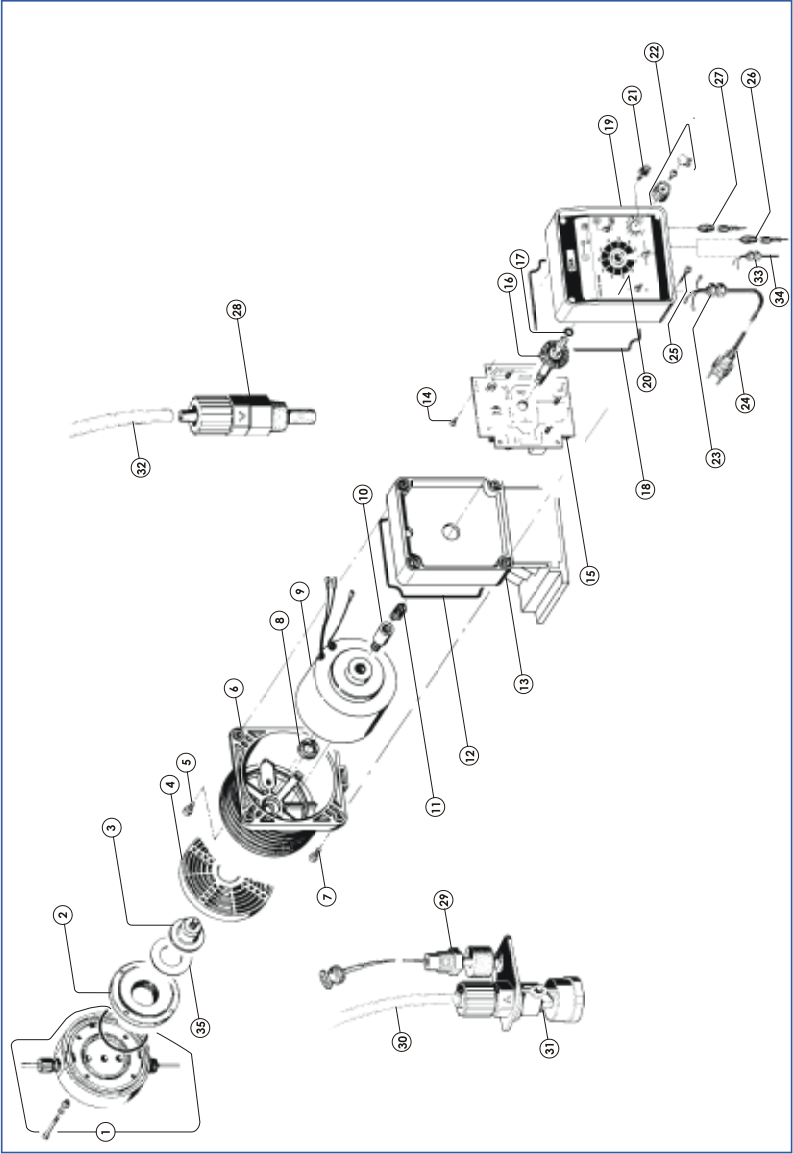

**NOTICE:** always specify the pump's label when ordering spare parts.




---

---



# Index

1. Introduction .....	3
2. Unpacking .....	4
3. Pump's description .....	5
4. Before to Install warnings .....	6
5. Installation Draw .....	7
6. Hydraulic Installation .....	8
7. Electrical Installation .....	12
8. Models .....	14
9. Priming .....	17
10. Troubleshooting .....	18
11. Fuse and main board replacement .....	19
12. Main Board .....	20
A Appendix. Maintenance .....	21
B Appendix. Construction Materials and Technical info .....	22
C Appendix. Delivery Curves .....	23
C Appendix. Delivery Curves for self-purge pump head .....	24
D Appendix. Dimensions .....	25
E Appendix. Chemical Compatibility Table .....	26
F Appendix. Hoses resistance table .....	27
G Appendix. Installation draw for CMS CO .....	28
G Appendix. Installation draw for CMS CL .....	29
G Appendix. Installation draw for CMS IS .....	30
G Appendix. Installation draw for CMS PV .....	31
H Appendix. Exploded view .....	32
I Appendix. Index .....	35

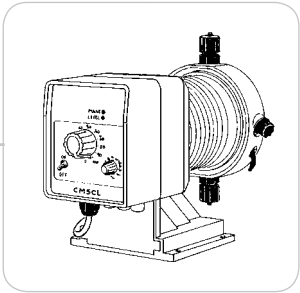

*When dismantling a pump please separate material types and send them according to local recycling disposal requirements.  
We appreciate your efforts in supporting your local Recycle Environmental Program.  
Working together we will form an active union to assure the world's invaluable resources are conserved.*