

ECD IND PT - ECDS IND PT - ECDS IND C - ECDS IND



ECD IND PT



ECDS IND PT
ECDS IND C
ECDS IND

INDUCTIVE CONDUCTIVITY PROBES

EN

OPERATING MANUAL



This operating instructions contains safety information that if ignored can endanger life or result in serious injury.

Read these instructions **carefully** before use and keep them for future reference.

Information and specifications on this manual could be uncorrect or could have printing errors. Specifications are subject to change without notice.

Version: R1-10-14



NORME CE
EC RULES (STANDARD EC)
NORMAS DE LA CE

Direttiva Basso Voltaggio
Low Voltage Directive
Directiva de baja tensión

} **2006/95/CE**

Direttiva EMC Compatibilità Elettromagnetica
EMC electromagnetic compatibility directive
EMC directiva de compatibilidad electromagnética

} **2004/108/CE**

GENERAL SAFETY GUIDELINES

Operating, installing, or maintaining the unit in any way that is not covered in this manual could cause death, serious personal injury, or damage to the equipment.

ICON

This manual use the following safety message icon:



Danger!

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



Warning!

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



Important - A practice not related to personal injury or additional information.



Cross reference - An instance which refers to related information elsewhere in the same document

PURPOSE OF USE AND SAFETY

EQUIPMENT INTENDED FOR THE MEASUREMENT OF CONDUCTIVITY IN WATER.

Do not use in explosive area (EX).
Do not use with flammable chemicals.
Do not use with radioactive chemicals.

Use the probe in accordance with the data and specifications printed on the label.

Do not modify or use in a manner inconsistent with the provisions of the operating manual.



When using this product with aggressive chemicals observe the regulations concerning the transport and storage of aggressive fluids.



When installing always observe national regulations.



Manufacturer is not liable for any unauthorized use or misuse of this product that may cause injury, damage to persons or materials.



Probes must be serviced and repaired by qualified and authorized personnel only.



Before any operation:

- always read chemical Material Safety Data Sheet (MSDS);
- always wear protective clothing;
- empty and rinse the liquid end before work on a the product which has been used with hazardous or unknown chemicals.



Avoid grinding / shock / falls / friction.

Environmental safety


Work area
Always keep the area clean to avoid and/or discover emissions.

Recycling guidelines
Always recycle according to these guidelines:
1. If the unit or parts are accepted by an authorized recycling company, then follow local recycling laws and regulations.
2. If the unit or parts are not accepted by an authorized recycling company, then return them to the nearest representative.


Waste and emissions regulations
Observe these safety regulations regarding waste and emissions:

- Dispose appropriately of all waste.
- Handle and dispose of the dosed chemical in compliance with applicable environmental regulations.
- Clean up all spills in accordance with safety and environmental procedures.
- Report all environmental emissions to the appropriate authorities.

LABEL

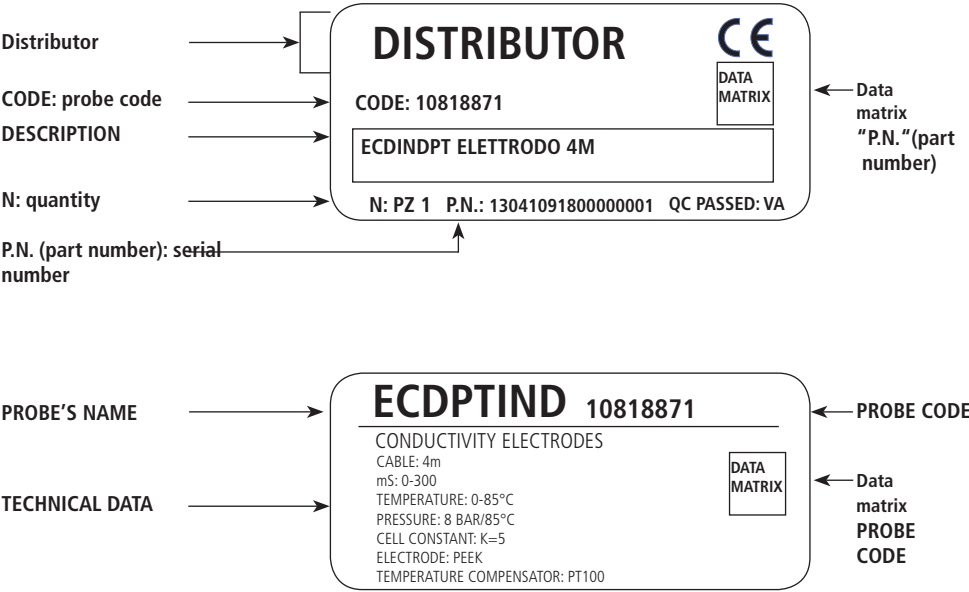


Spare parts
For spare parts orders or any other communication, refer to the pump's label.
Code (CODE) and serial number (P / N) uniquely identify the probe.


 A not suitable transportation or storage can cause damages.

Use original box to pack the probe.

Observe storage conditions also for transportation.

Although packed, always protect the unit against humidity and the action of chemicals.

 Before return the probe to the manufacturer Repair service, clean and rinse it.

 DO NOT TRASH PACKAGING. USE IT TO RETURN THE PROBE.


Transportation and storage temperature $10 \div 50^{\circ}\text{C}$ ($32 \div 122^{\circ}\text{F}$)
Umidity..... 95% relative humidity (not condensed)

INTRODUCTION

ECDIND PT

Conductivity measure throughout inductive sensor.
The inductive sensor design eliminates polarization errors and electrode coating problems that commonly affect conventional conductivity contacting-electrode models.

Fig. 1. ECDIND PT PROBE



Technical features

- Range: 0.3-3 mS;
- 0.3-30 mS;
- 0.3-300 mS
- Analysys system: inductive
- Temperature:..... 0-85° C (32-185°F); 100°C (212°F) in spot measurements
- Transportation and storage temp:..... 10-50°C (32-122°F)
- Max pressure: 8 bar (116 PSI)
- Cable/connector: G1 and NPT 3/4"
- Cable length: standard 4 m; max 10 m
- Material: PEEK
- Temperature sensor: PT100
- Protection IP68
- Probe holder: PEL-IND; PEL INDC; PEL IND SS; NPED-IND; PEC IND

Connection cable


- BLUE-BLACK-GREY-RED:..... probe
- GREEN-PINK-WHITE-YELLOW:..... temperature compensator

ECDSIND PT
ECDSIND C
ECDSIND

Conductivity measure throughout inductive sensor.
The inductive sensor design eliminates polarization errors and electrode coating problems that commonly affect conventional conductivity contacting-electrode models.

ECDSIND PT: PT100 compensation
ECDSIND C: NTC 10k compensation
ECDSIND: not compensated

Fig. 2. ECSDIND PT PROBE



Technical
features

Range: 0.3-10 mS;
Analysys system: inductive
Temperature:..... 0-85° C (32-185°F); 100°C (212°F) in spot measurements
Transportation and storage temp.:..... 10-50°C (32-122°F)
Max pressure: 8 bar (116 PSI)
Cable/connector: G1 AND NPT ¾"
Cable length: standard 4 m; max 10 m
Material: PEEK
Temperature sensor: PT100 (ECDSIND PT);
..... NTC 10K (ECDSIND C);
..... not compensated (ECDSIND)
Protection IP68
Probe holder: NPED-INDS; NPED4-INDS

Connection cable

BLUE-RED-GREEN:probe
WHITE-BLACK (not present in mod. ECDSIND):temperature compensator


Operating principle

Inductive conductivity sensor induces a low current in a closed loop of solution, then measures the magnitude of this current to determine the solution's conductivity.

The conductivity probe drives Toroid A, inducing an alternating current in the solution. This current signal flows in a closed loop through the sensor bore and surrounding solution.


Toroid B senses the magnitude of the induced current which is proportional to the conductance of the solution.

Fig. 3. Operating principle scheme

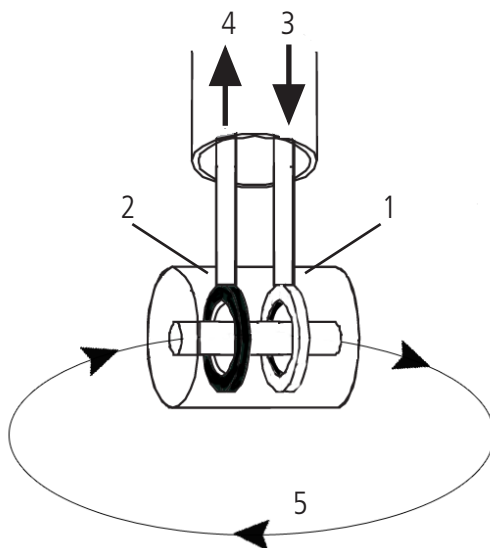


- 1 - Toroid A
- 2 - Toroid B
- 3 - Alternate current generator
- 4 - Receiver
- 5 - Induced current in the solution


**Installation in a
PEL-IND / PEL-
INDC**

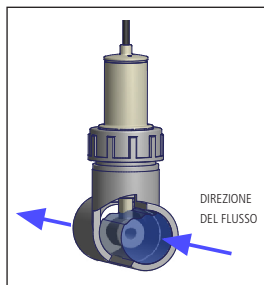


- Install the probe into probe holder in such a way process flow is directed through the hole.

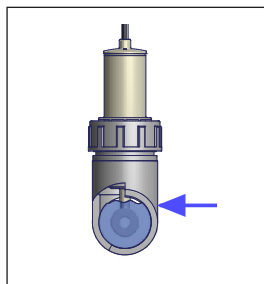

- The inductive conductivity measurement technique requires a process fluid surrounding the sensor. completely.

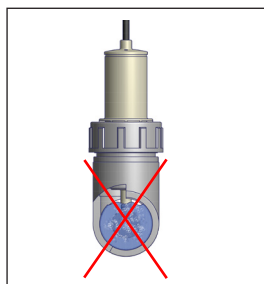


- Avoid air bubbles around the sensor.

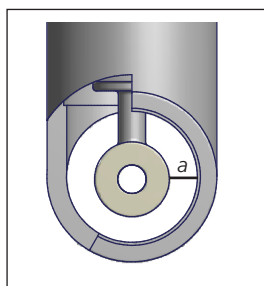

- Clearance
Verify the distance between interior pipe wall and sensor is at least 10 mm ($a > 10$ mm).
Smaller distances may affect probe reading.

Installation in a
PEL-IND


- Install the probe into probe holder as showed in the picture.

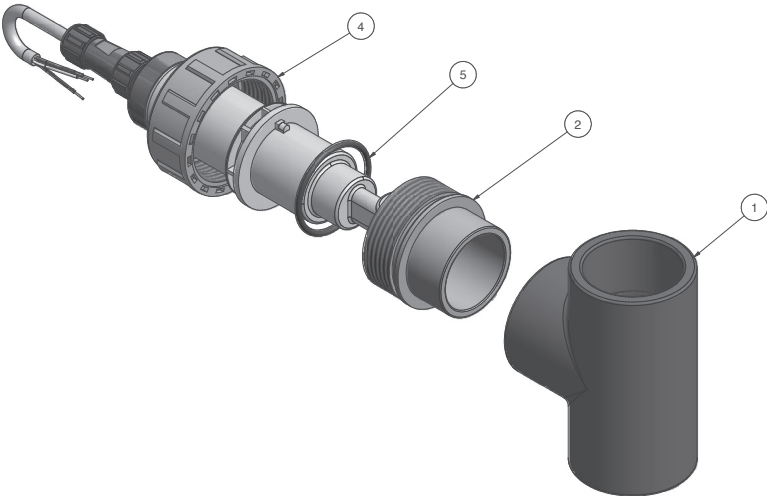

Elenco parti			
ELEM	QTA	NUMERO PARTE	DESCRIZIONE
1	1	021.0104.0	TIV040 PVC
2	1	021.1093.0	Supporto sonda PVC
4	1	022.0007.0	Ghiera 1" 1/2
5	1	026.0009.0	OR 2-127


**Installation in a
NPED-IND**

- Install the probe into probe holder as showed in the picture.

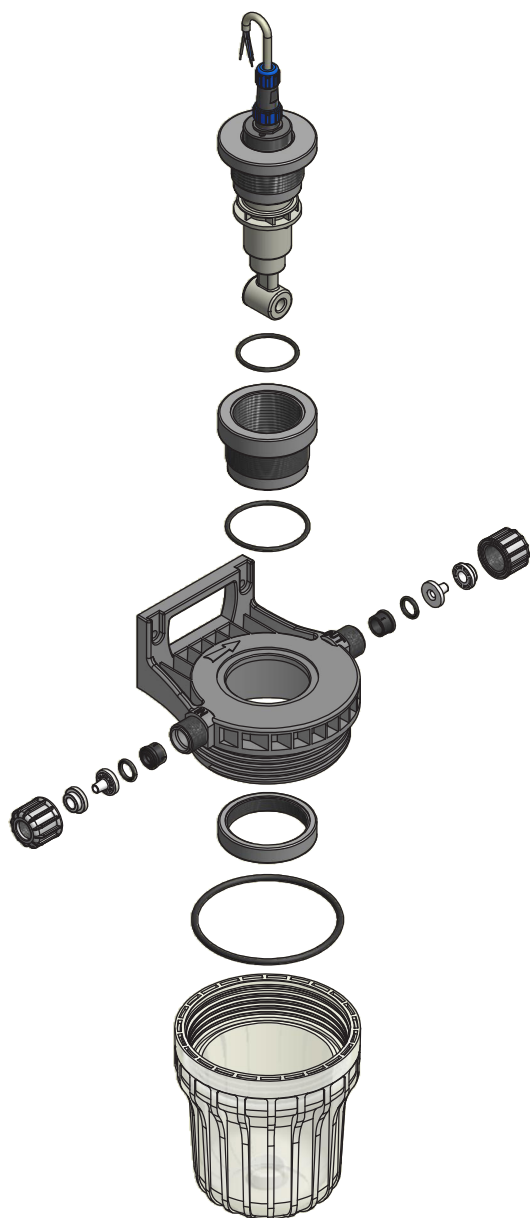

**Installation in a
PEC-IND**

- Install the probe into probe holder as showed in the picture.



Calibration

Calibrate the probe monthly or more if the application need higher precision.

The sensor need to be calibrated to the instrument it is connected to.

Two points calibration: 0 and a value close to working point.

For better results:

- connect the probe to the instrument;
- calibrate at plant temperature.

0 Calibration

Wash and rinse the probe. Calibrate in air.

2nd point calibration


Use a buffer solution with a value close to working point. Completely dip the probe into the buffer solution.

CAUTION: Make sure that no bubbles are inside the cavity of the probe.

Perform calibration according to the procedure described in the instrument manual.

MAINTENANCE

Maintenance schedule

 In order to ensure the requirements of potable drinking water treated and the maintenance of the improvements as declared by the manufacturer, this equipment must be checked at least once a month.

OPERATOR PROTECTION


Use safety equipment according to the company regulations.

Use this safety equipment within the work area during installation, service and when handling chemicals:

- protective mask
- protective gloves
- safety goggles
- ear plugs or hear muffs
- further security device, if necessary.

POWER SUPPLY DISCONNECTION

Always disconnect power to the motor before you perform any installation or maintenance tasks. Failure to disconnect power will result in serious physical injury.

 Installation and maintenance tasks should be carried out by **AUTHORIZED AND QUALIFIED PERSONNEL** only in accordance with local regulations.

 Use original spare parts.

Maintenance inspection

A routine maintenance includes a three-month inspections:

Shorten the inspection intervals appropriately if the chemical is abrasive or corrosive.

Routine maintenance and inspections

Perform these tasks whenever you perform routine maintenance:

- Check probe integrity
- Check electrical wiring.
- Check for corrosion on parts of the probe

Fig. 4. ECDIND PT (mm)


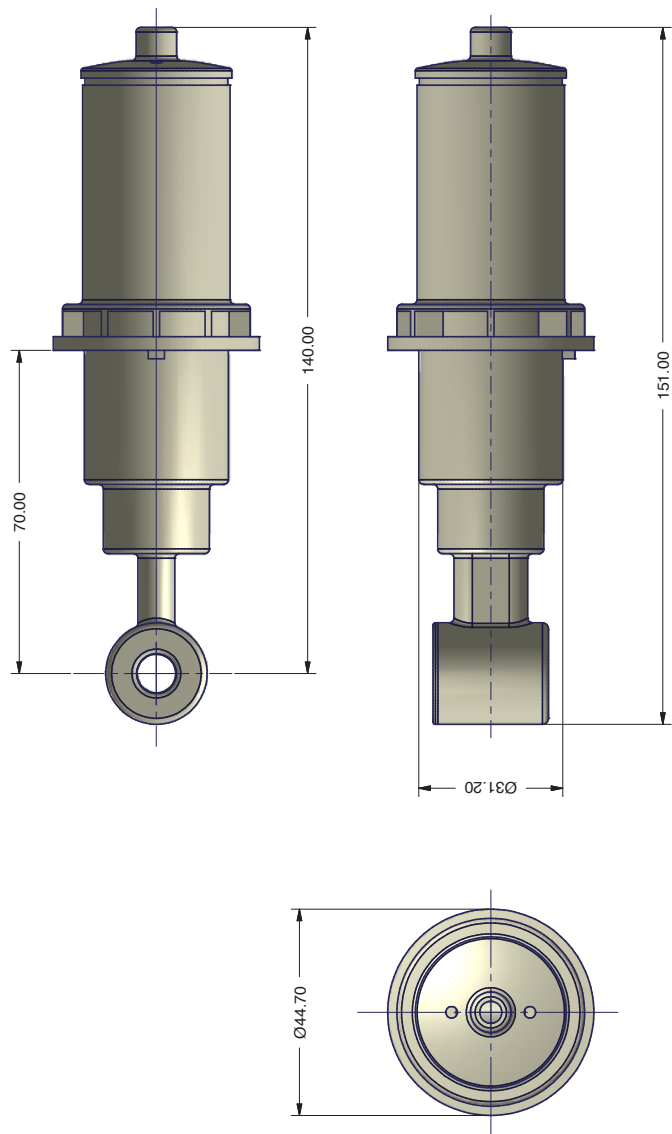


Fig. 5. ECDSIND PT - ECDSINDC - ECDSIND (mm)

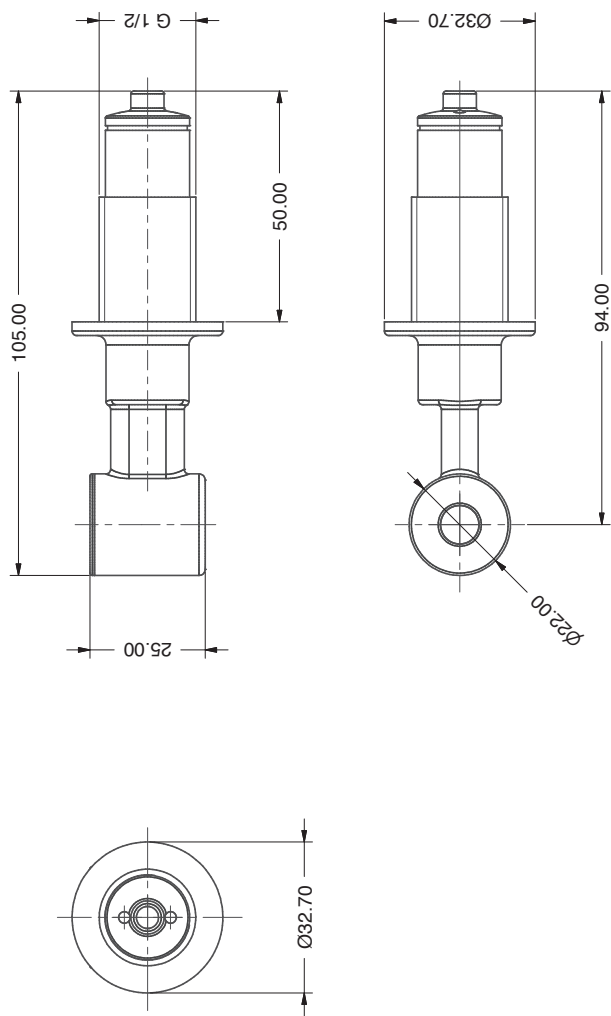

PRODUCT SERVICE REPAIR FORM

ENCLOSE THE PRESENT FORM TO THE DELIVERY NOTE

DATE

SENDER

Company name.....
Address,
Phone no.
Contact person.....

PRODUCT TYPE (see product label)

DEVICE CODE
S/N (serial number).....

OPERATING CONDITIONS

Location/installation description
.....
Chemical
Start-up (date) Running time (approx. hours).....

REMOVE ALL THE LIQUID AND DRY IT BEFORE PACKAGING IN ITS ORIGINAL BOX.

DESCRIPTION OF PROBLEM

- ☐ MECHANICAL
Wear parts.....
Brekage/other damages
Corrosion.....
Other
- ☐ ELECTRICAL
Connections, connector, cables
Other
- ☐ NOT OR INADEQUATE FUNCTION/OTHER
.....
.....
.....

I declare that the product is free of any hazardous chemical.

Signature of the compiler

Company stamp

SUMMARY

GENERAL SAFETY GUIDELINES2

PURPOSE OF USE AND SAFETY3

ENVIRONMENTAL SAFETY.....4

LABEL.....4

SPARE PARTS.....4

INTRODUCTION.....6

 ECDIND PT..... 6

 Technical features..... 6

 Connection cable 6

 ECDSIND PT..... 7

 ECDSIND C 7

 ECDSIND..... 7

 Technical features..... 7

 Connection cable 7

 ECDSIND PT: PT100 compensation..... 7

 ECDSIND C: NTC 10k compensation 7

 ECDSIND: not compensated..... 7

 Operating principle..... 8

 Installation in a PEL-IND / PEL-INDC 9

 Installation in a PEL-IND 10

 Installation in a NPED-IND 11

 Installation in a PEC-IND 12

 Calibration 13

MAINTENANCE14

 Maintenance schedule..... 14

 Maintenance inspection 14

 Dimensions 15

 Dimensions 16



Tutti i materiali utilizzati per la costruzione della pompa dosatrice e per questo manuale possono essere riciclati e favorire così il mantenimento delle incalcolabili risorse ambientali del nostro Pianeta. Non disperdere materiali dannosi nell'ambiente! Informati presso l'autorità competente sui programmi di riciclaggio per la tua zona d'appartenenza!